



**E L I S**

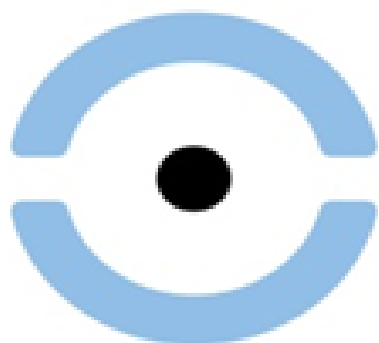

**d e s i g n**


*Návod na montáž*

*Domečková postel dominant se zábranou  
premium*

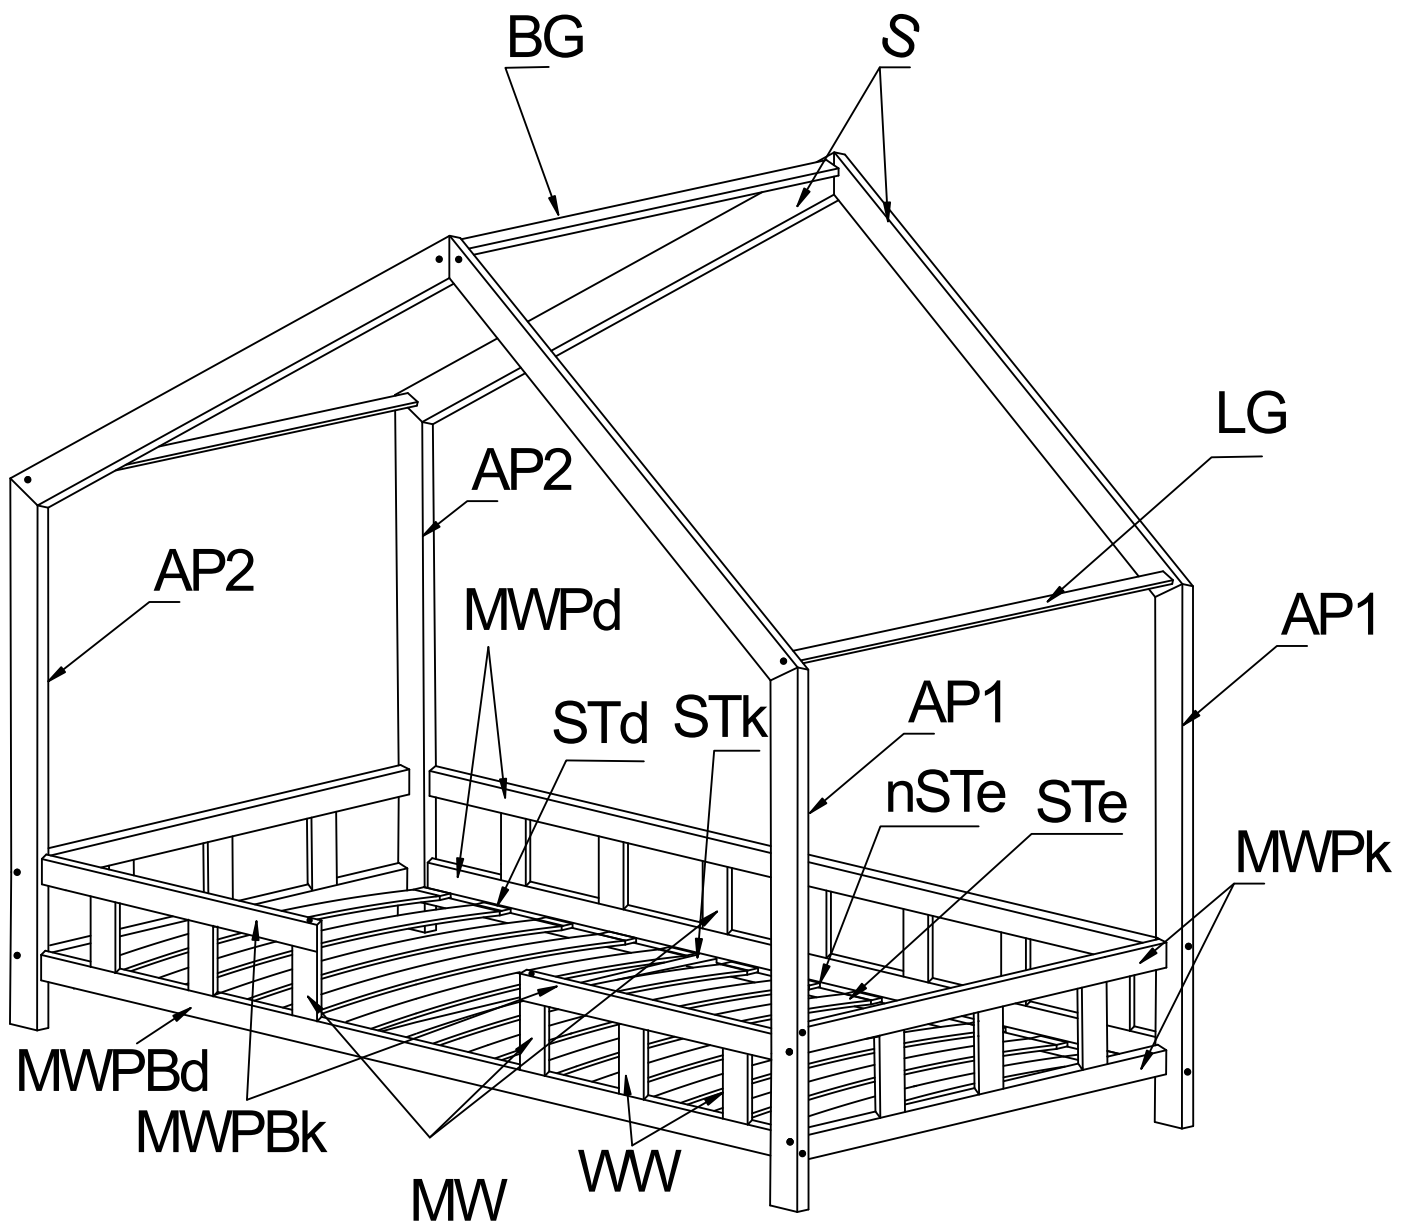

Noha AP1-2x  
 Noha AP2-2x  
 MWPk-4x  
 MWPd-2x  
 MWPBd-1x  
 MWPBk-2x  
 MW-3x  
 WW-16x  
 LG-2x


STd-2x  
 STk-1x  
 nSTe-16x  
 BG 45x45-1x  
 S-4x  
 STe-x1x

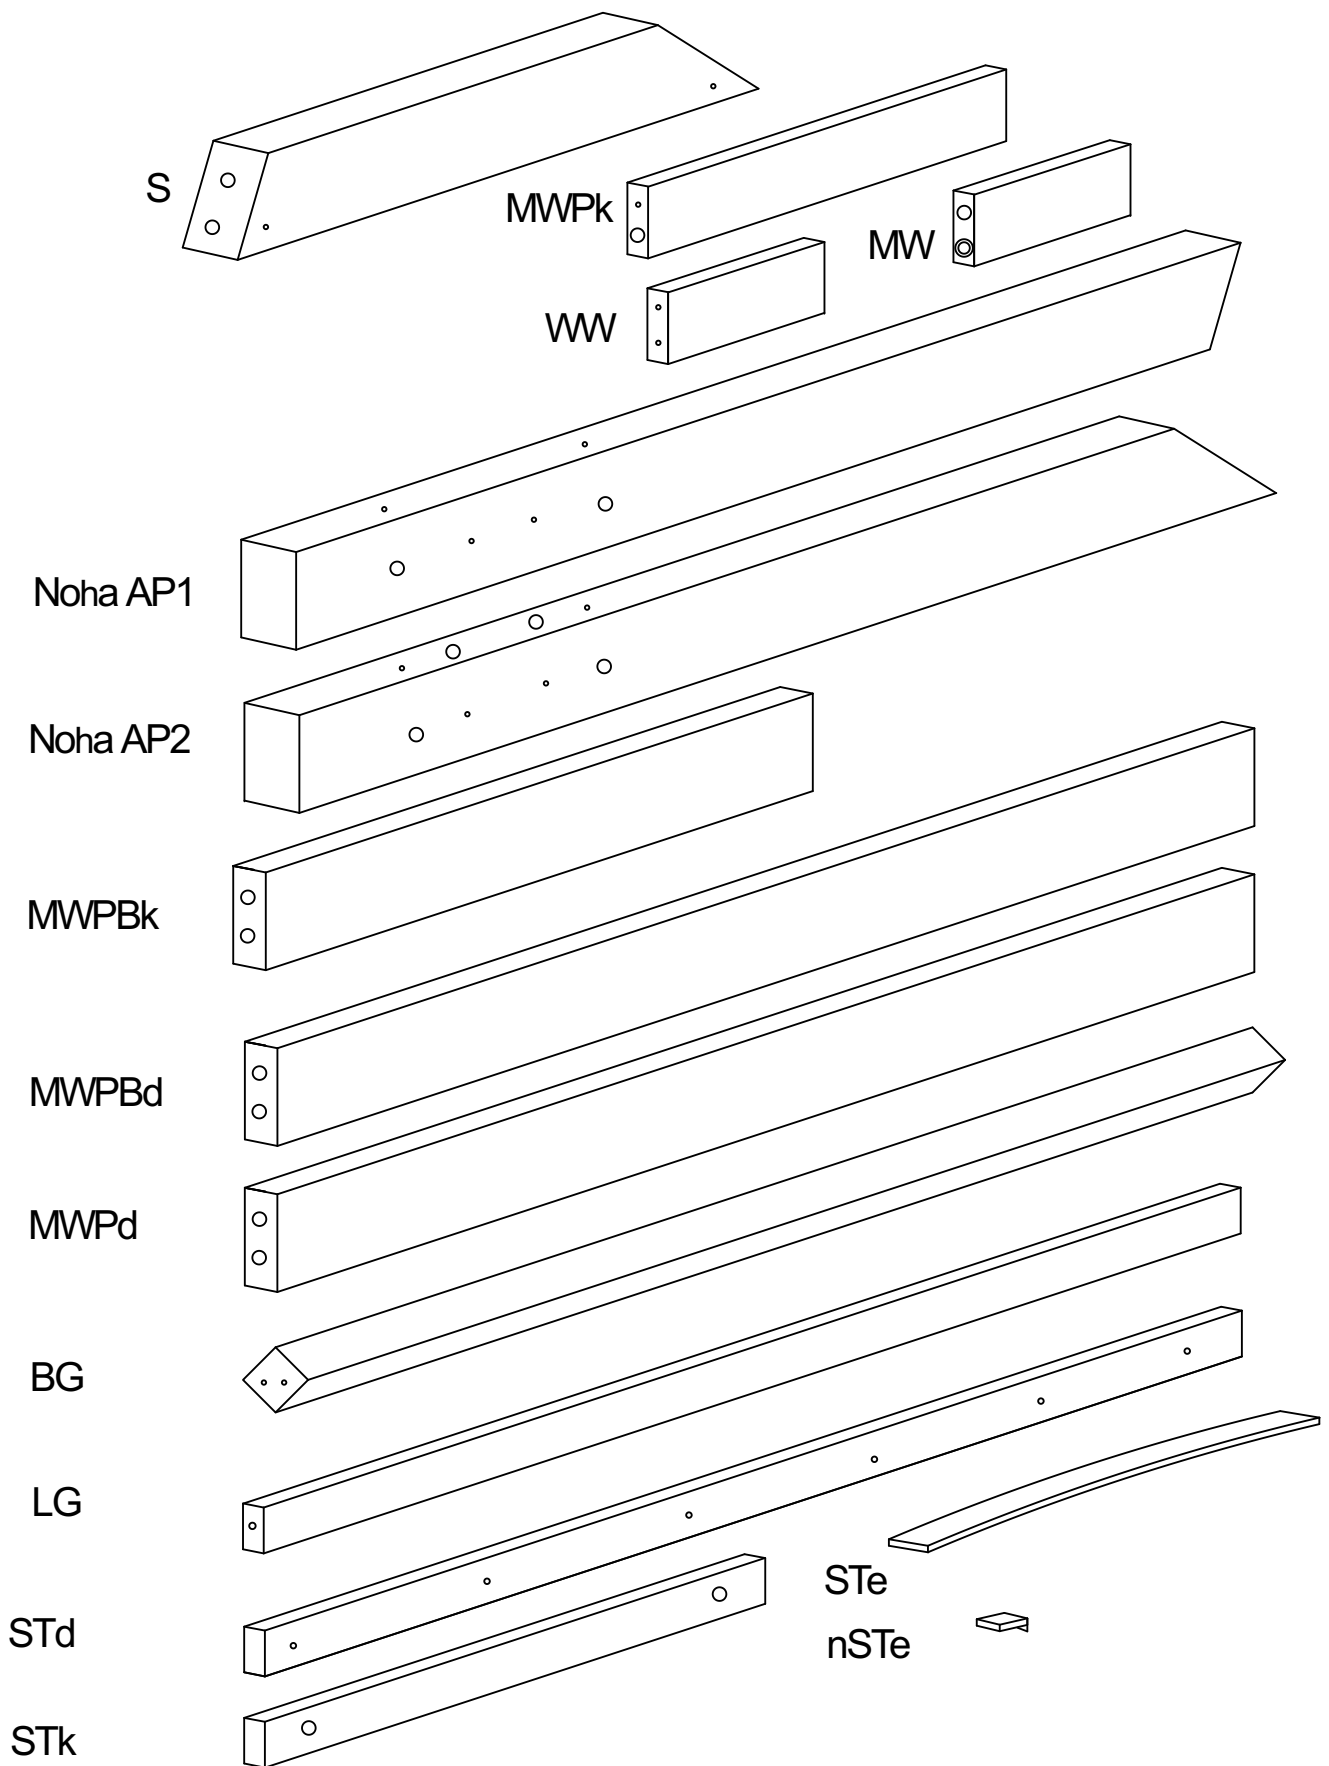


Šroub WDW4x100  
 Šroub WDW4x110  
 Šroub WRD35  
 Šroub WRD16

Lepidlo KL  
 Kolík KK  
 Imbusový klíč KLC



1



x2

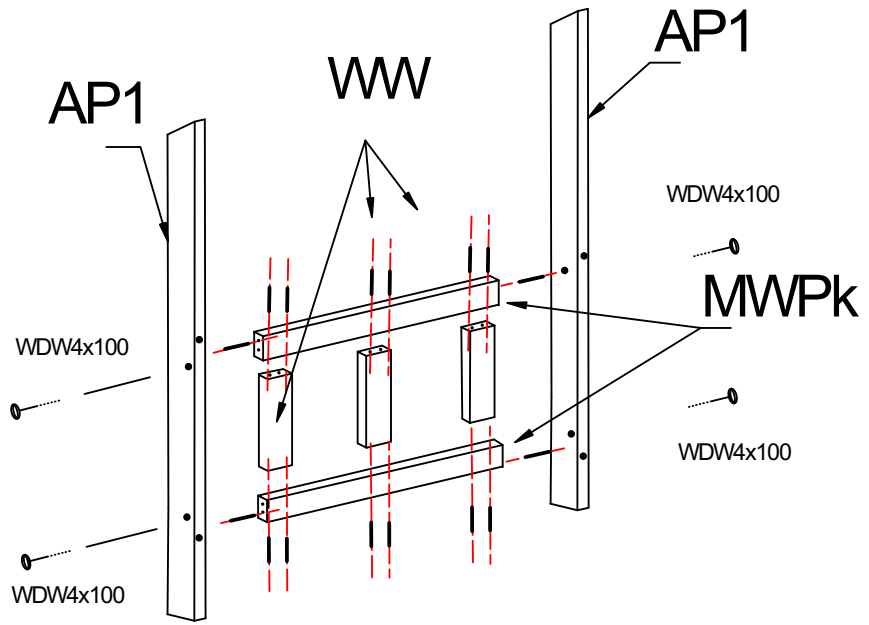

2

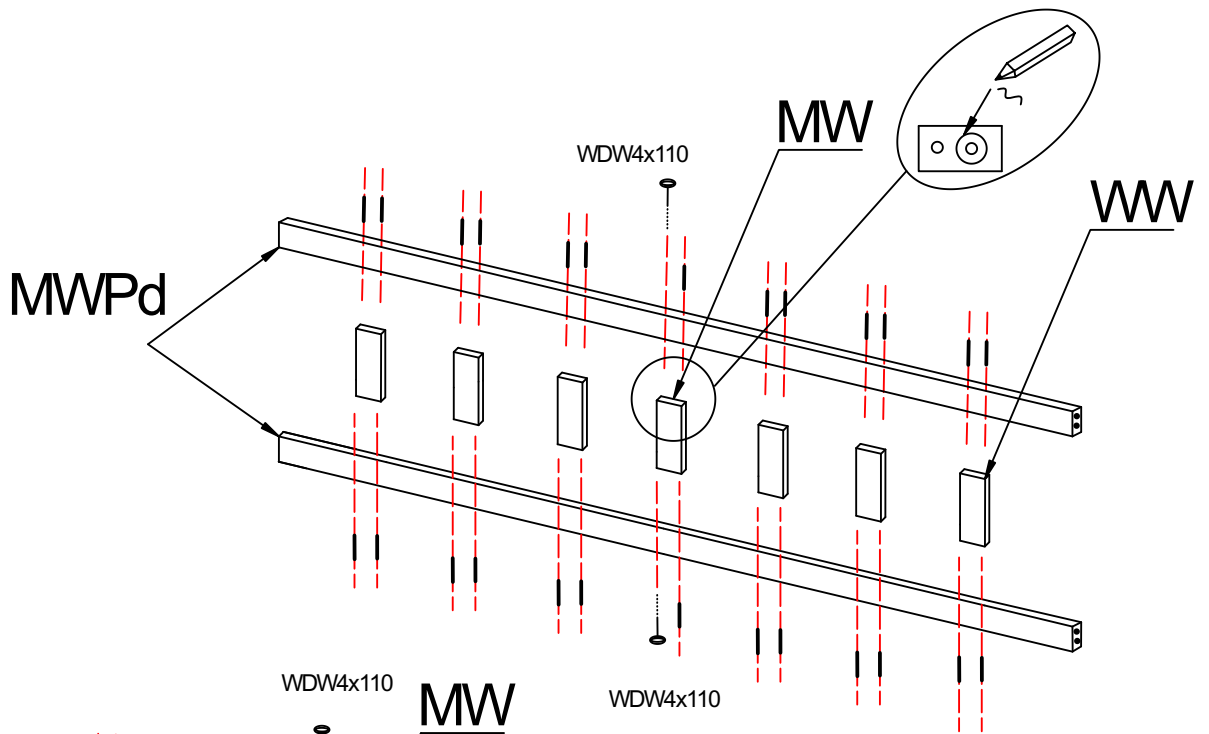

3

