


E L I S




design

Návod na montáž

Postel domeček s oválným výřezem Clasic

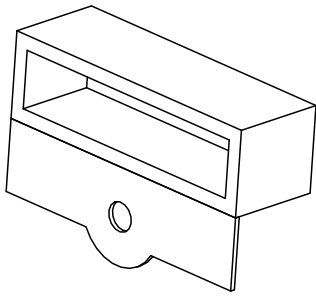


P

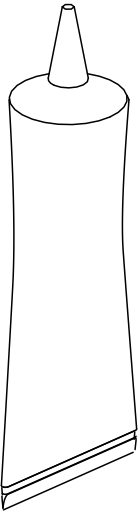

G

Lepidilo



K10

M10x4,5




W30

M4x30




W16

M4x16

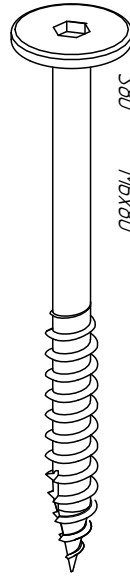


S80

M6x80

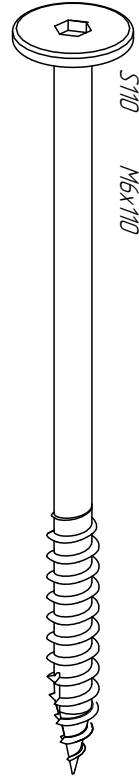

S110

M6x110

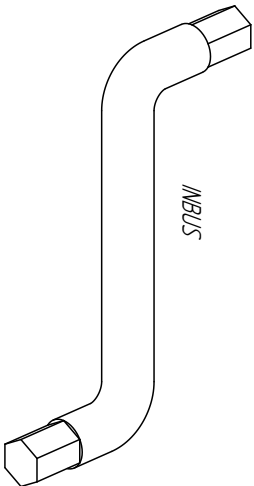

INBUS

S110 - x8

S80 - x12

W30 - x14

W16 - x32

P - x32

K10 - x28

G - x3

INBUS - x1

Postel domeček s oválným výřezem classic


60x120 70x140 70x160


80x140 80x160 80x180

80x190 80x200

90x140 90x160 90x180

90x190 90x200

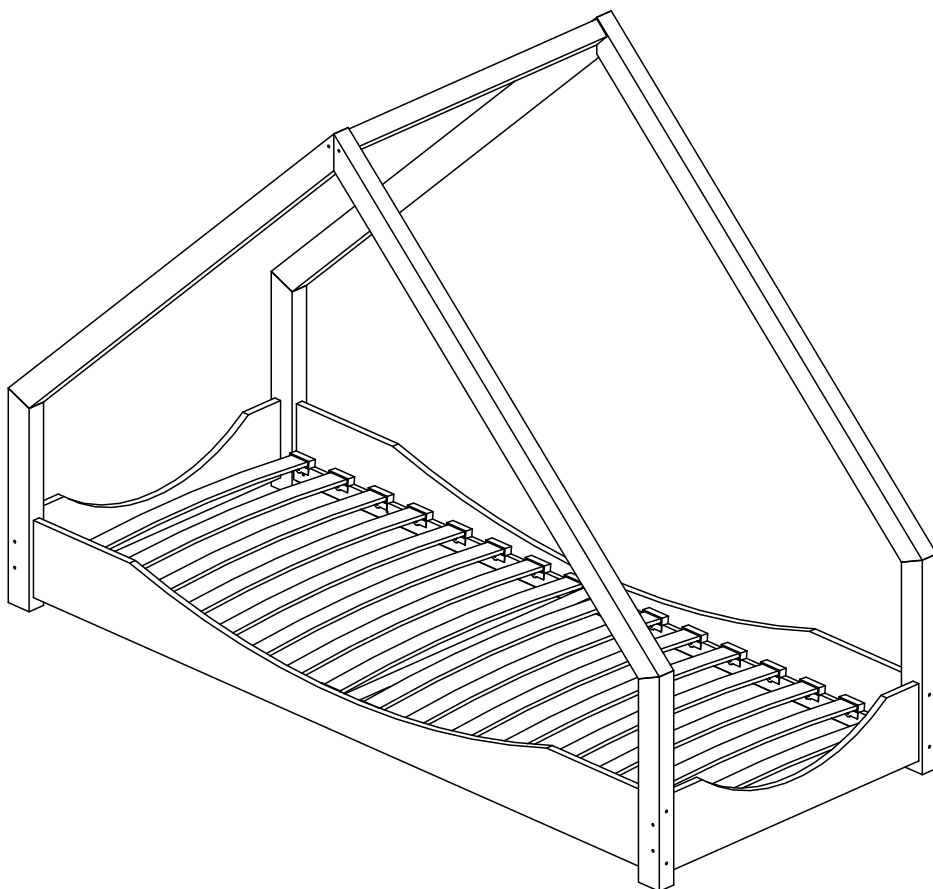

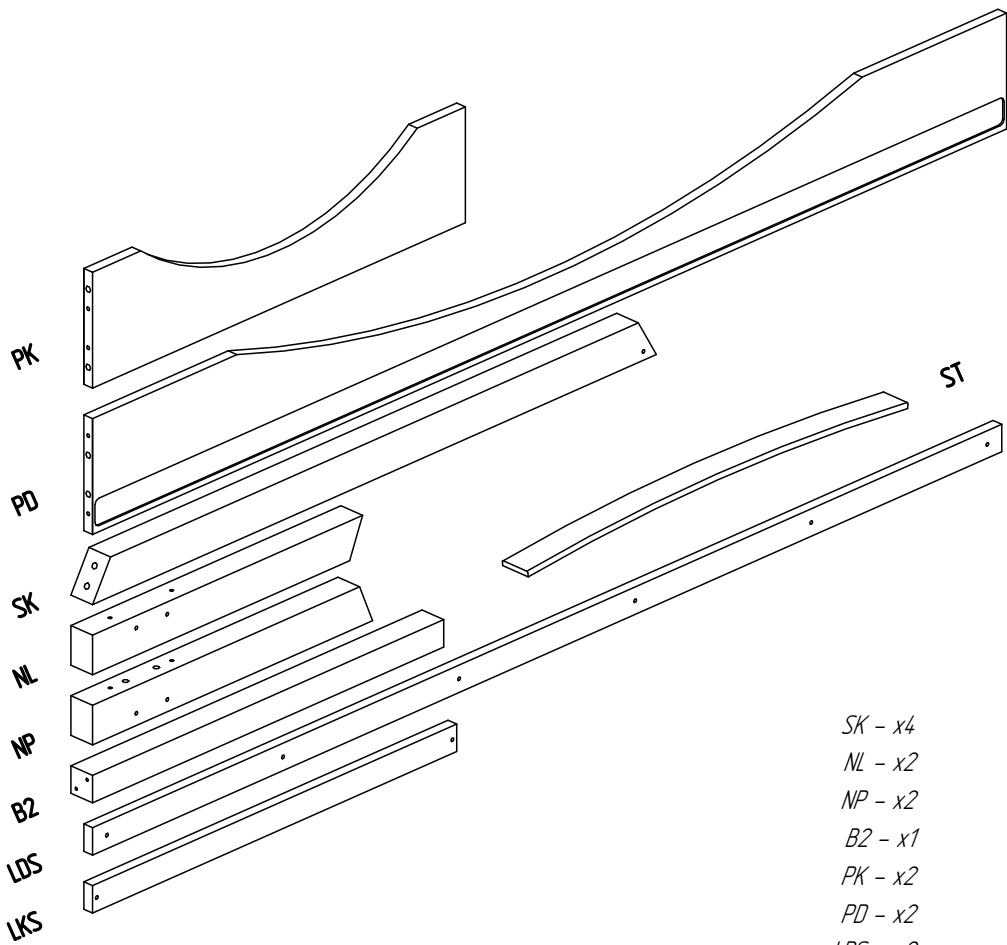

- SK - x4
- NL - x2
- NP - x2
- B2 - x1
- PK - x2
- PD - x2
- LDS - x2
- LKS - x1
- ST - x16

K10 - x16

NL - x2


NP - x2

PD - x2

PK - x2

S110 - x8

S80 - x8

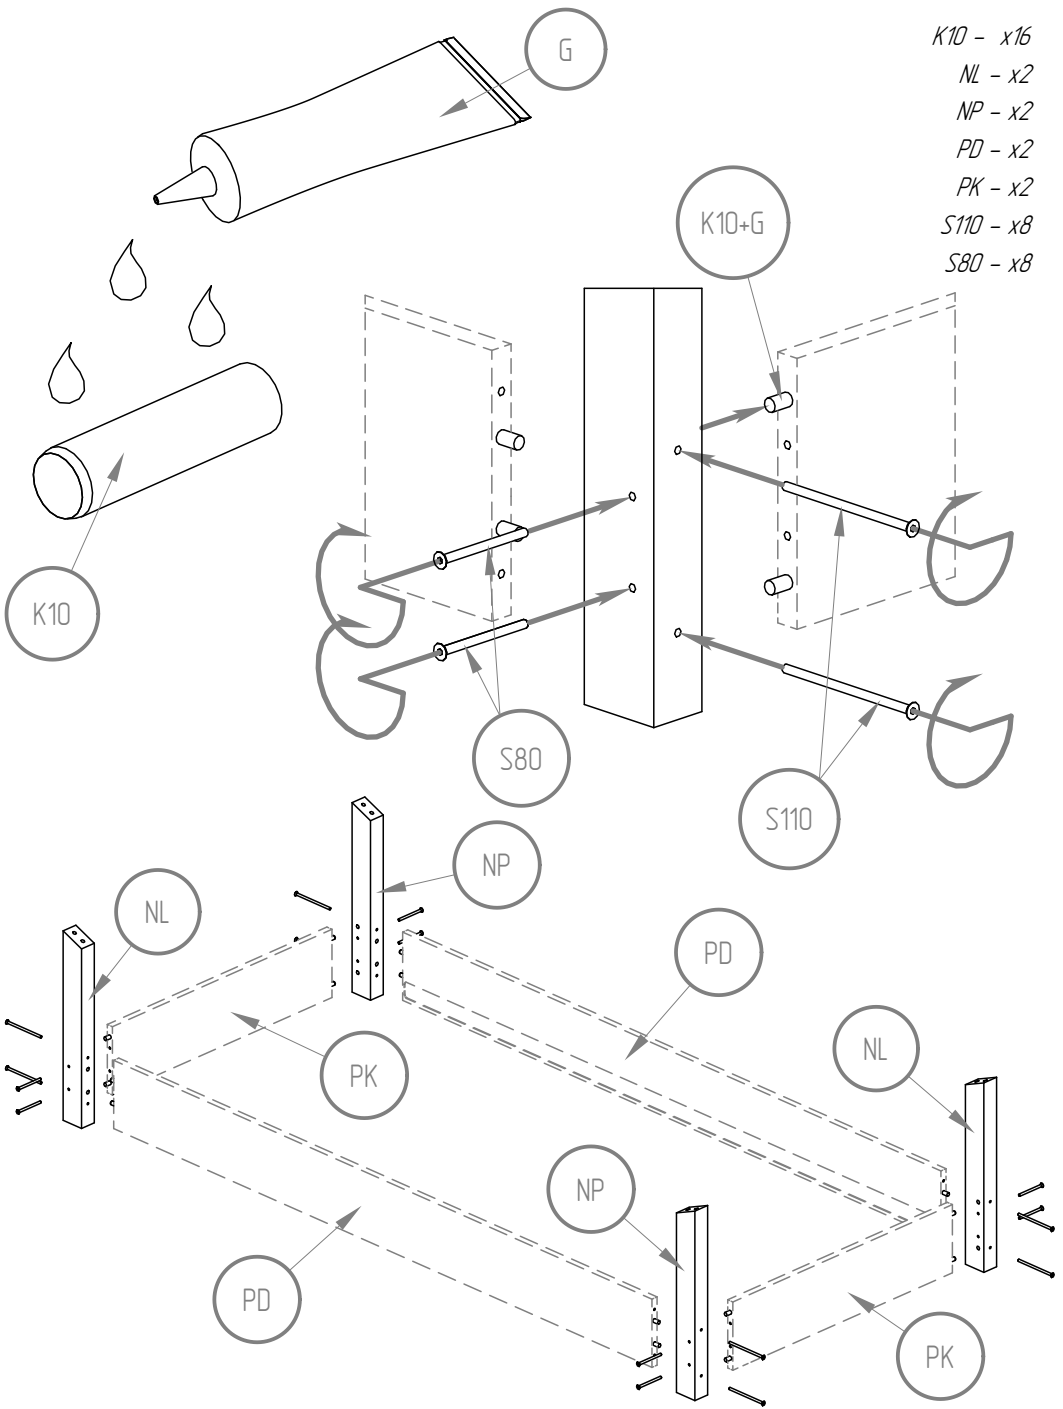


K10 - x12




SK - x4


LDS - x2

W30 - x12

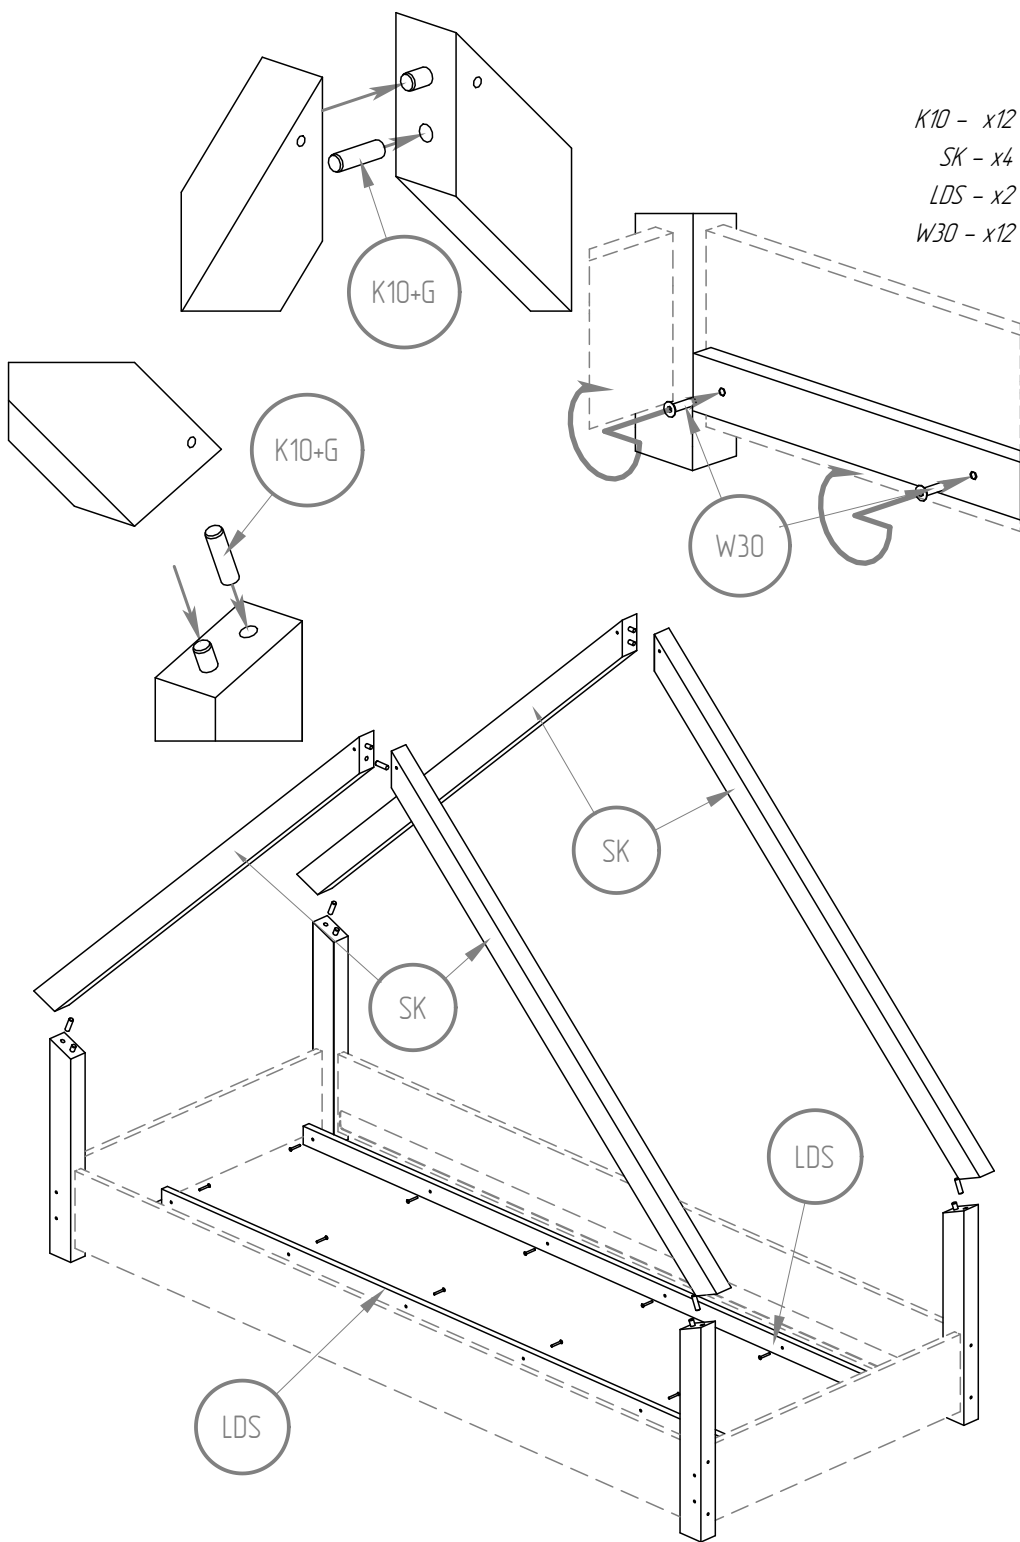

- B2 - x1
- LKS - x1
- S80 - x4
- W30 - x2

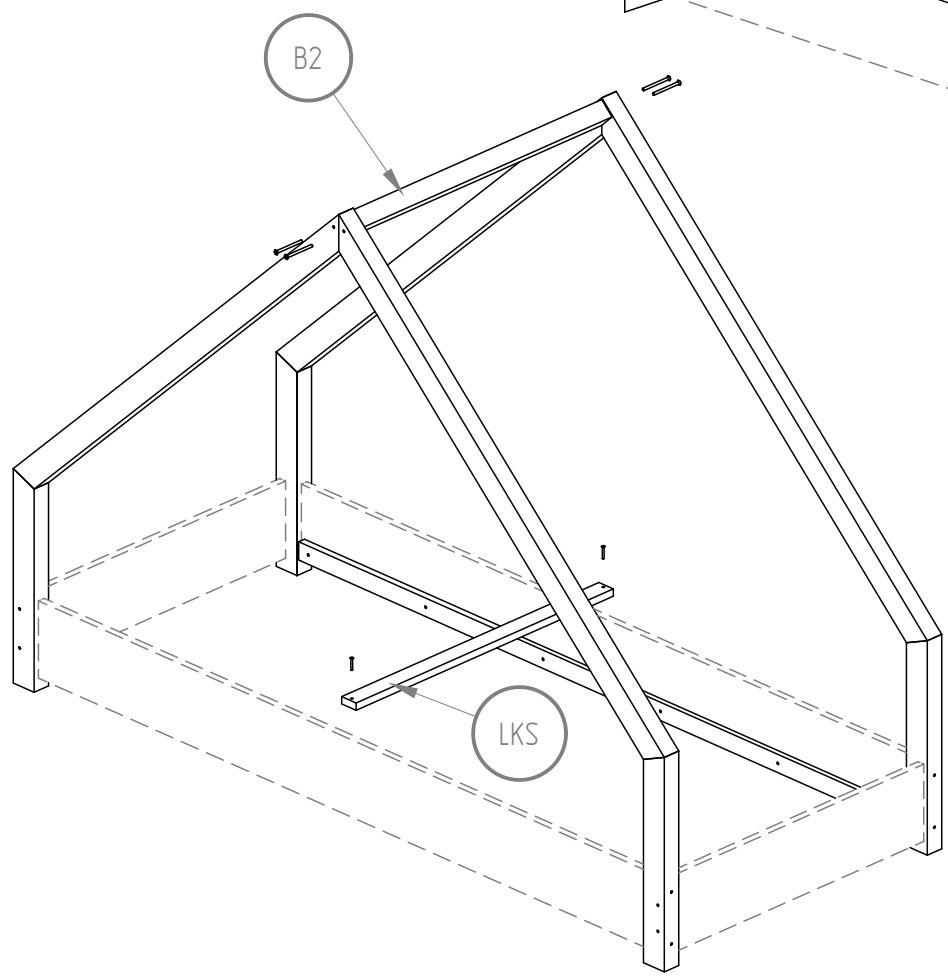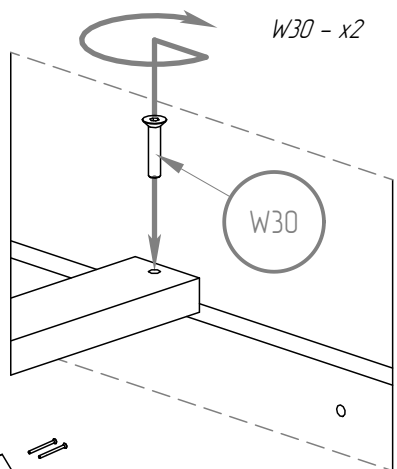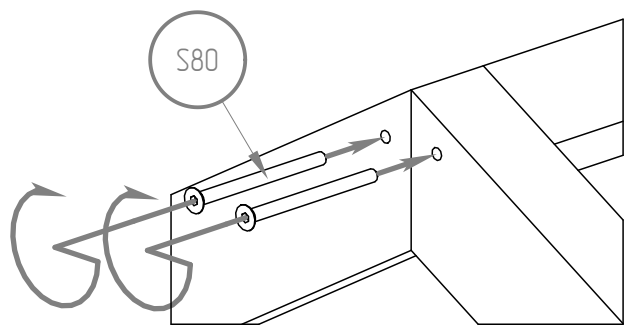


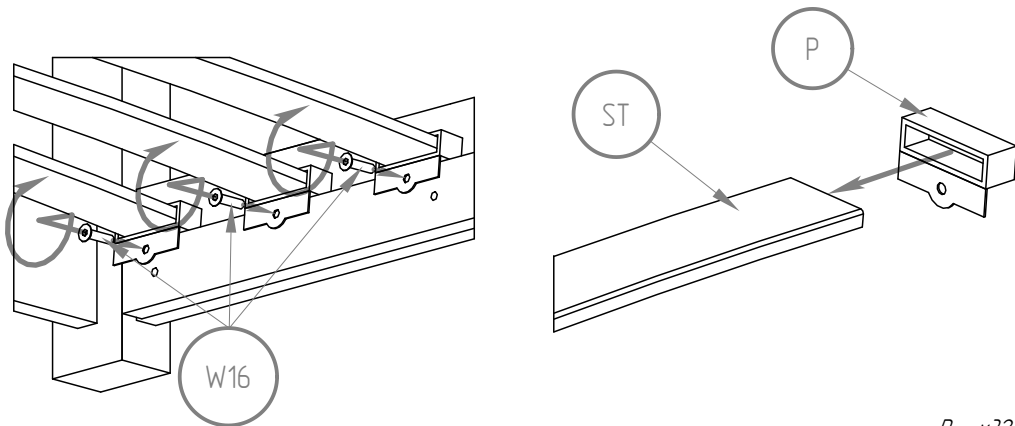


P - x32

ST - x16

W16 - x32

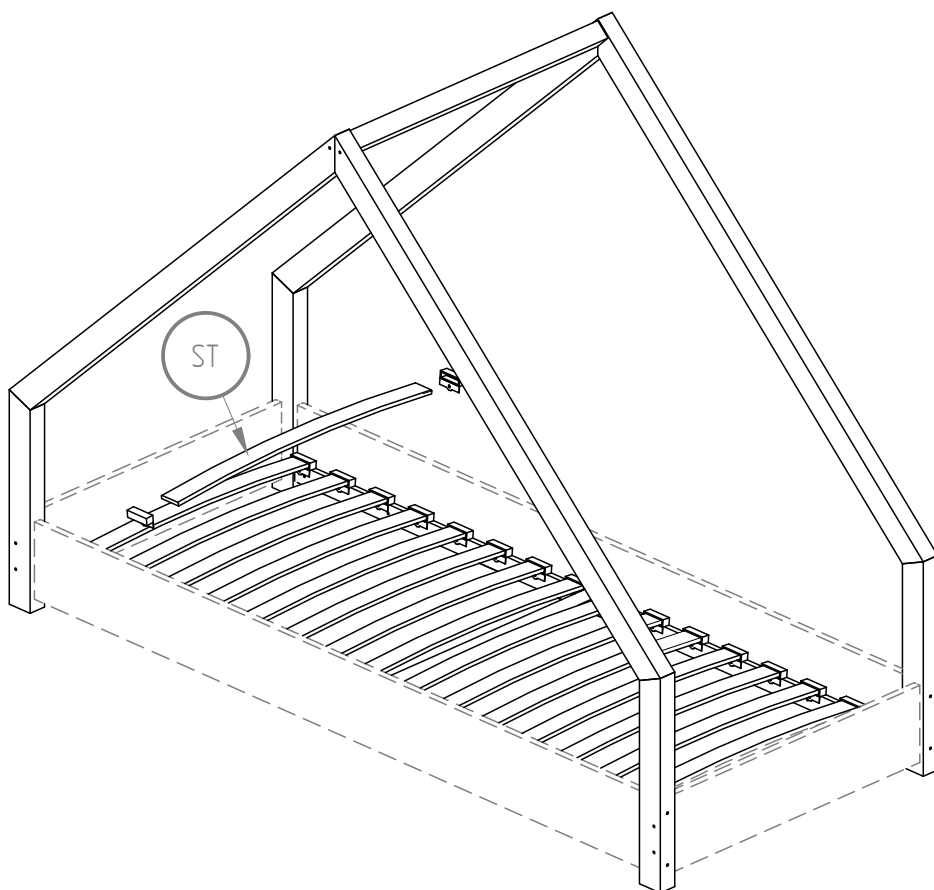

Postel domeček s oválným výřezem classic šuplík

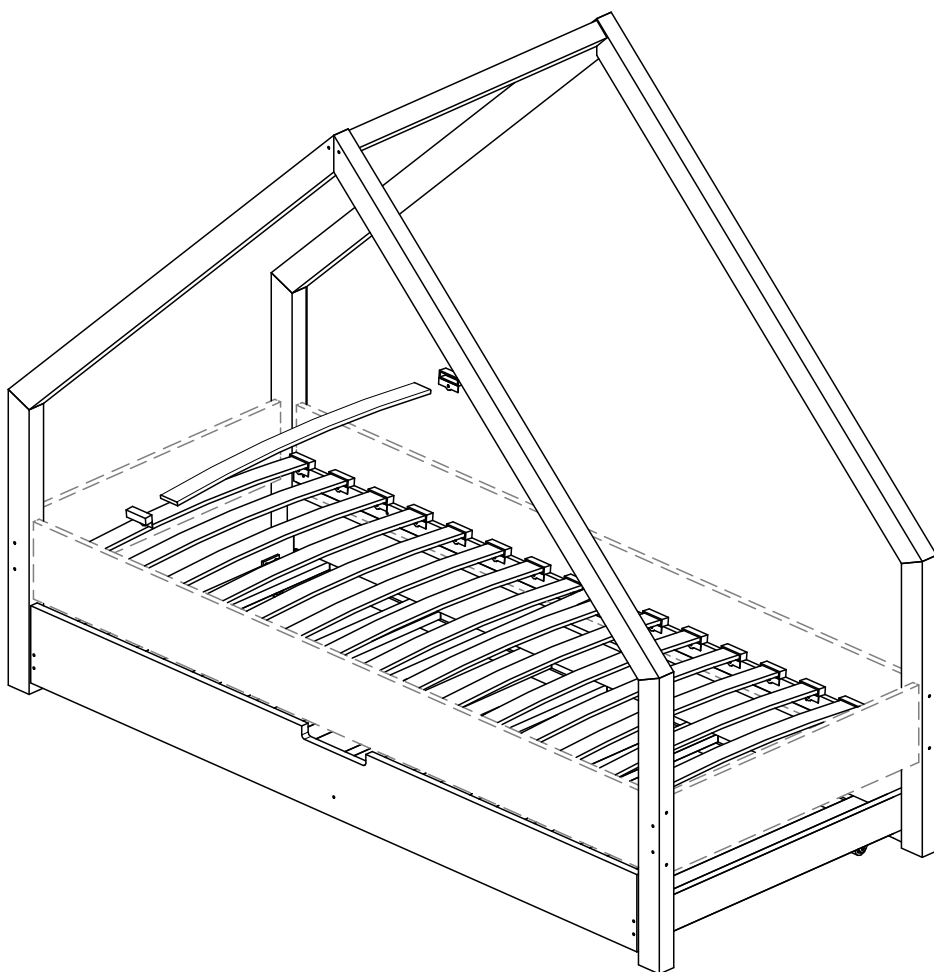



Šuplík k postelím Clasic

60x120 70x140 70x160

80x140 80x160 80x180 80x190 80x200

90x140 90x160 90x180 90x190 90x200

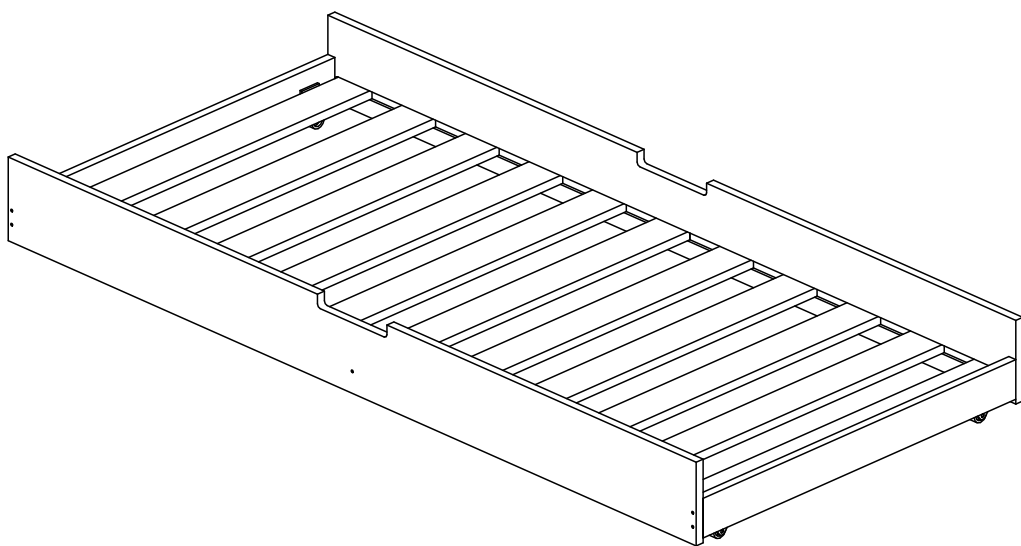


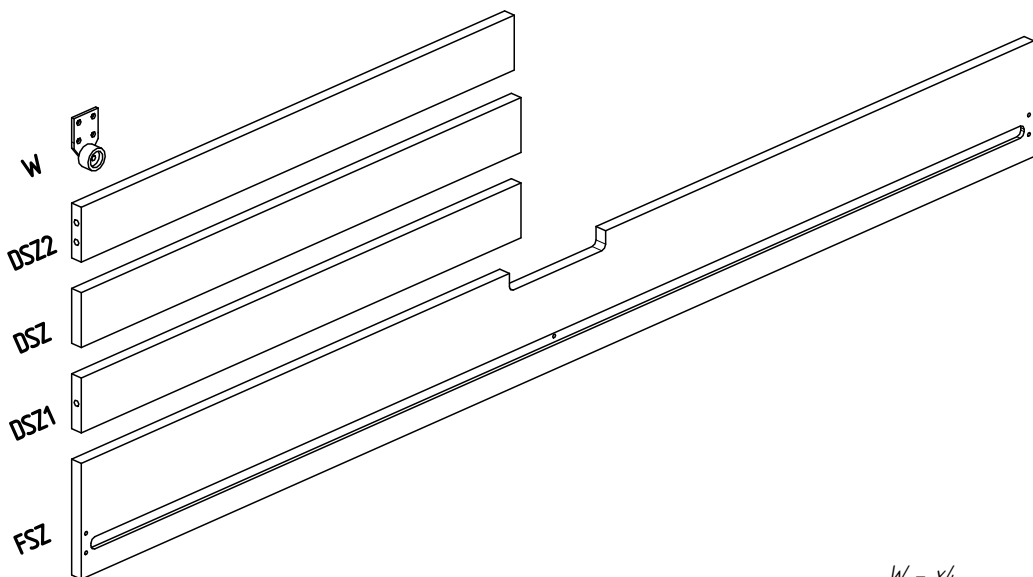


W - x4
DSZ2 - x2
DSZ - x10
DSZ1 - x1
FSZ - x2

DSZ1 - x1

FSZ - x2

S80 - x2


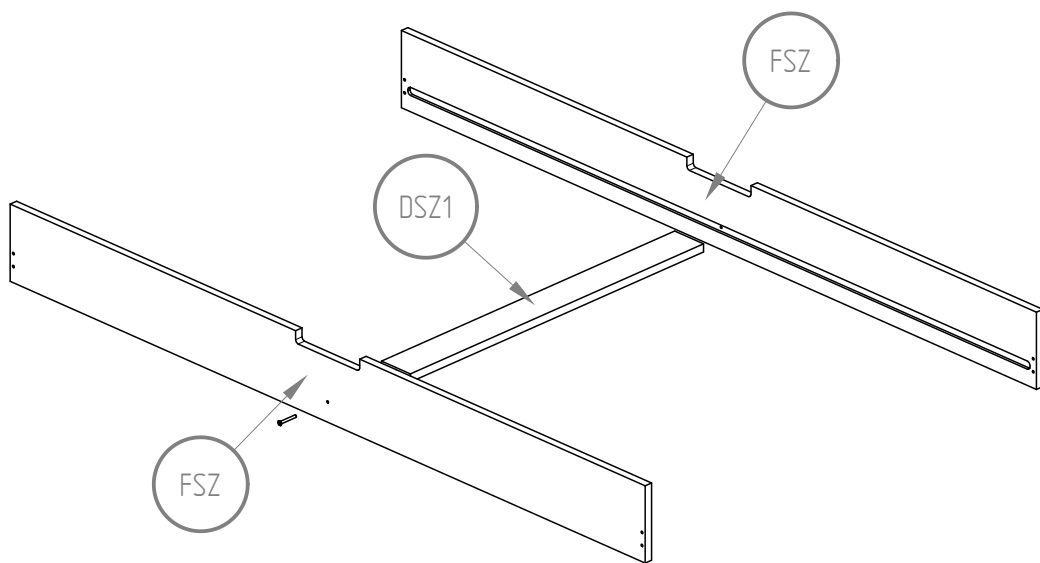
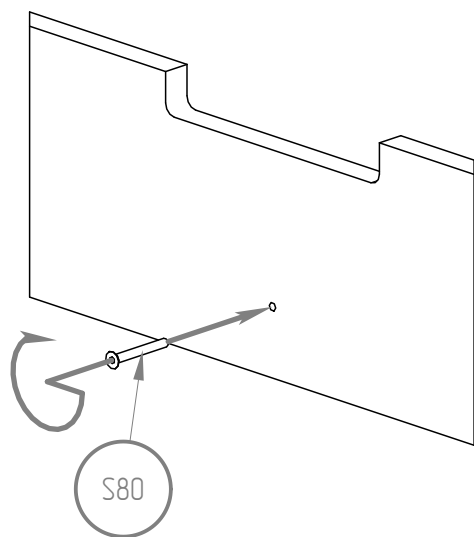


DSZ2 - x2

DSZ - x10

W16 - x16

W - x4

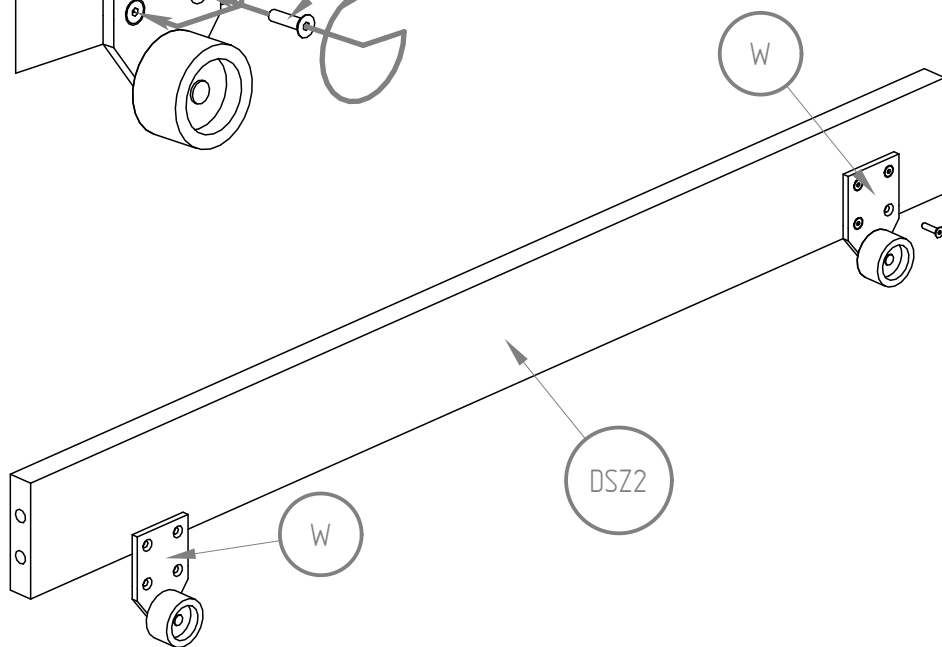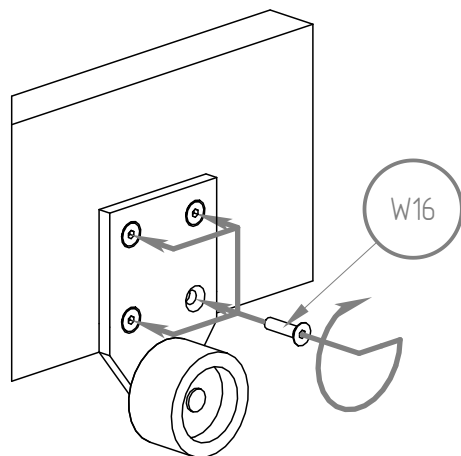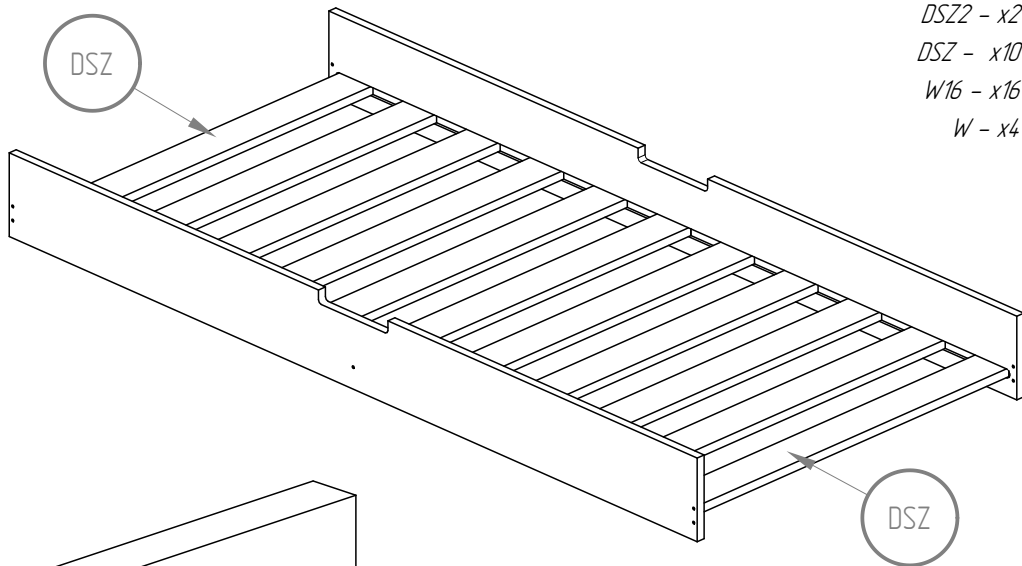

DSZ2 - x2
S80 - x8

