


E L I S


Návod na montáž










design

Patrová postel Domeček classic
pro dva Front

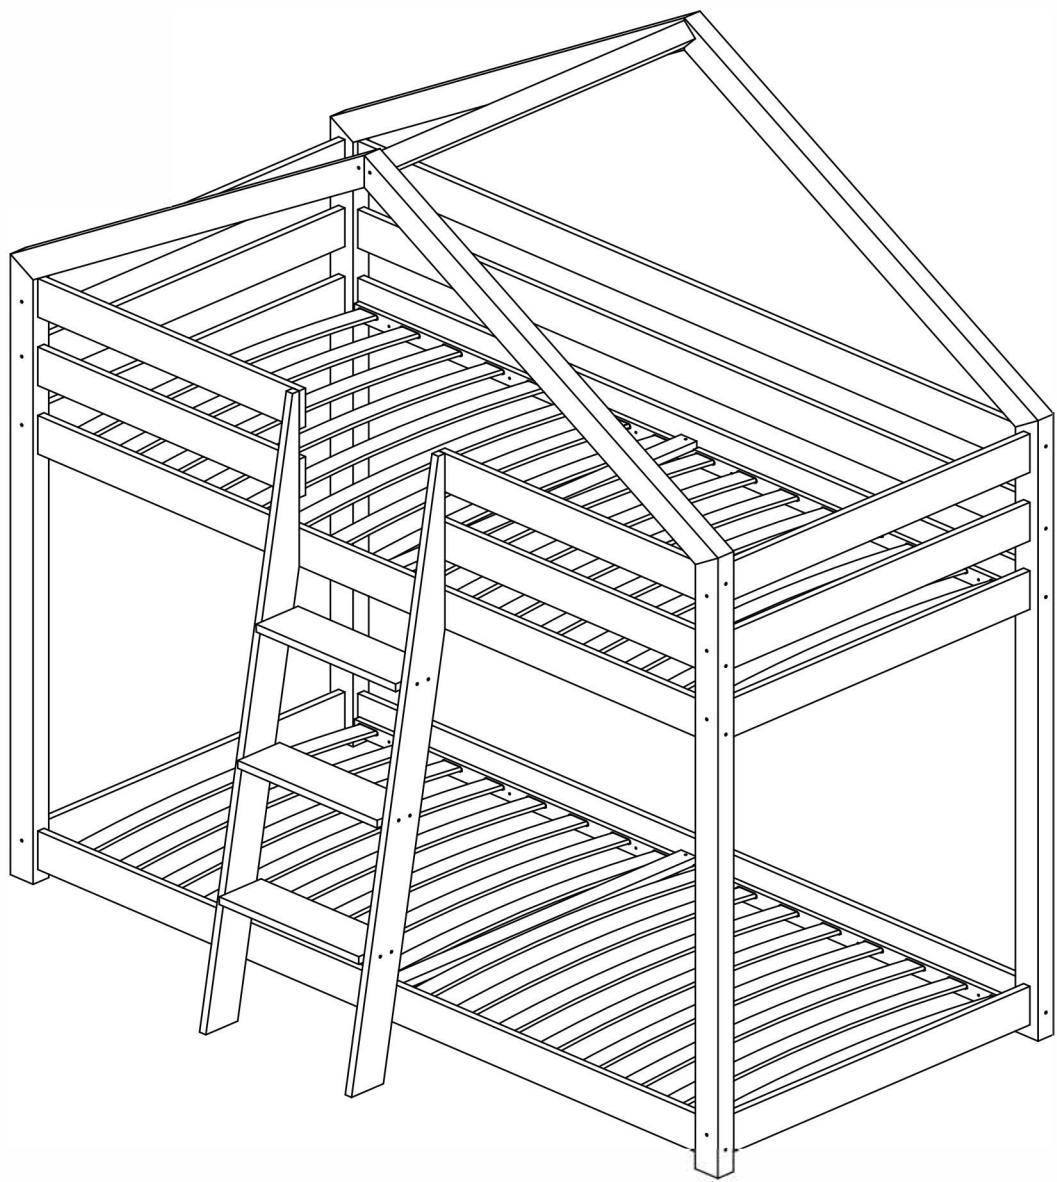

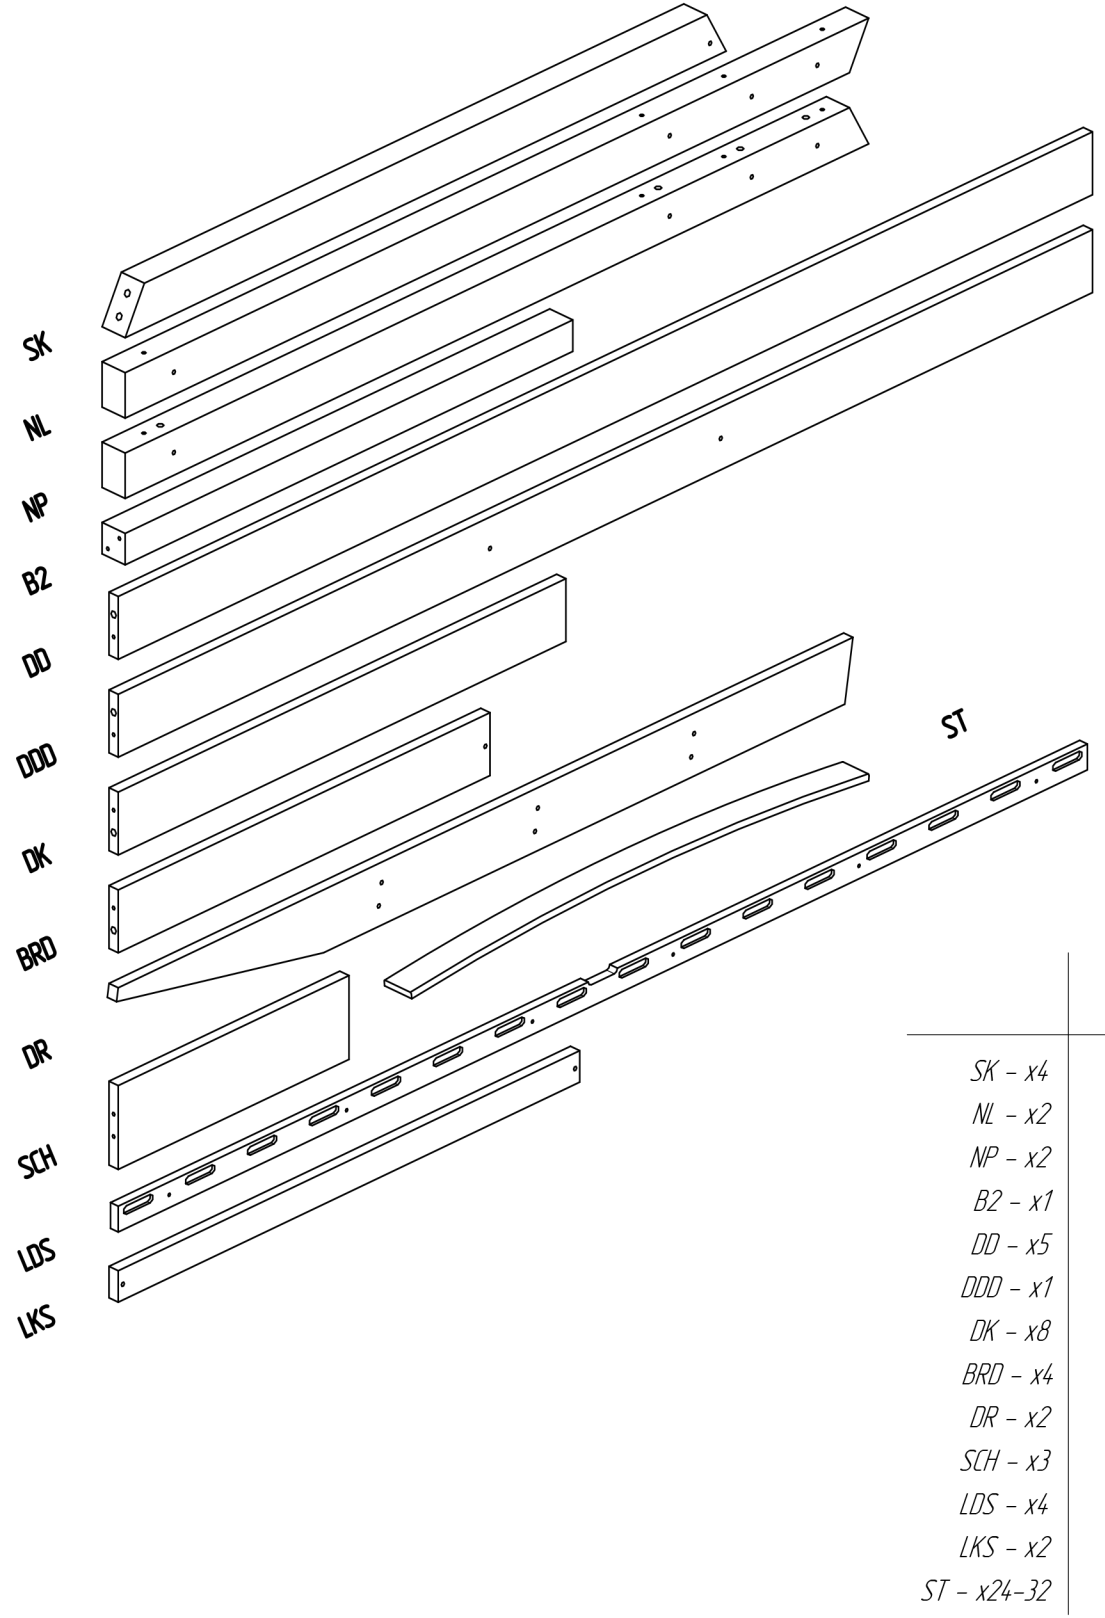

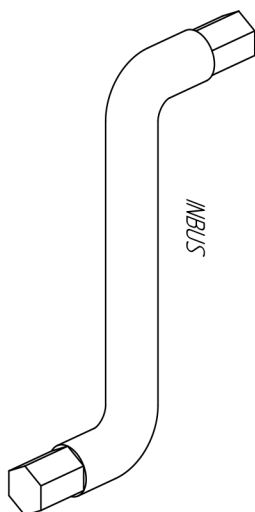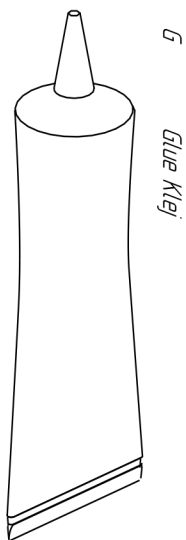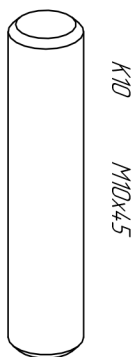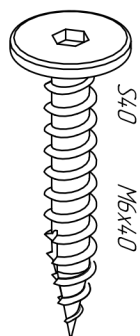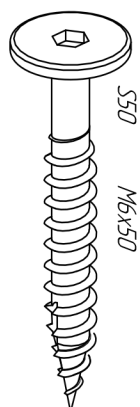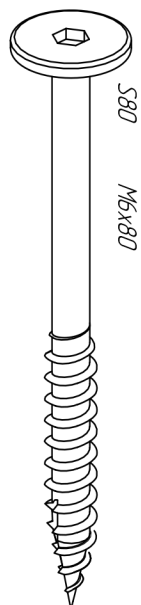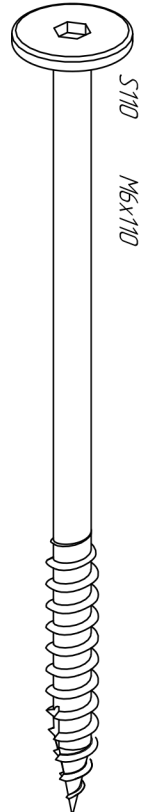

S110 - x16

S80 - x20

S50 - x14

S40 - x4


W30 - x28

K10 - x46




G - x4



INBUS - x1

Počet otvorů pro vložení roštových lamel a počet dílů ST.

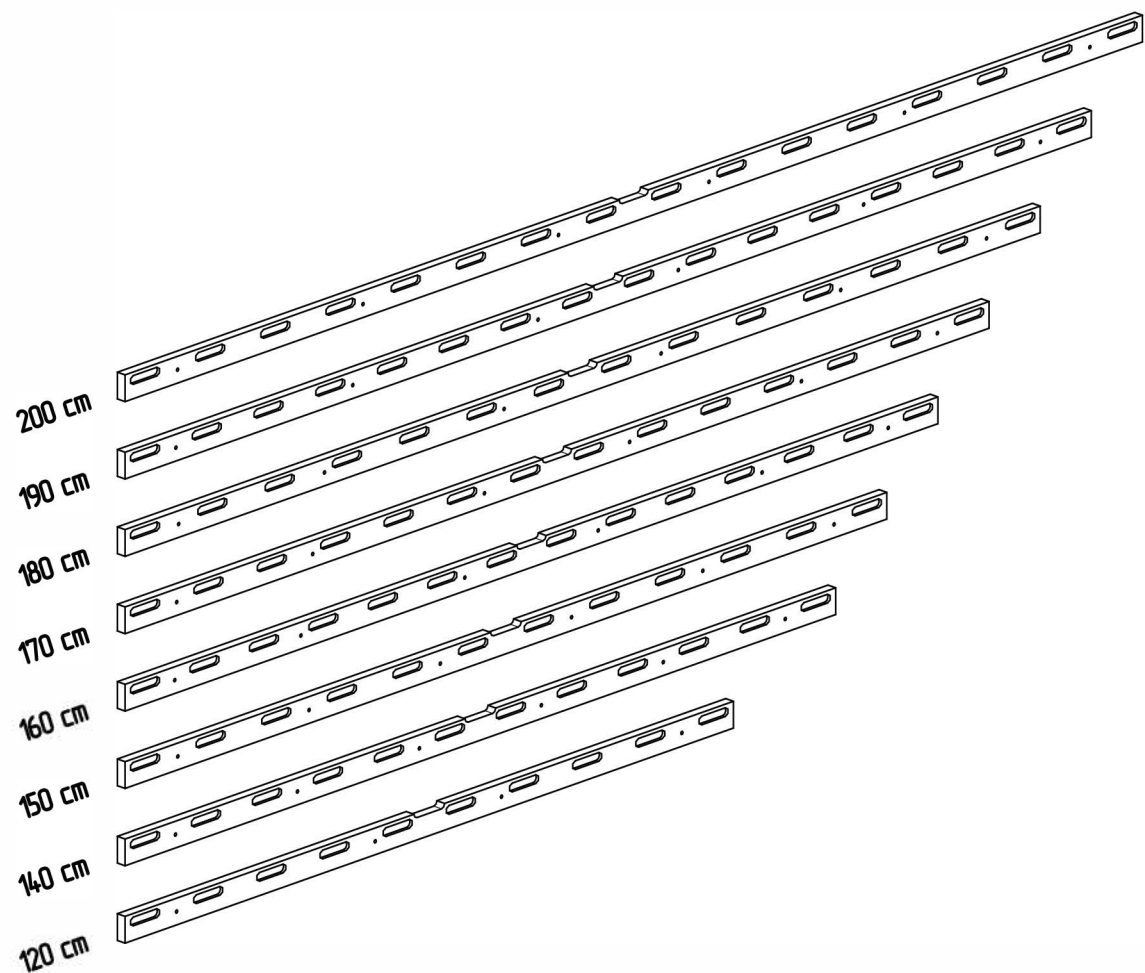

Délka	QT
<i>200 cm</i>	<i>16</i>
<i>190 cm</i>	<i>16</i>
<i>180 cm</i>	<i>14</i>
<i>170 cm</i>	<i>14</i>
<i>160 cm</i>	<i>14</i>
<i>150 cm</i>	<i>12</i>
<i>140 cm</i>	<i>12</i>
<i>120 cm</i>	<i>10</i>

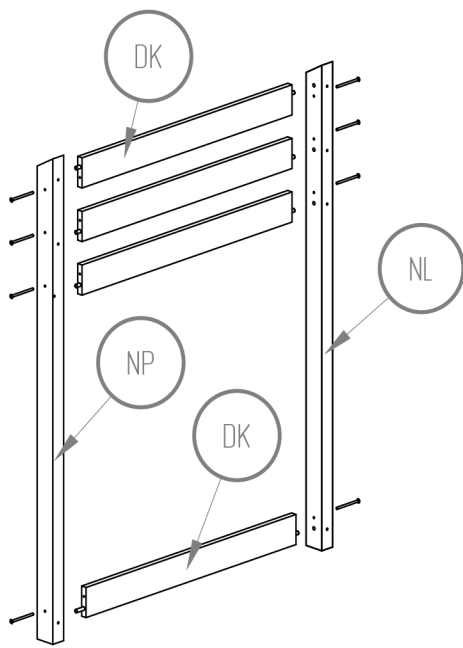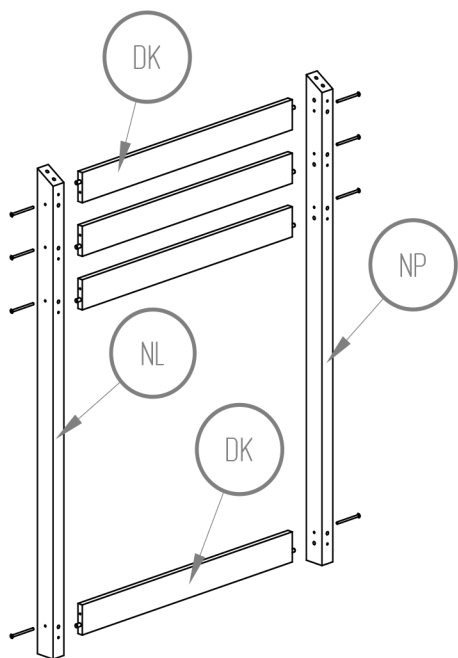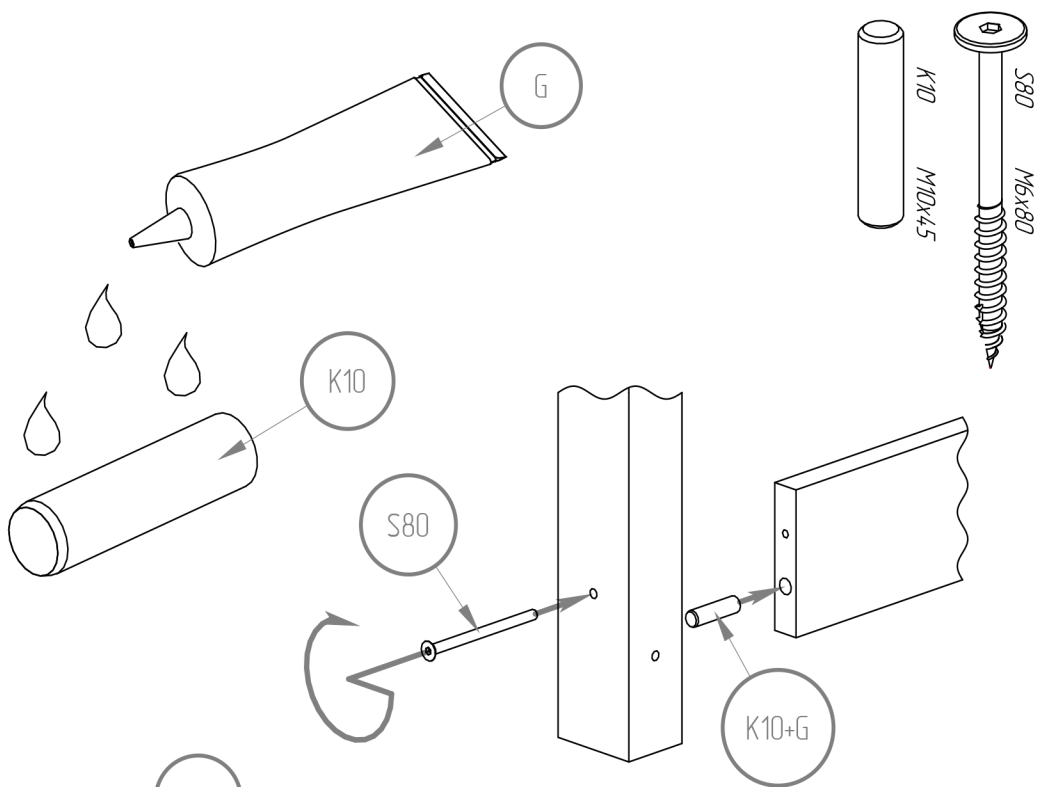

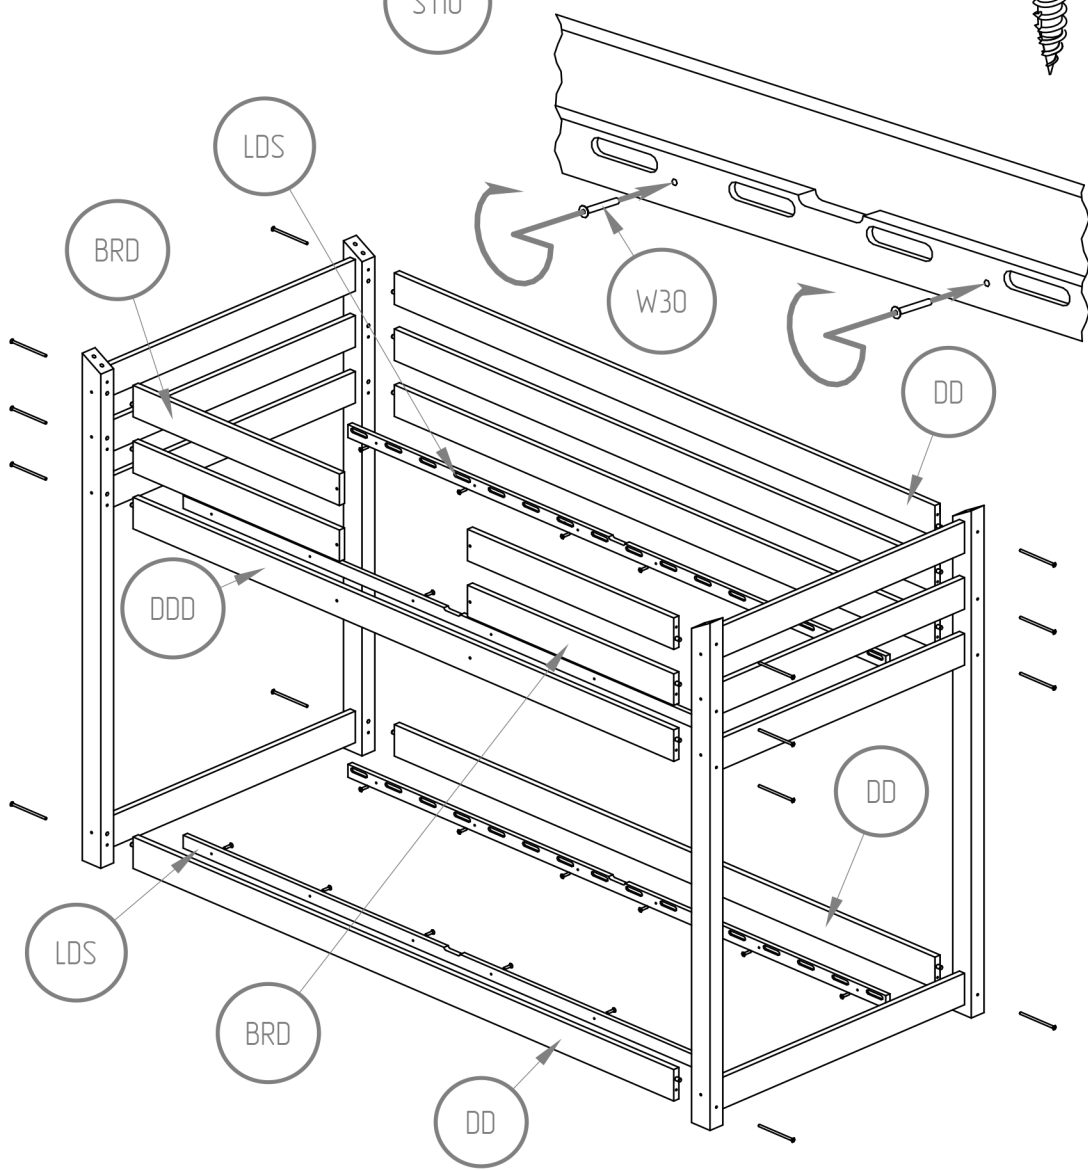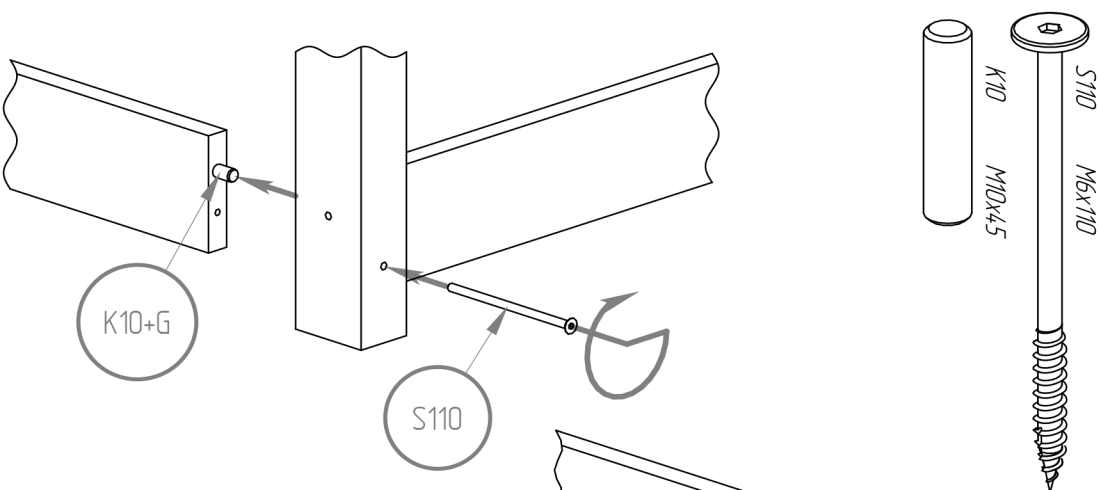

K10
M10x45

