




E L I S

Návod na montáž

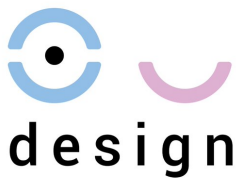


Patrová postel Domeček
clasic s plůtkem Front

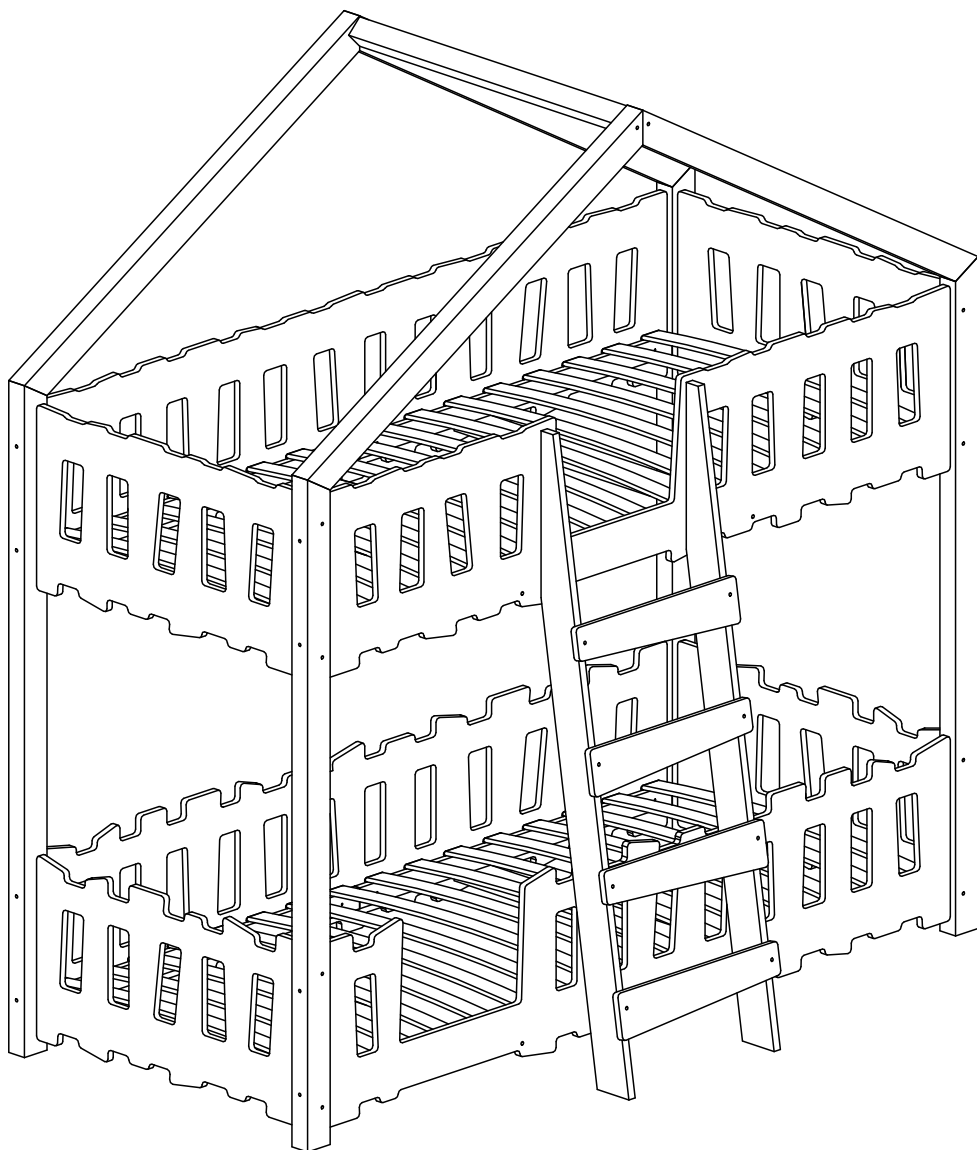


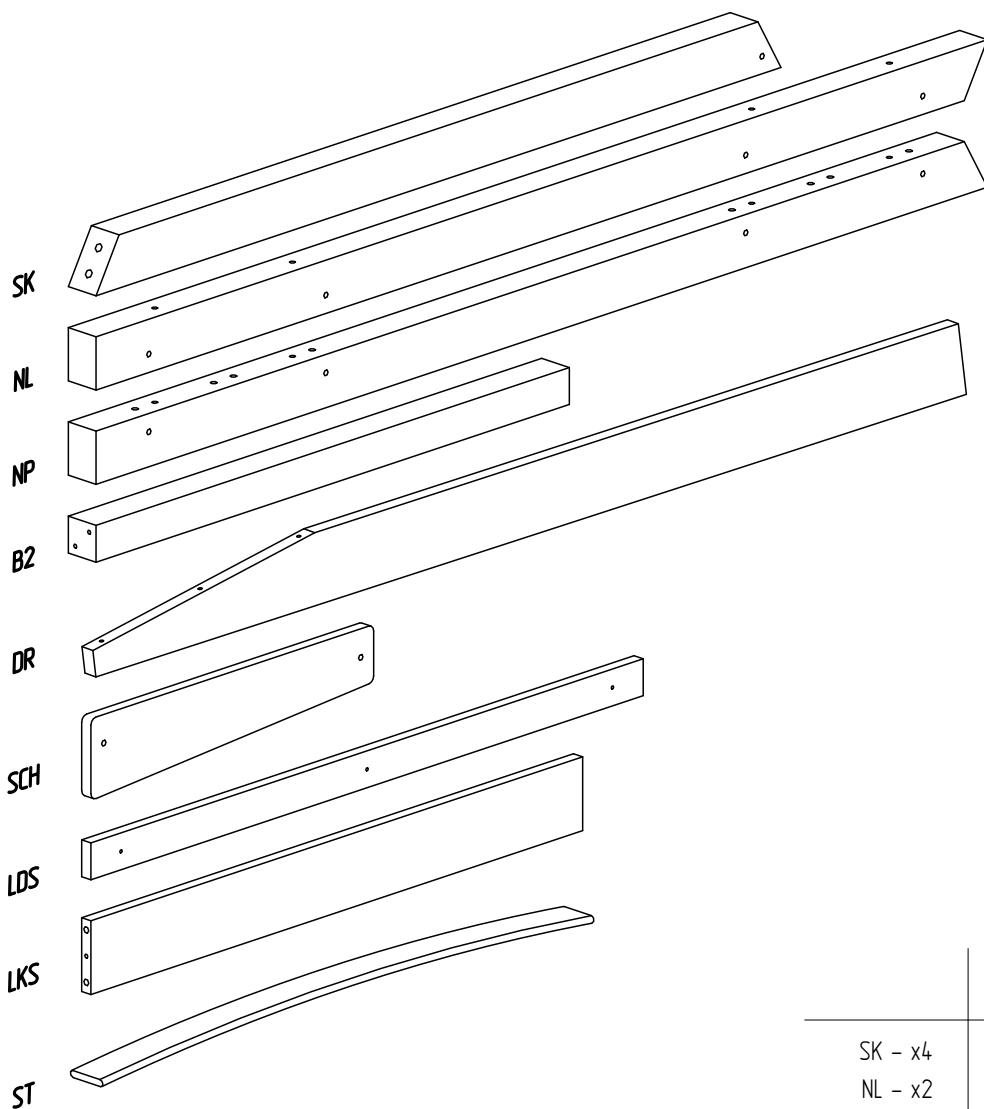

SK	- x4
NL	- x2
NP	- x2
B2	- x1
DR	- x2
SCH	- x4
LDS	- x8
LKS	- x4
ST	- x32

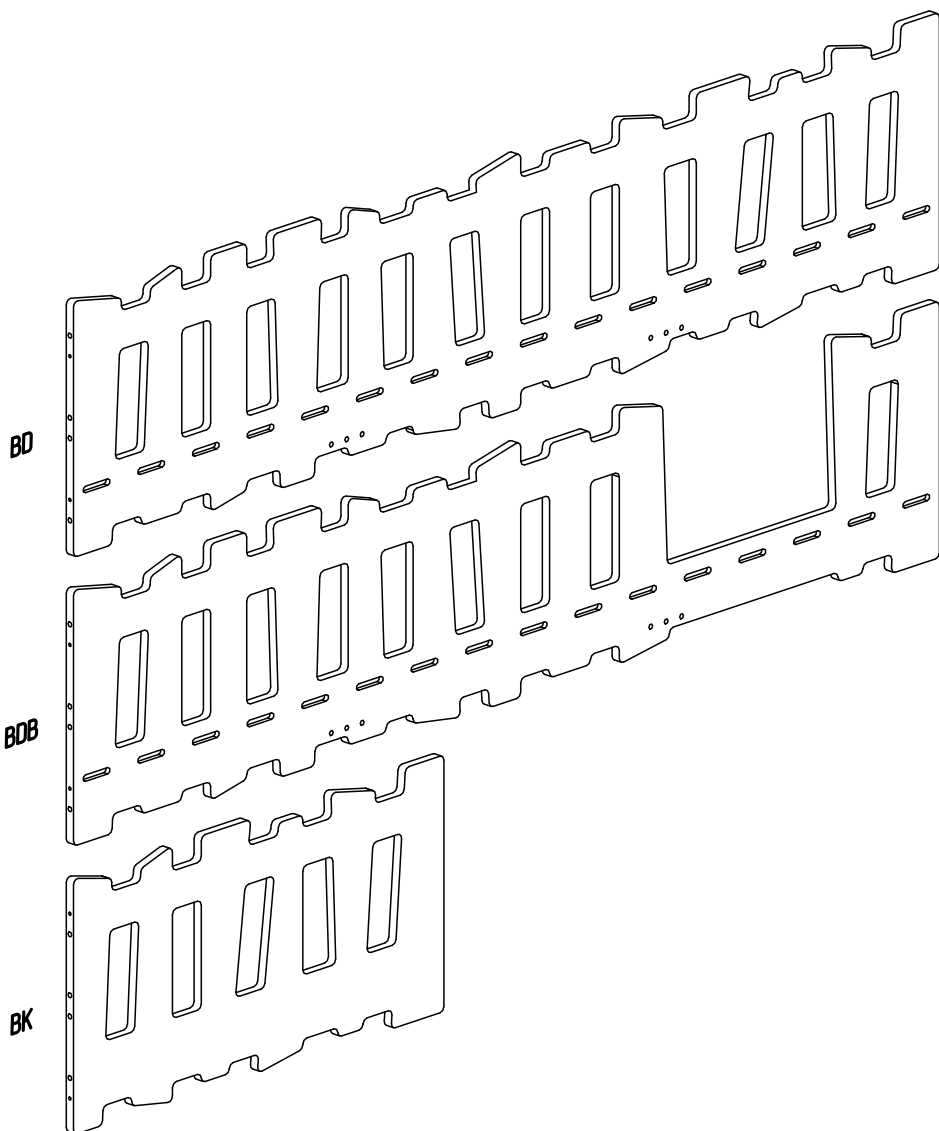




BD - x1
BDB - x1
BK - x2

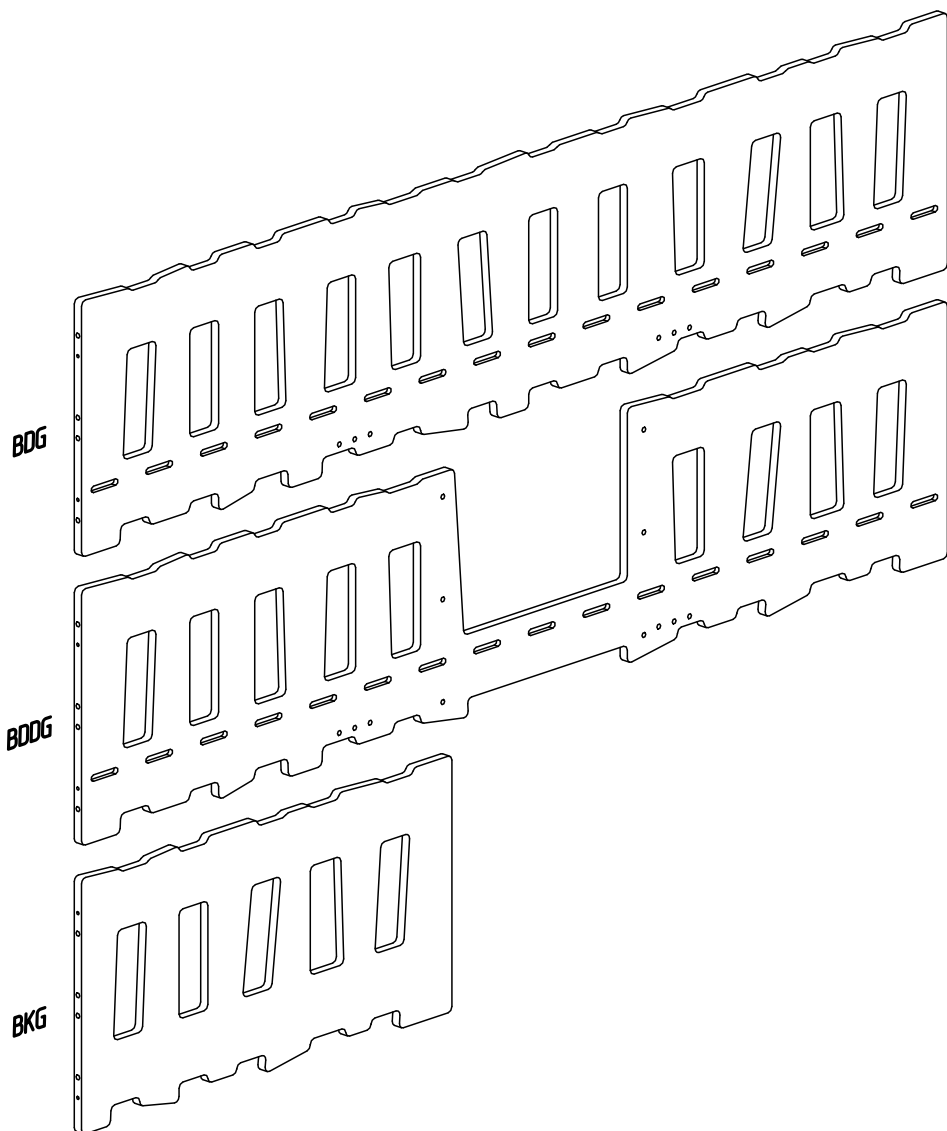







BDG - x1


BDDG - x1



BKG - x2

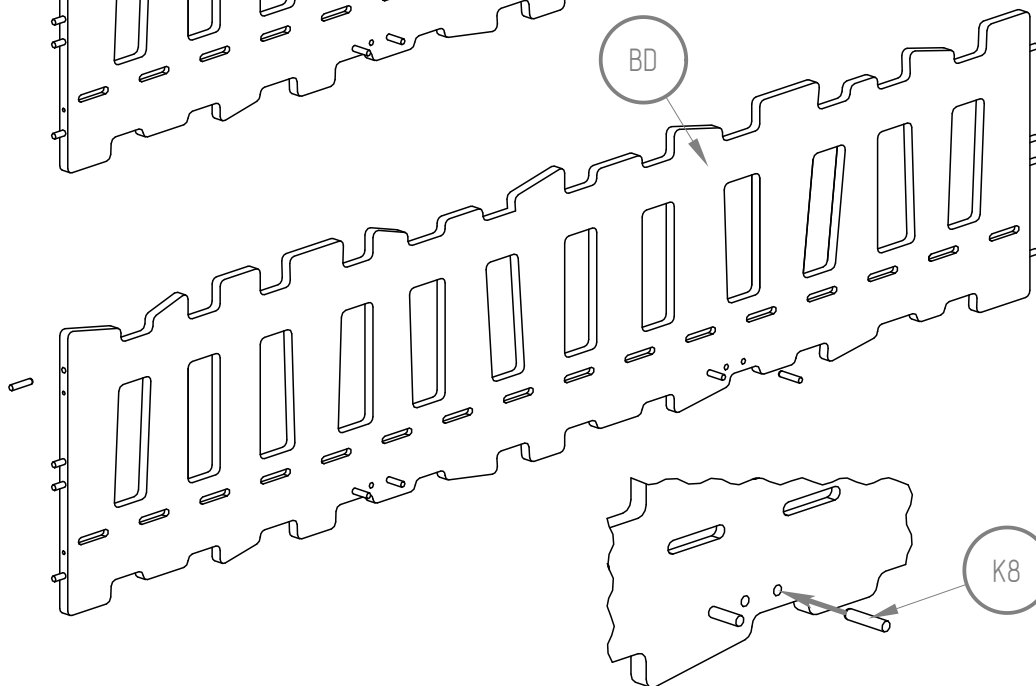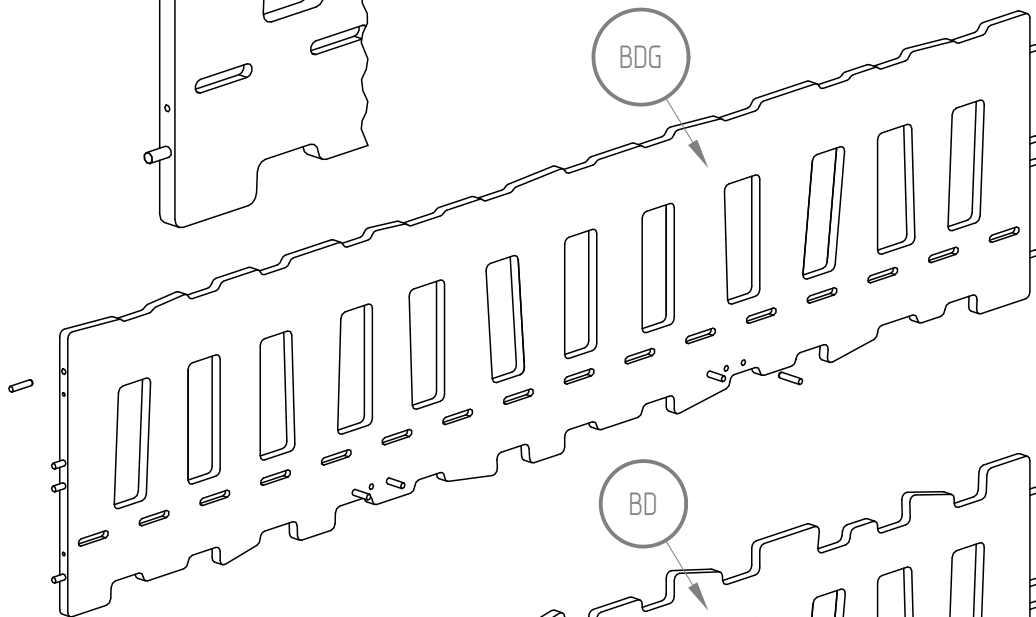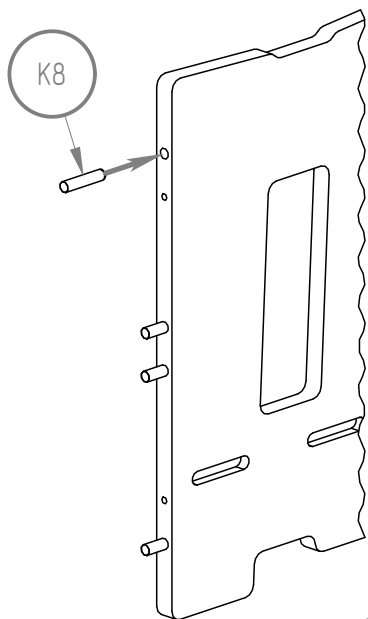


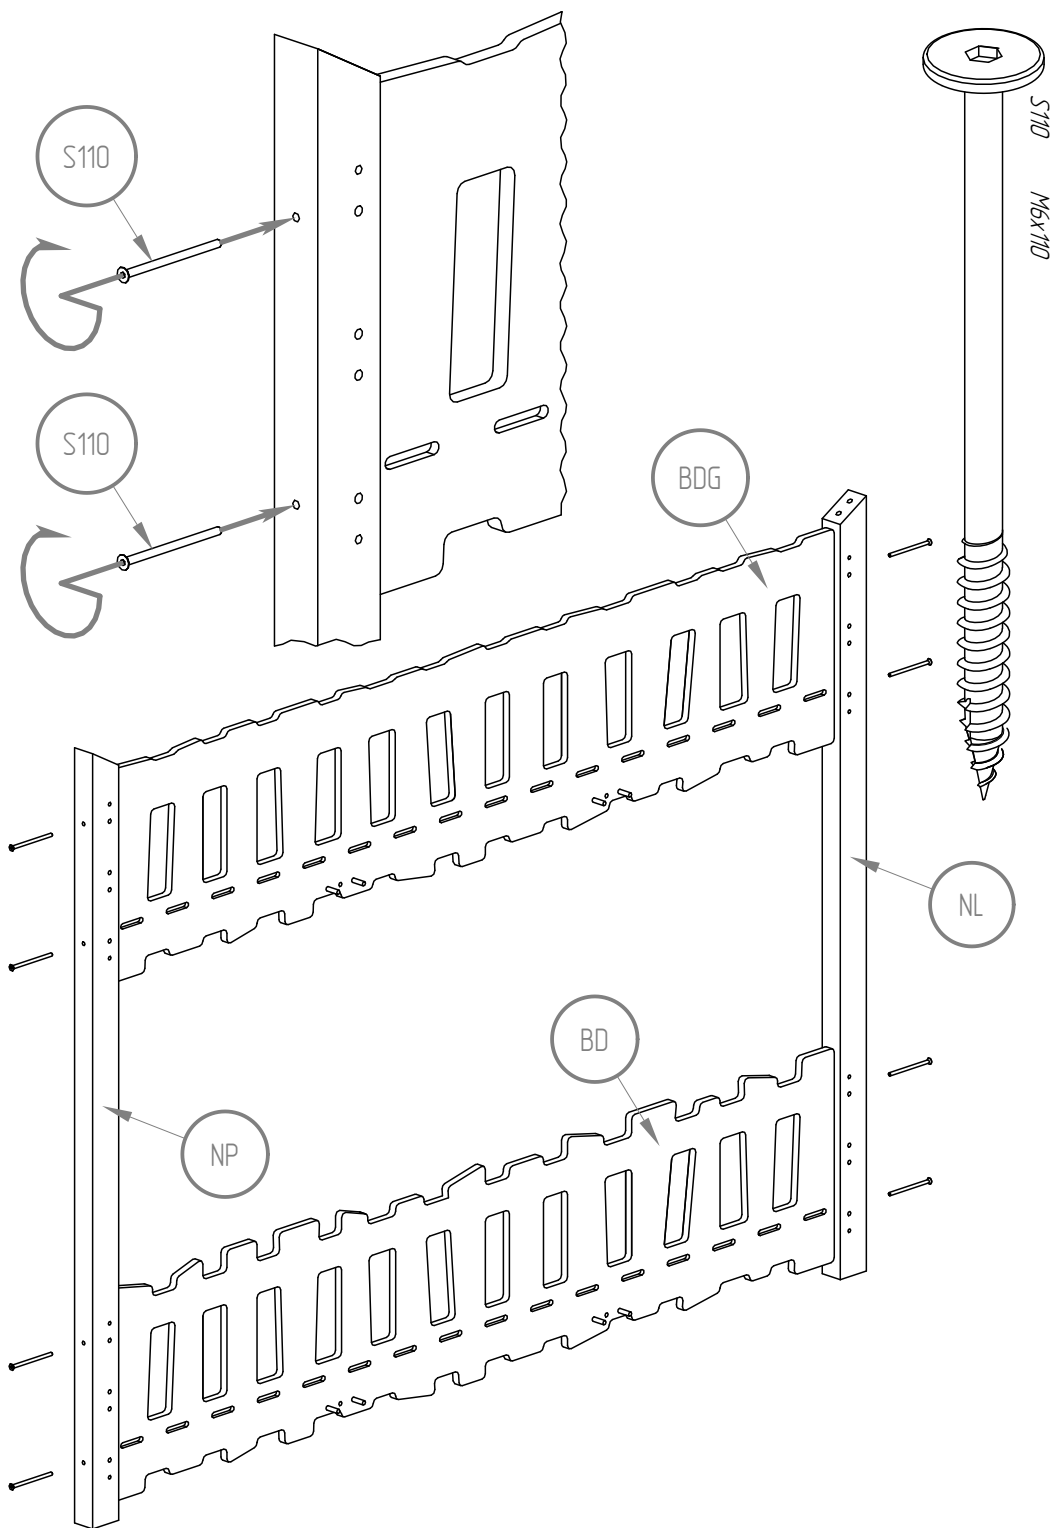


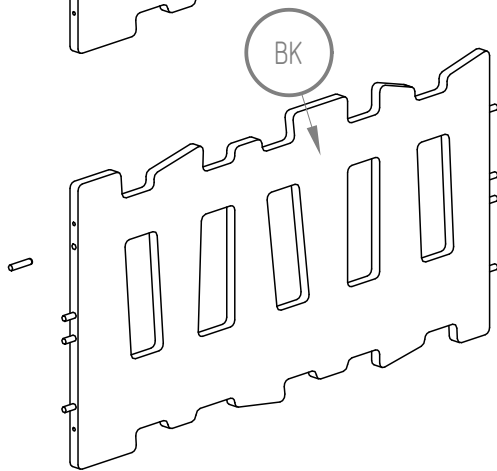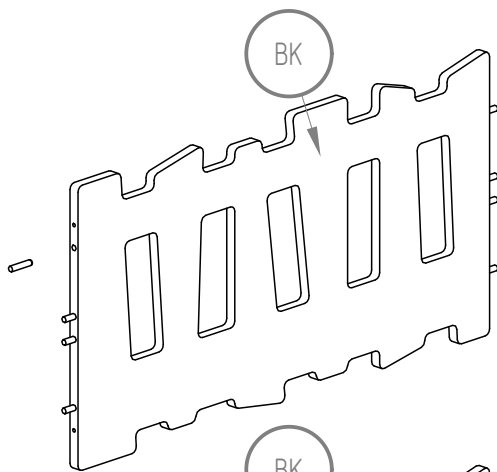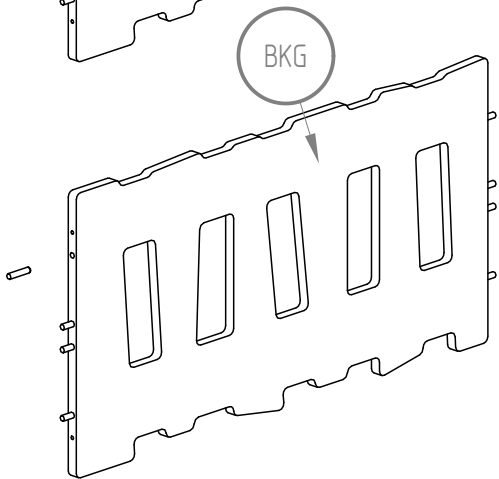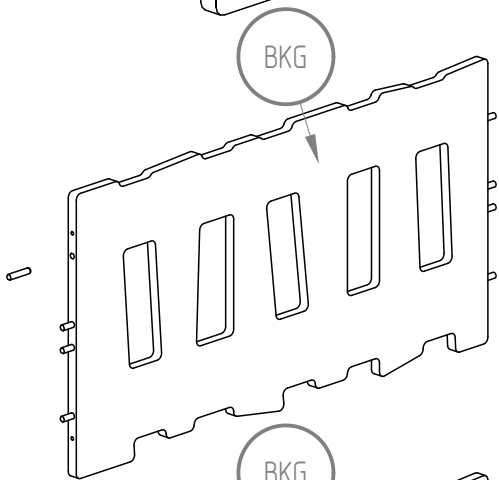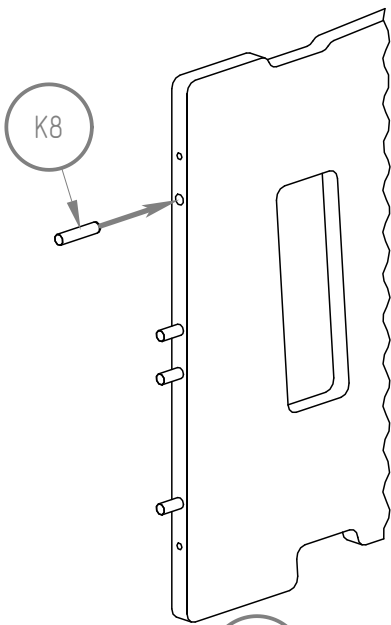

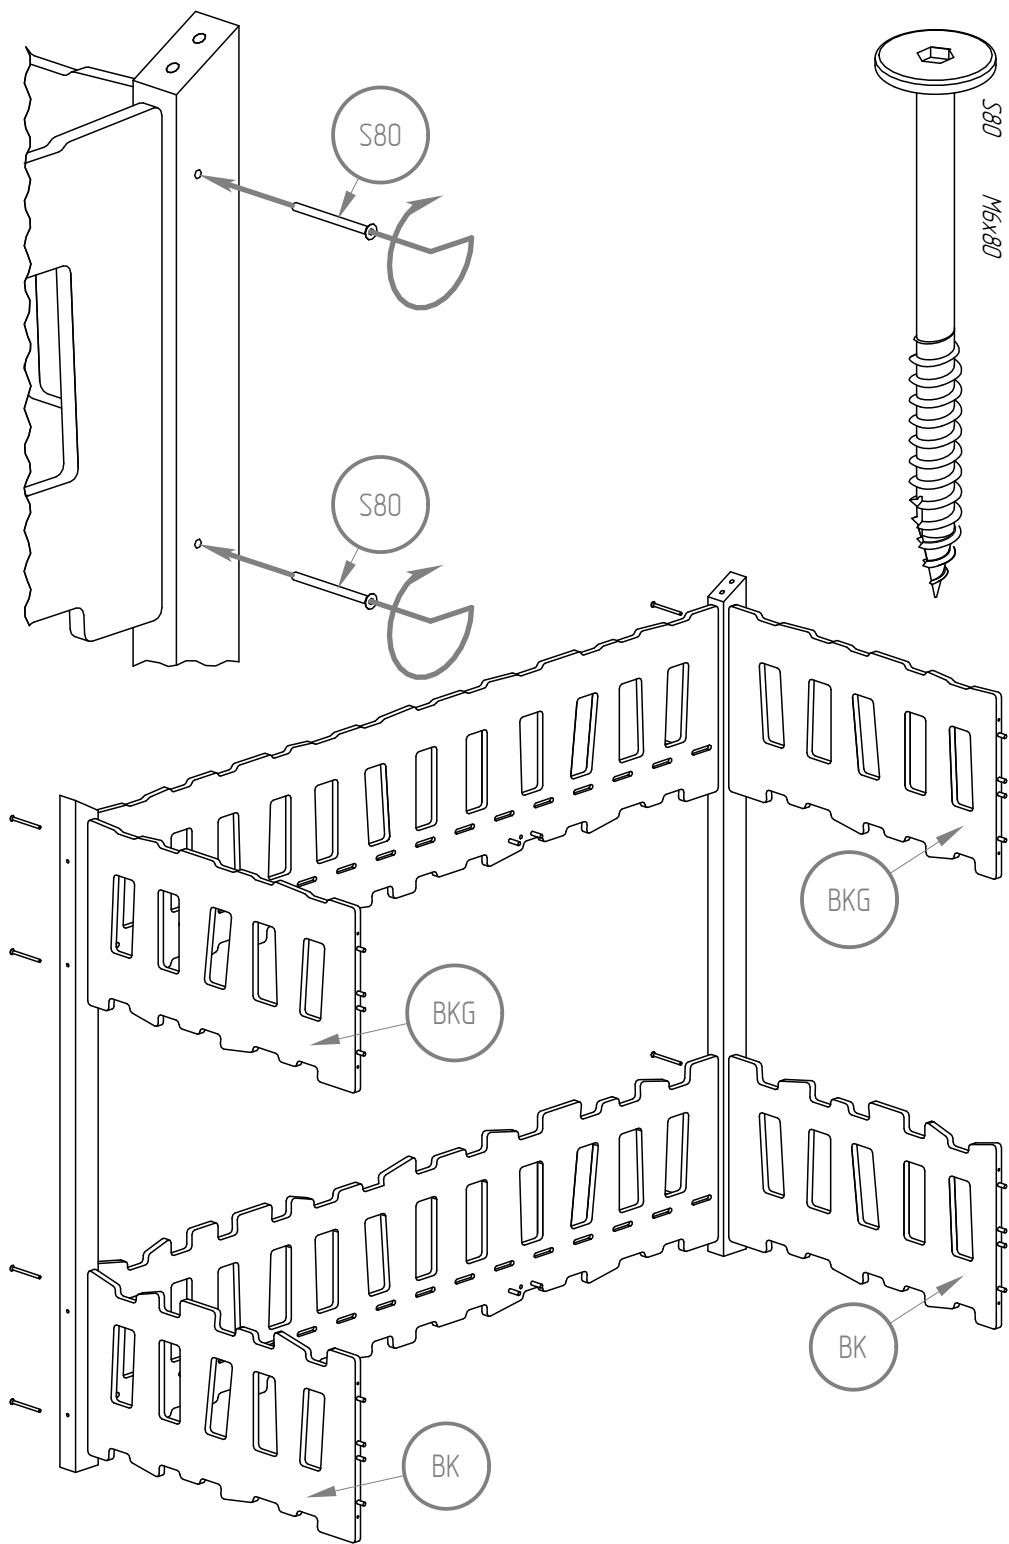

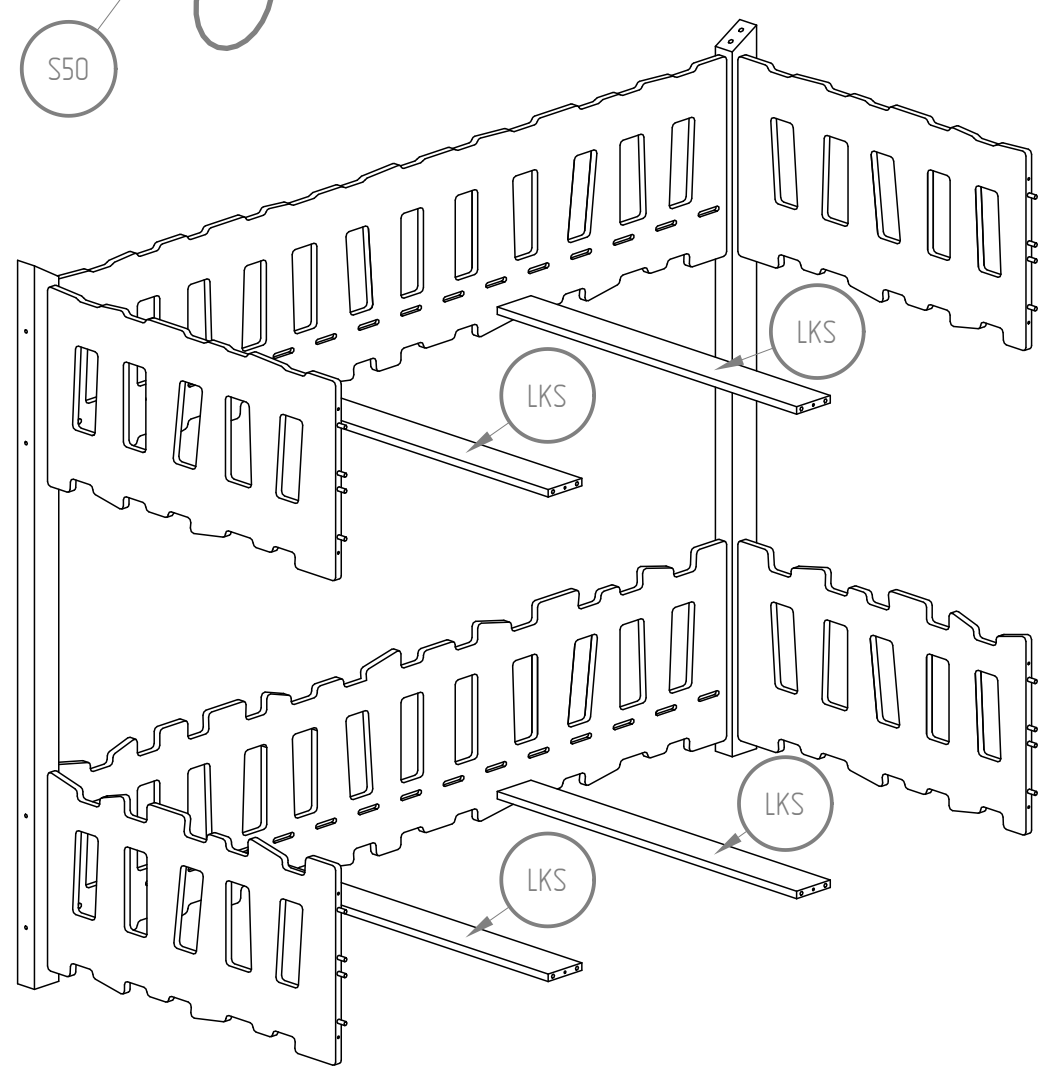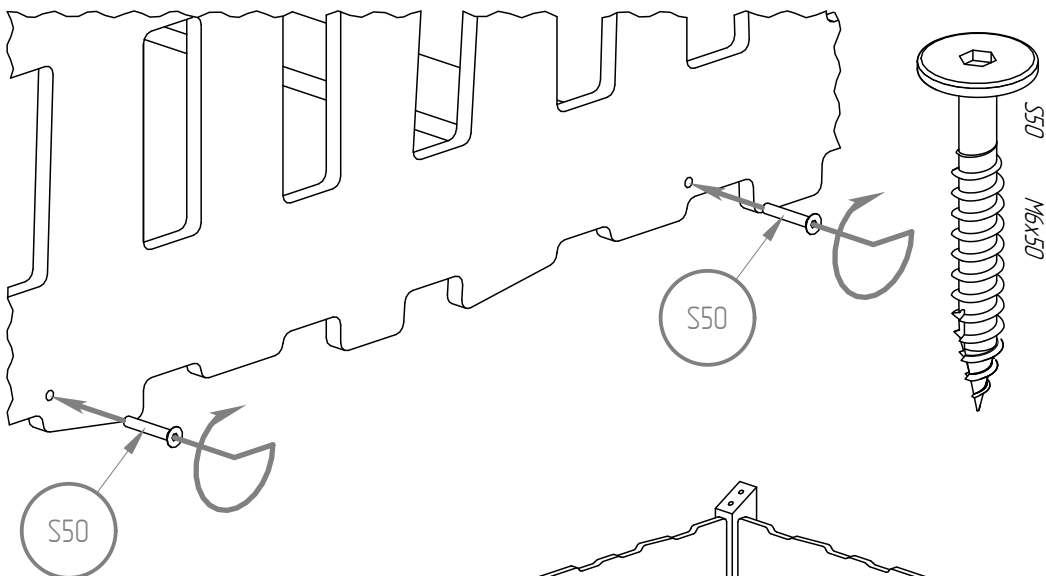


K8

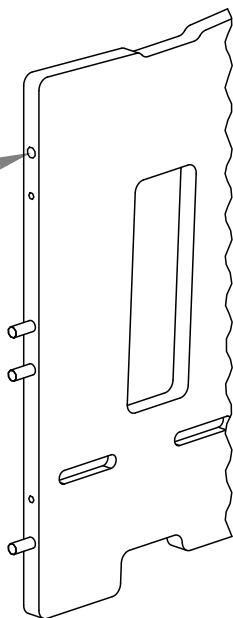


K8
M8x35

BDDG

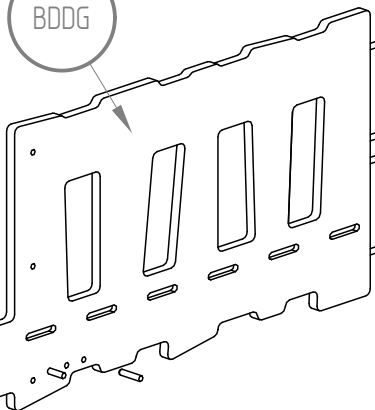





BDB


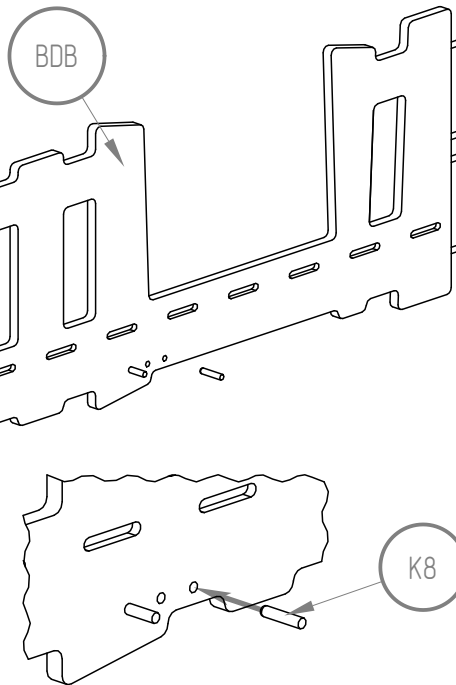




K8






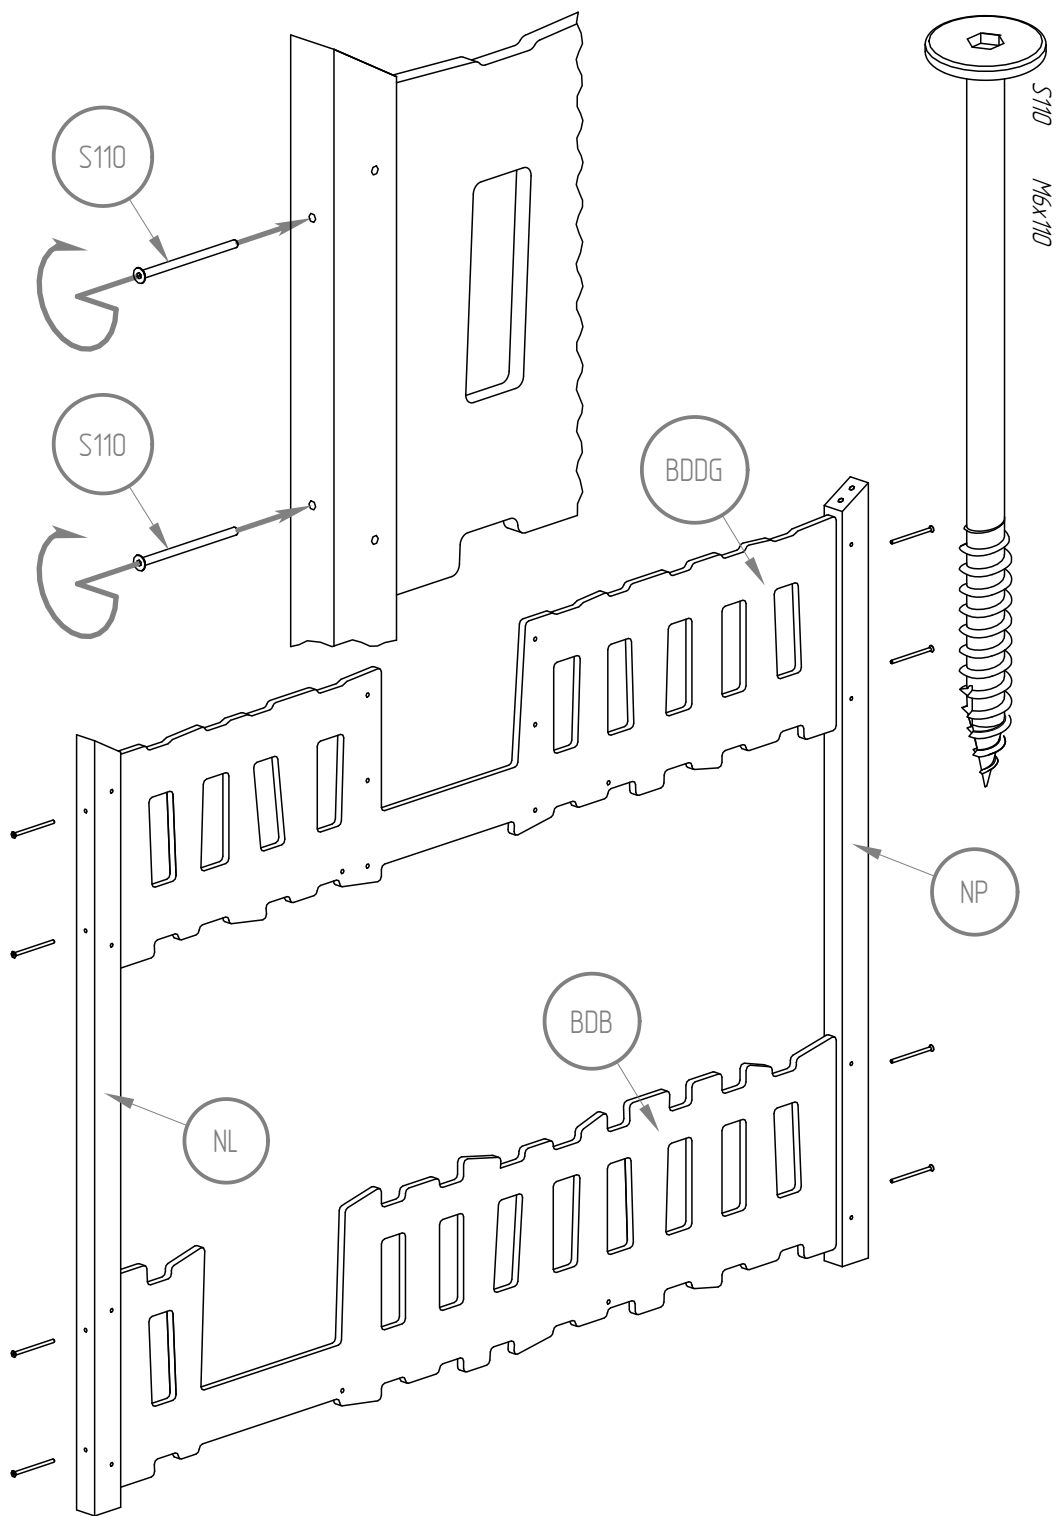

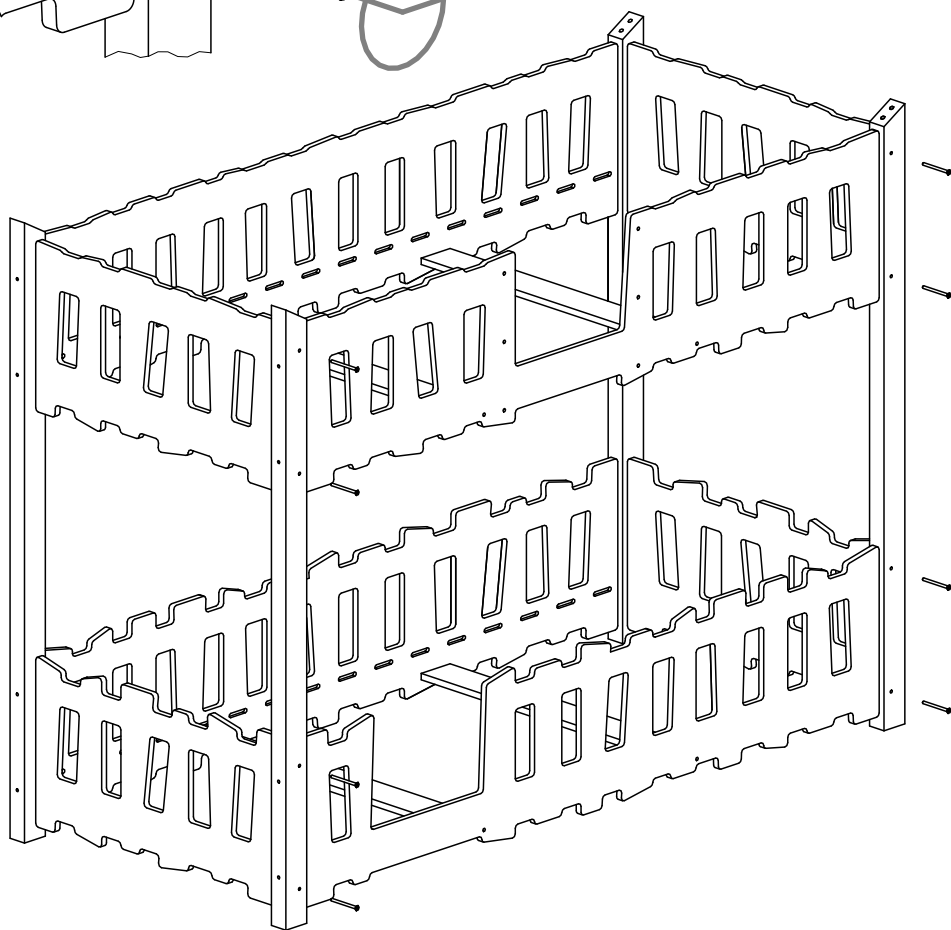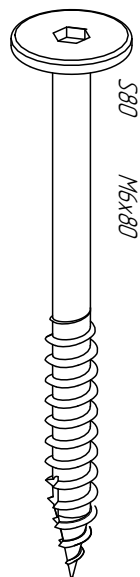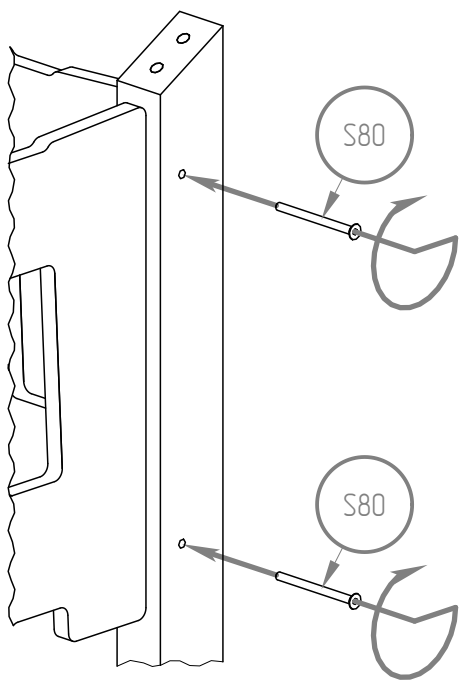

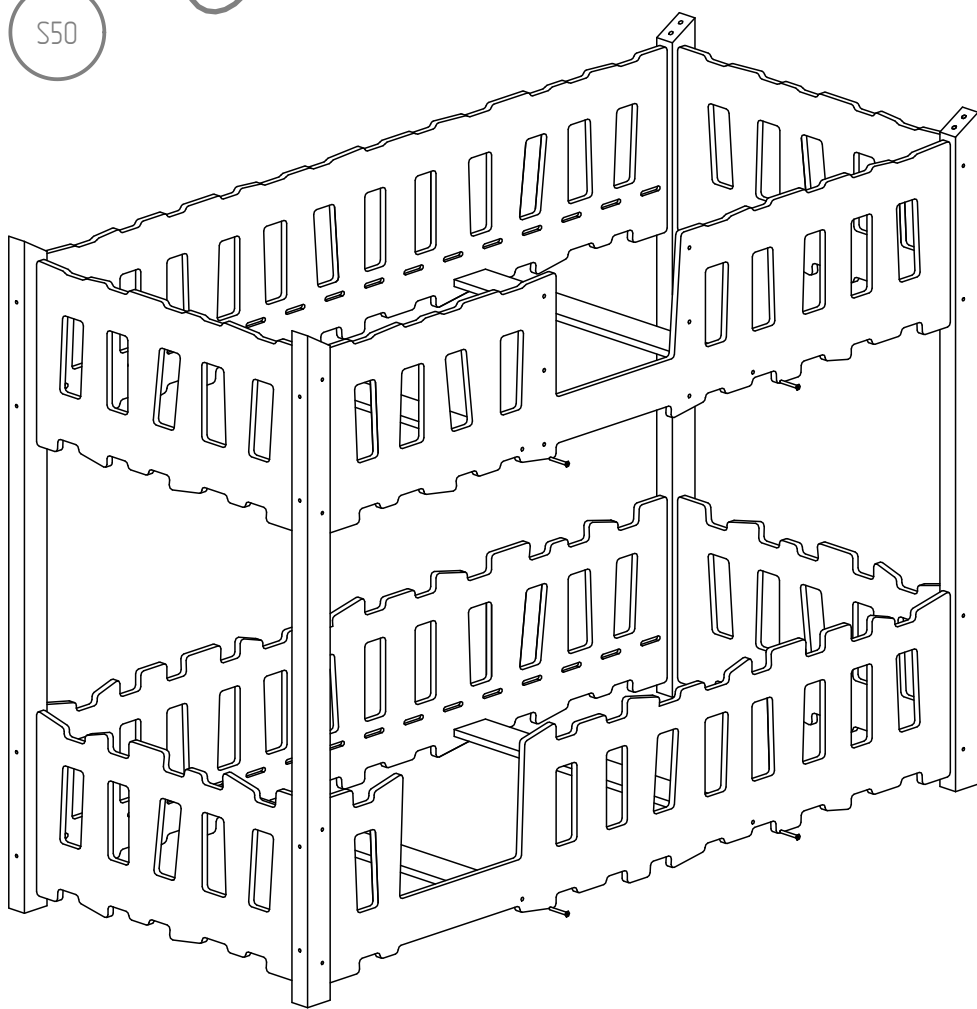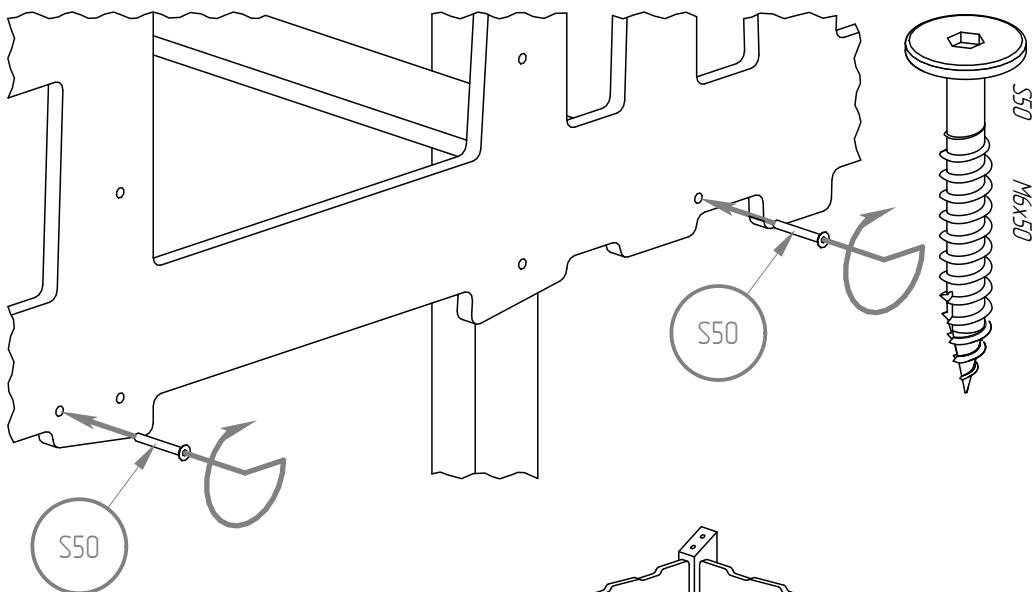

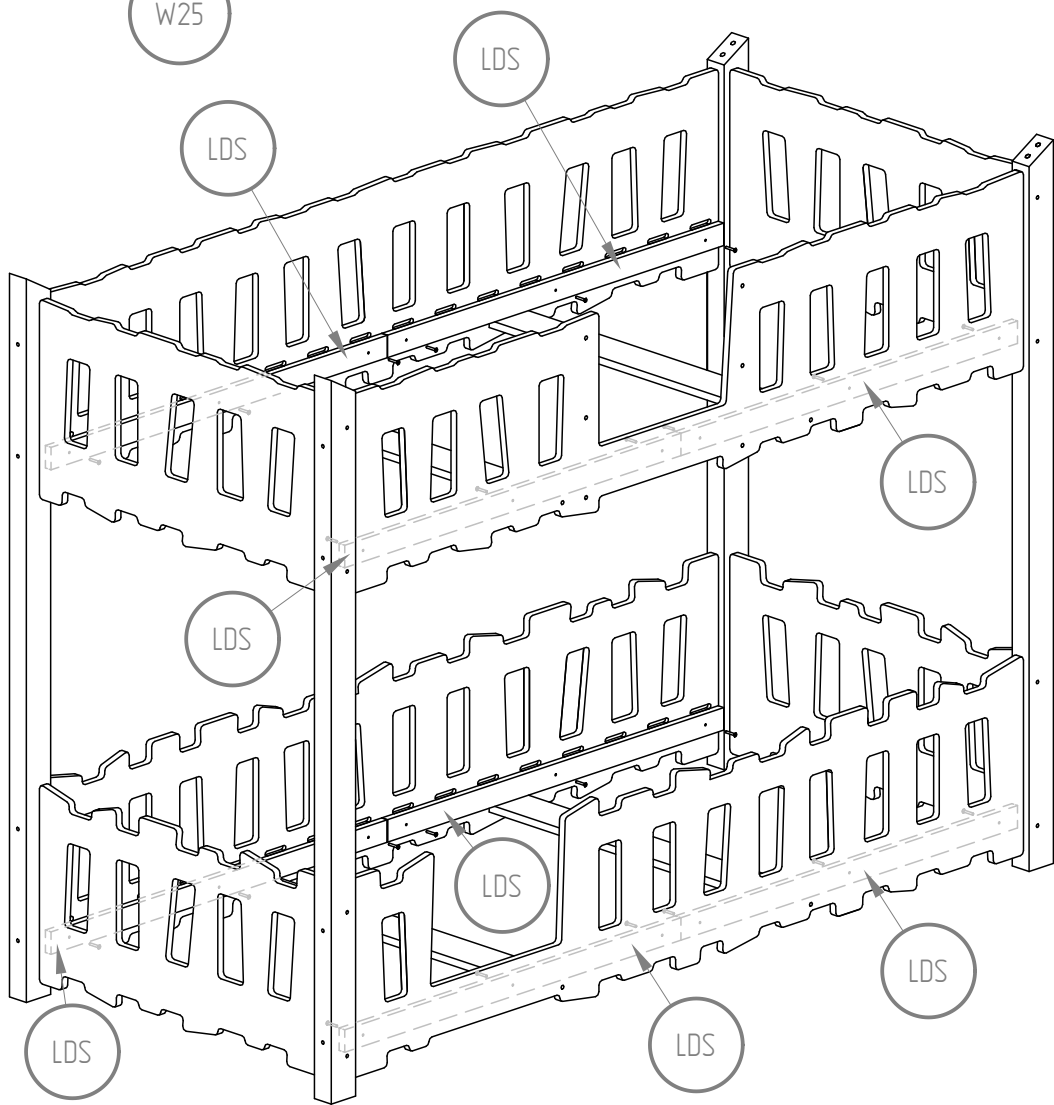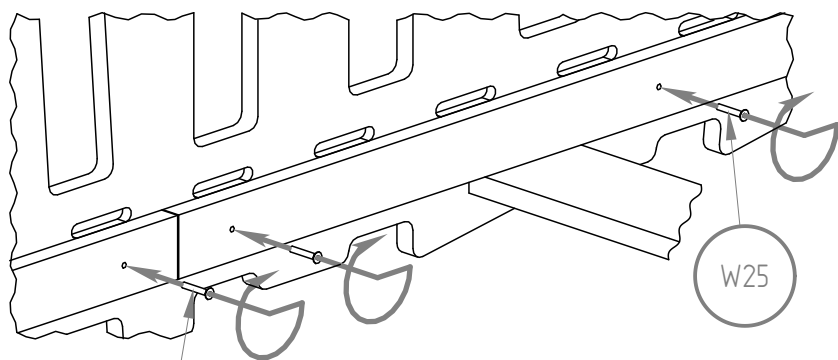

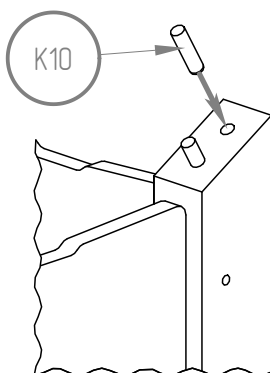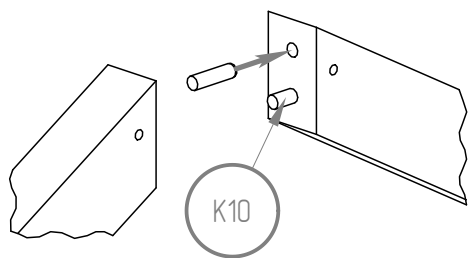

K10 M10x45

