




E L I S

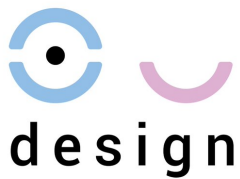


Návod na montáž

Postel Domeček Clasic

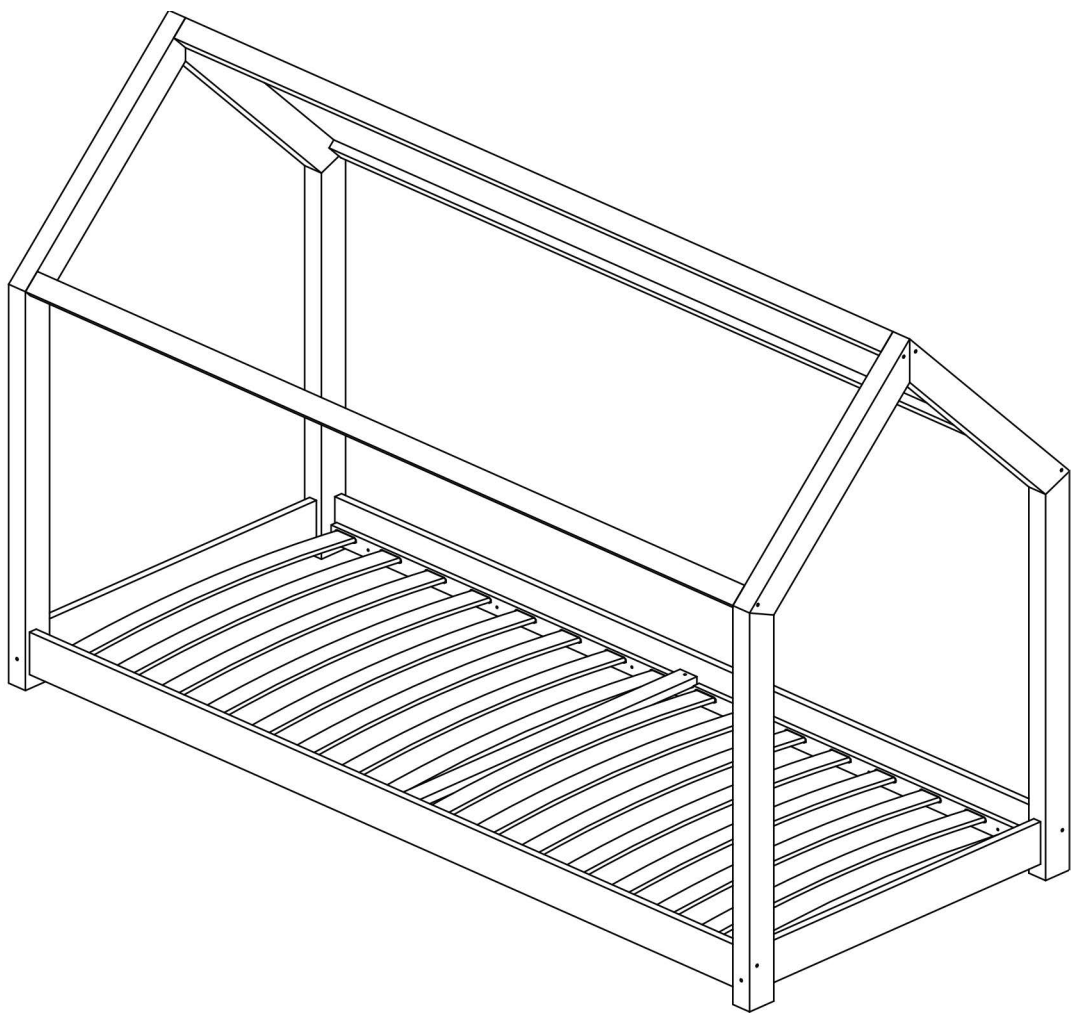


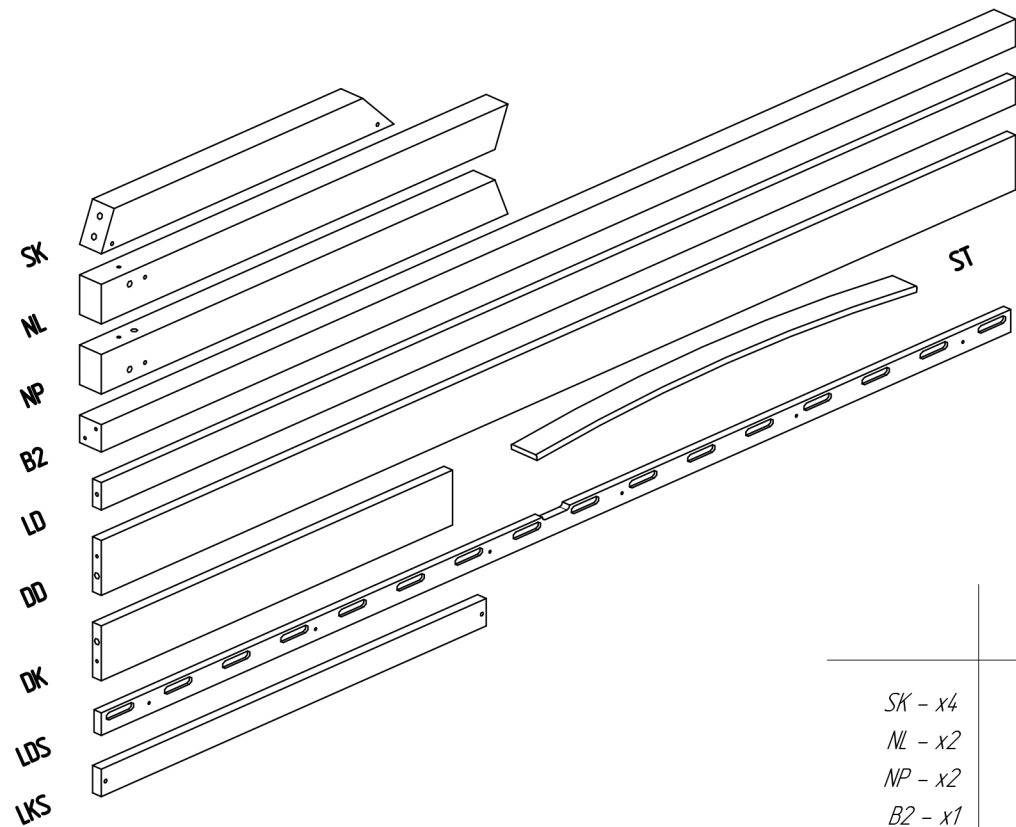

- | | |
|-----|----------|
| SK | - x4 |
| NL | - x2 |
| NP | - x2 |
| B2 | - x1 |
| LD | - x2 |
| DD | - x2 |
| DK | - x2 |
| LDS | - x2 |
| LKS | - x1 |
| ST | - x10-16 |

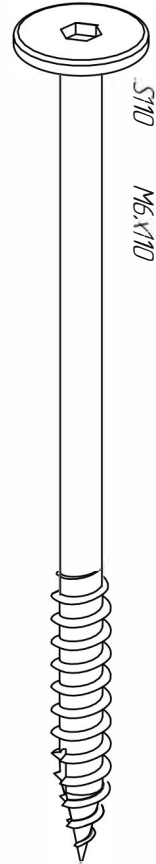

S110 M6, x110

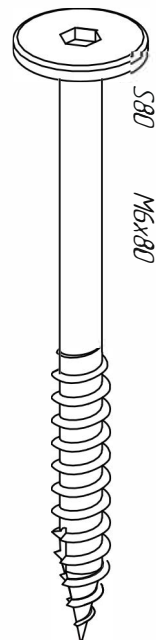

S80 M6, x80





W30 M4, x30



K10 M11, 7x4,5


G Lepidlo

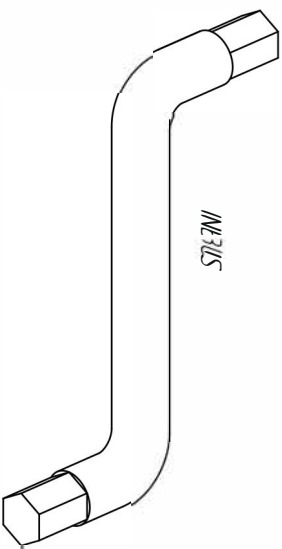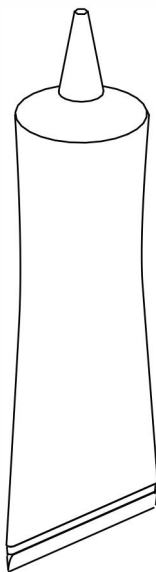


INBUS



- S110 - x4
- S80 - x12
- W30 - x14
- K10 - x20
- G - x3
- INBUS - x1


Počet otvorů pro vložení roštových lamel a počet dílů ST.

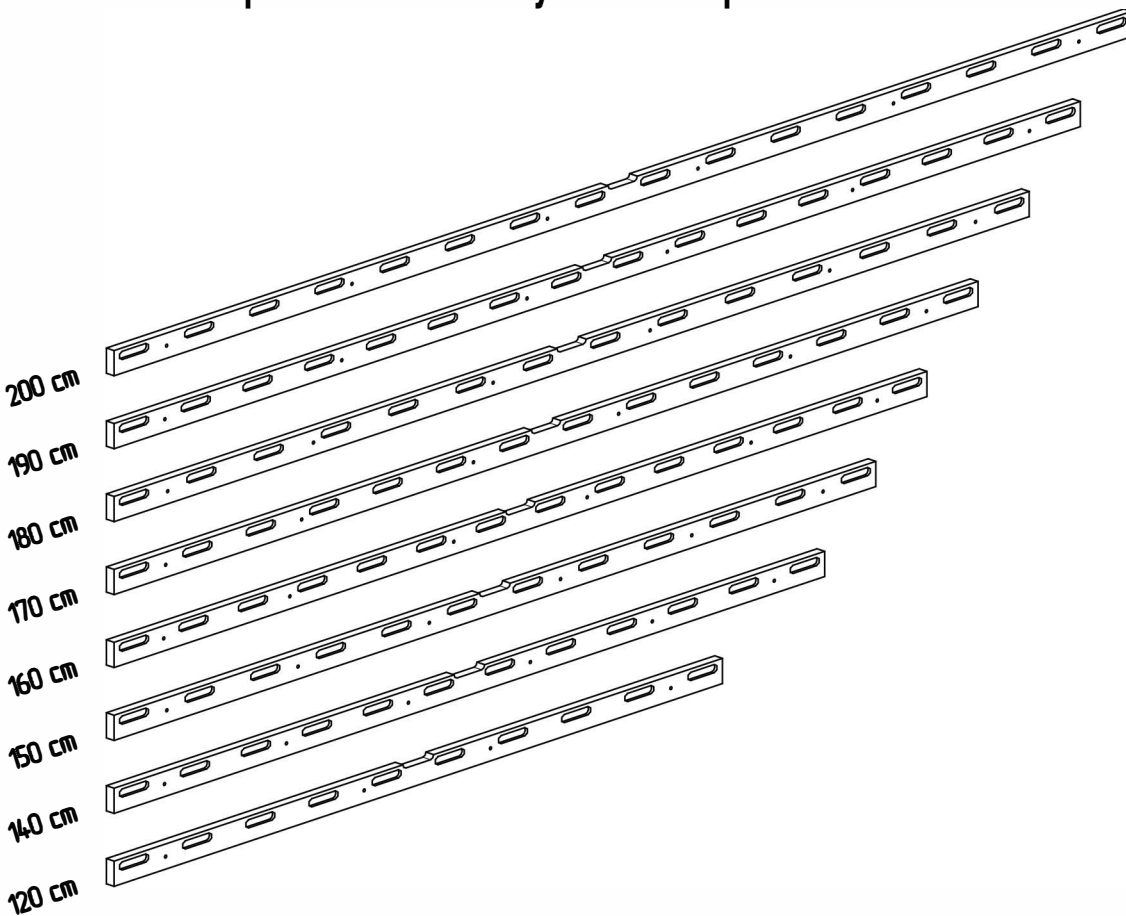


Délka	QT
200 cm	16
190 cm	16
180 cm	14
170 cm	14
160 cm	14
150 cm	12
140 cm	12
120 cm	10

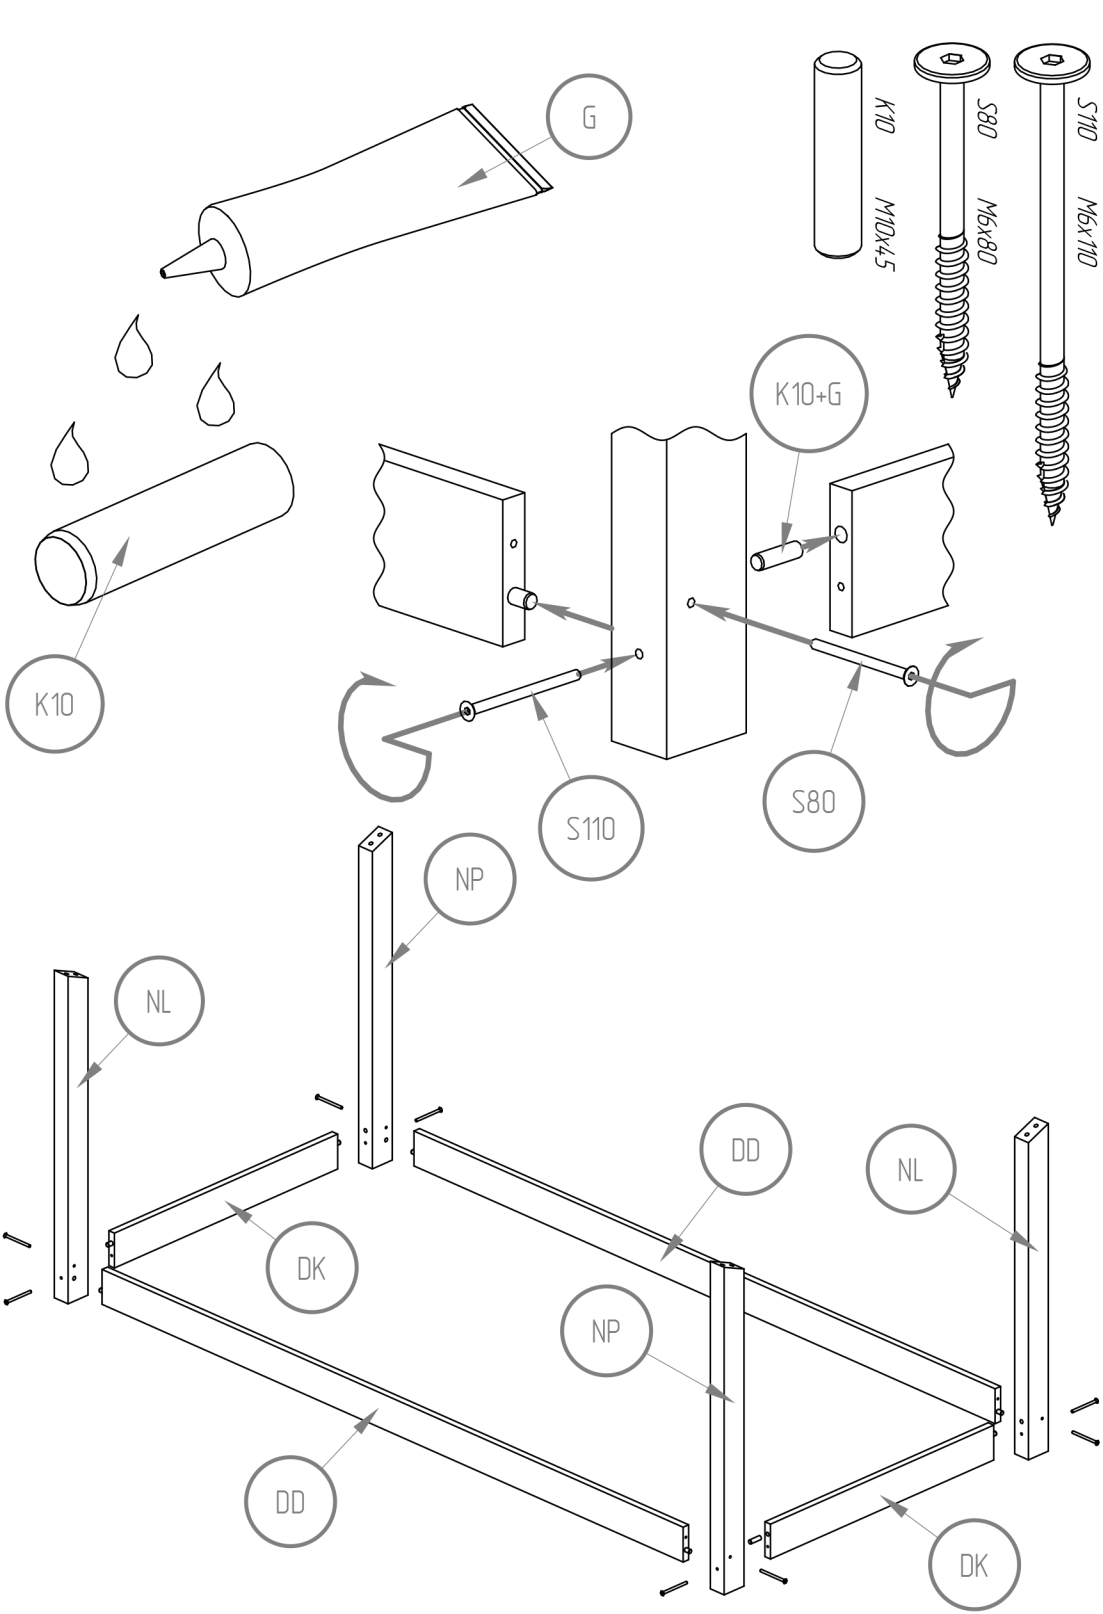

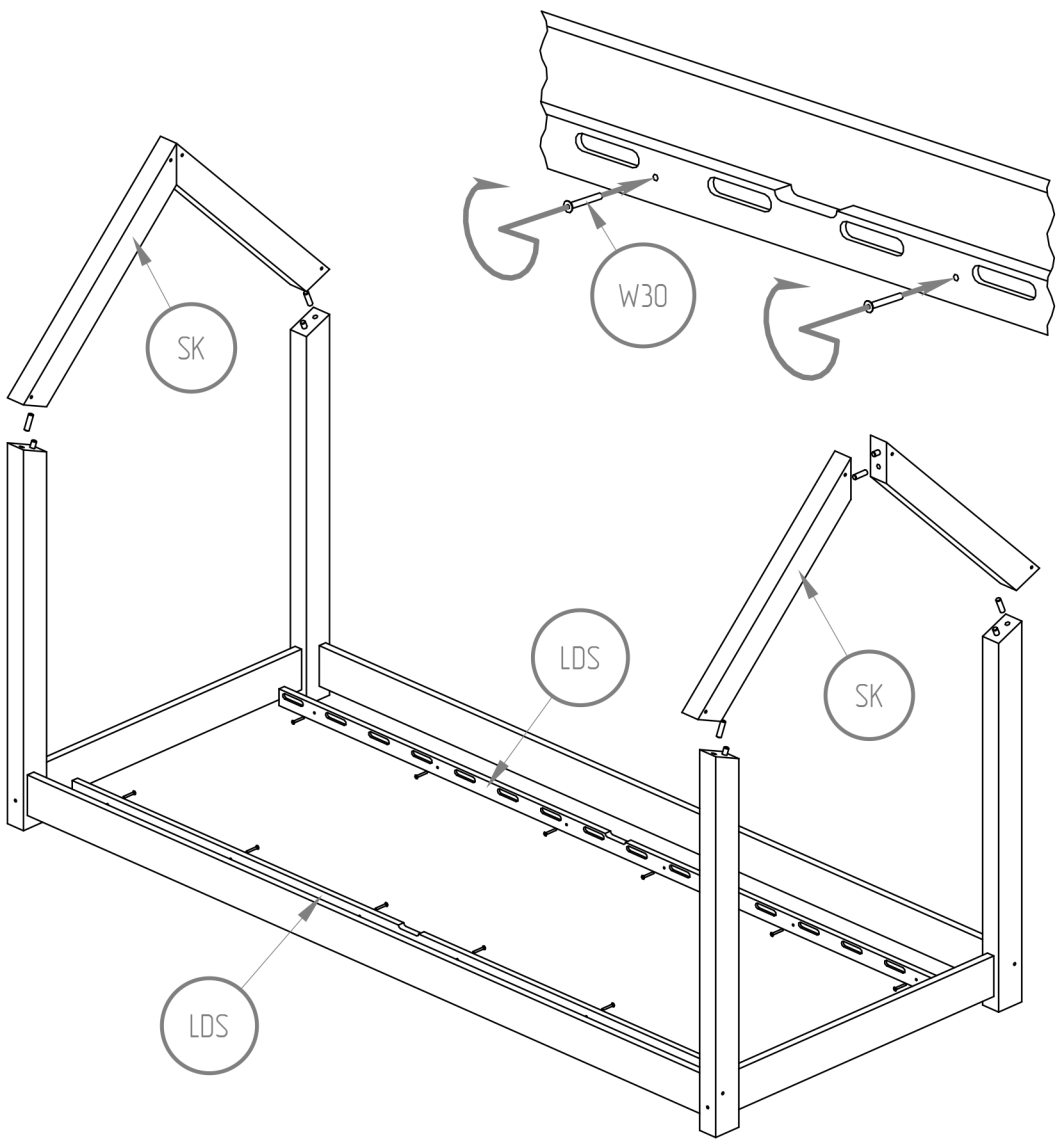
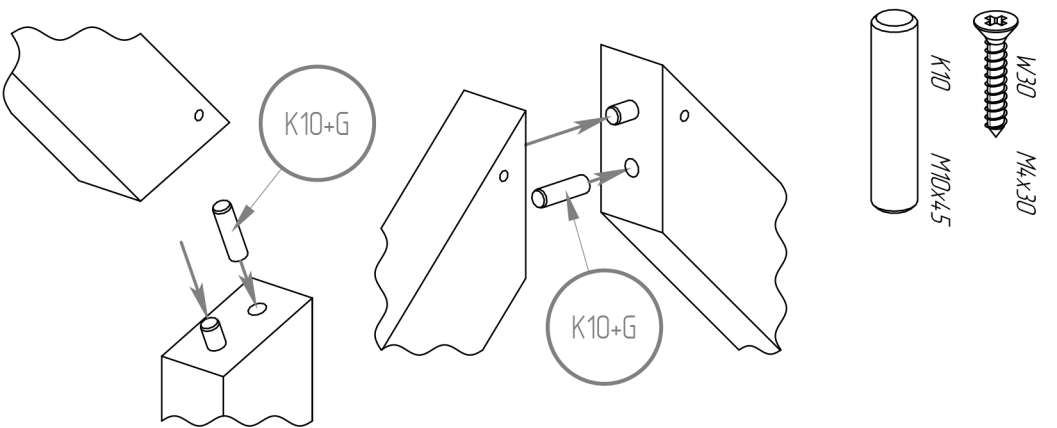


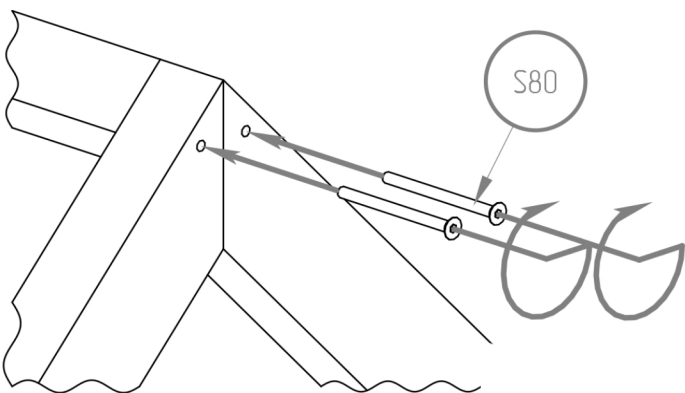

S80




ANGLE BAR

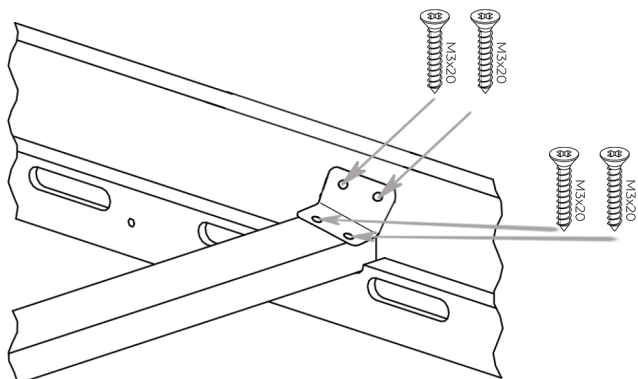

M3x20

M3x20


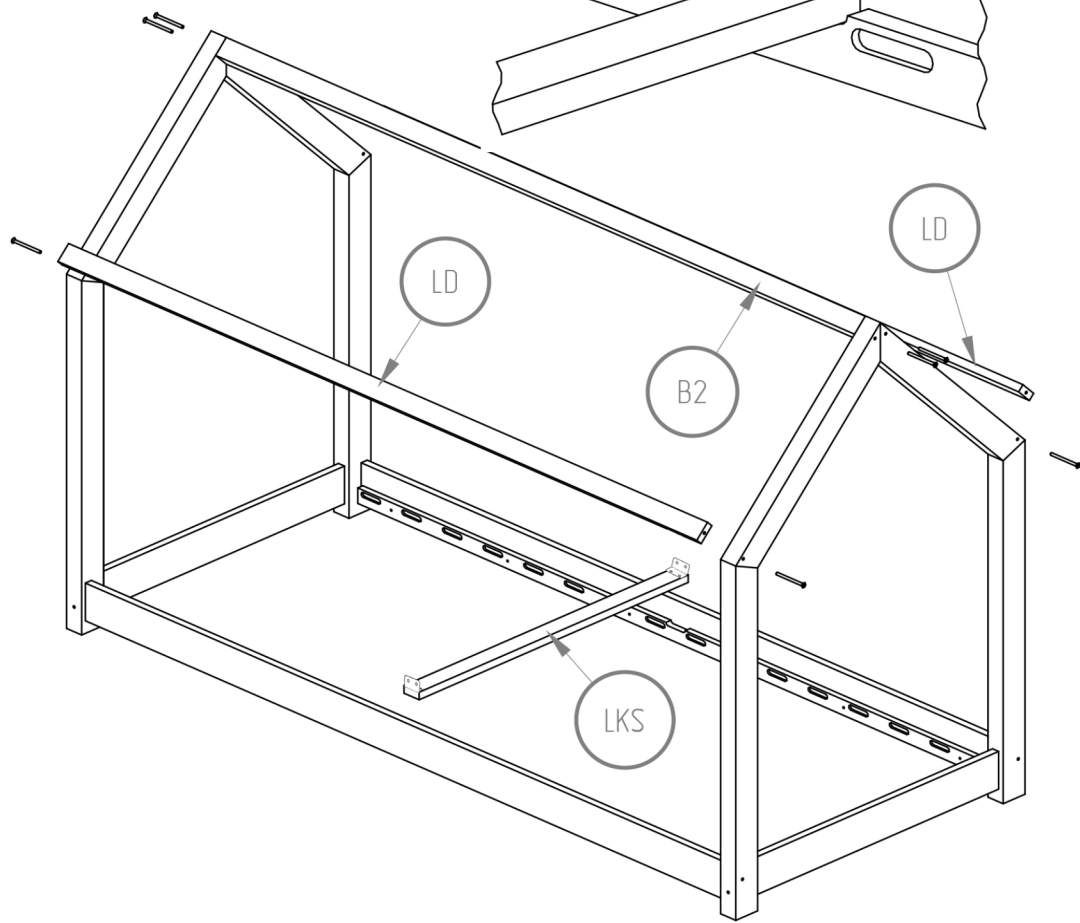


LD




B2

LD





LKS

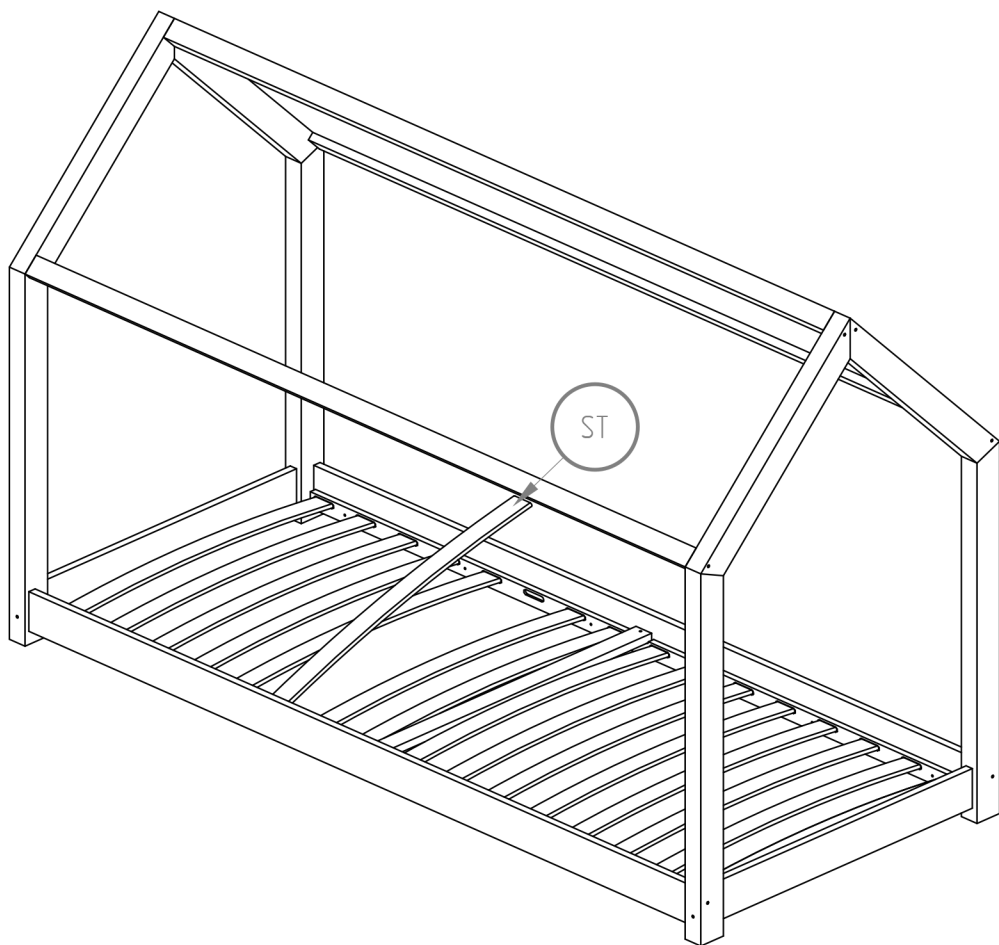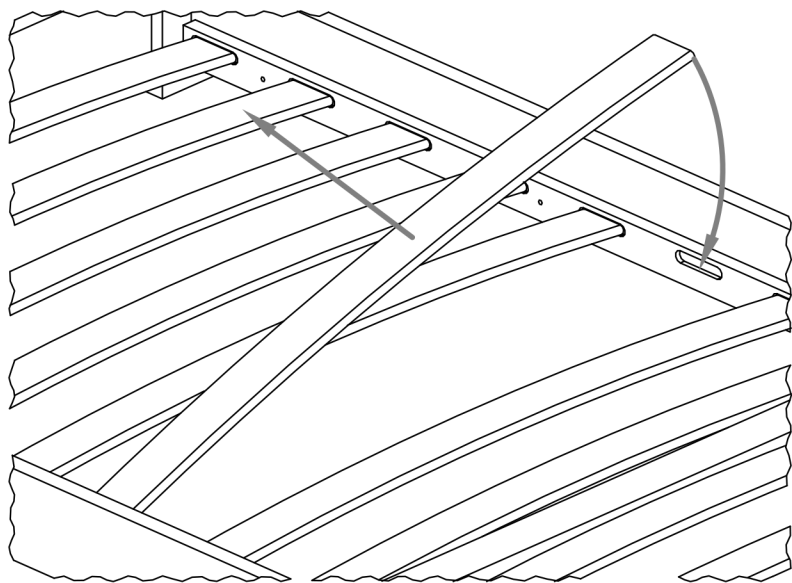


*Instalace postelí o šířce přes 100 cm,
doplňujeme tuto instrukci.*

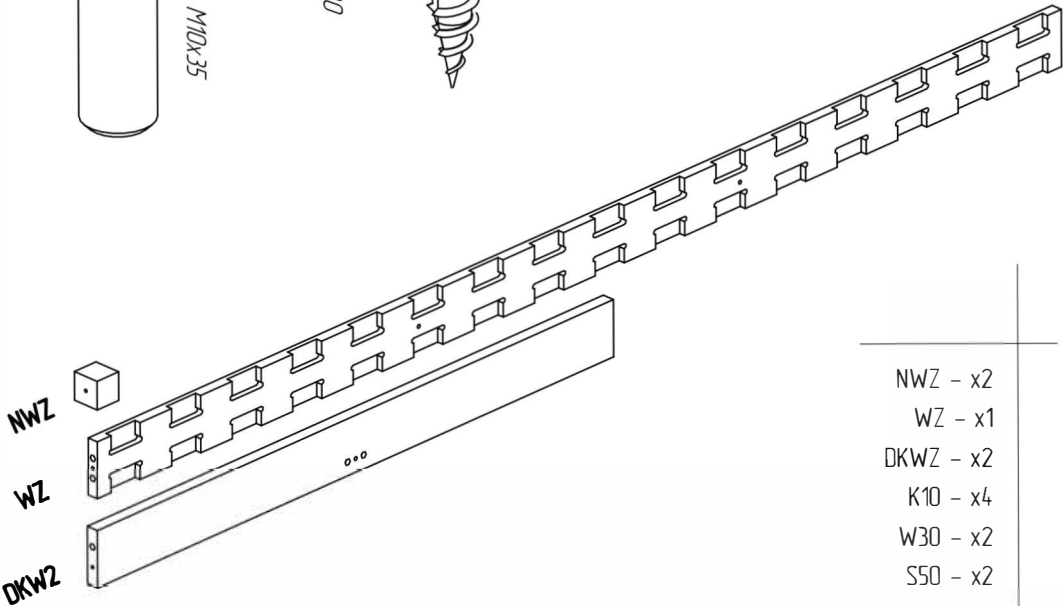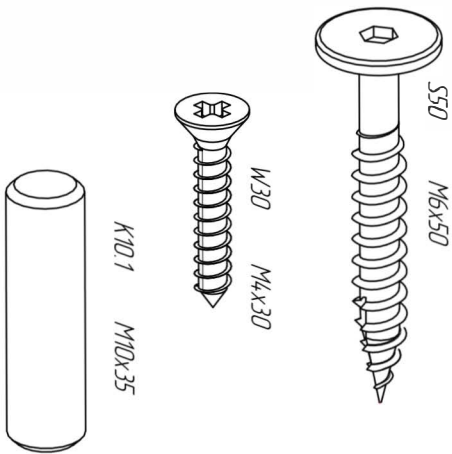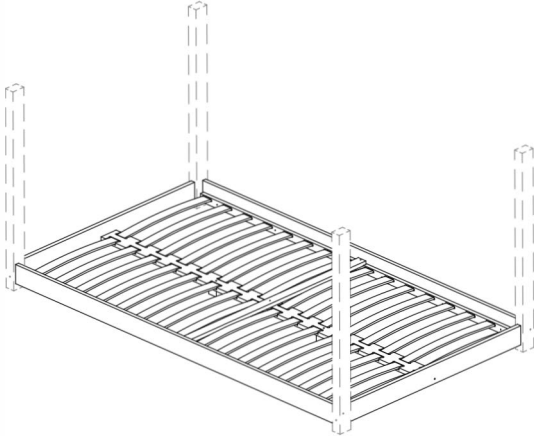



NWZ	- x2
WZ	- x1
DKWZ	- x2
K10	- x4
W30	- x2
S50	- x2

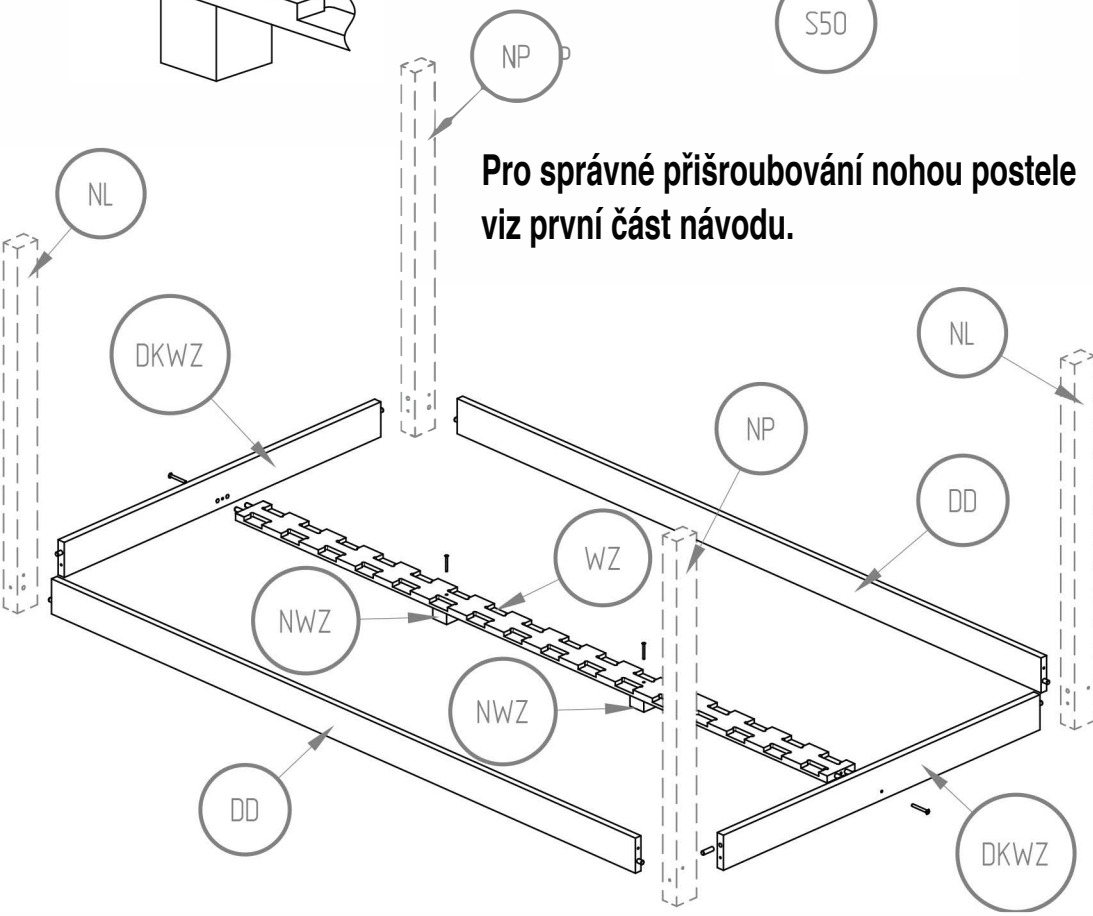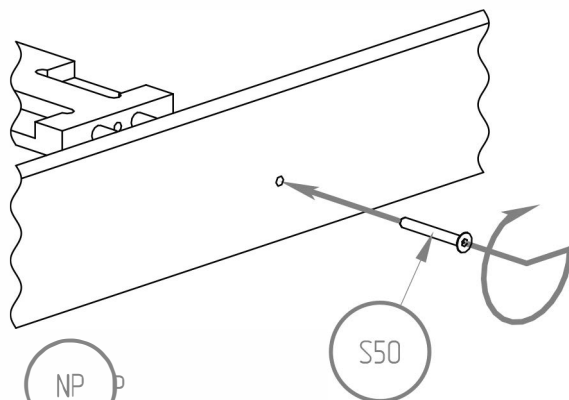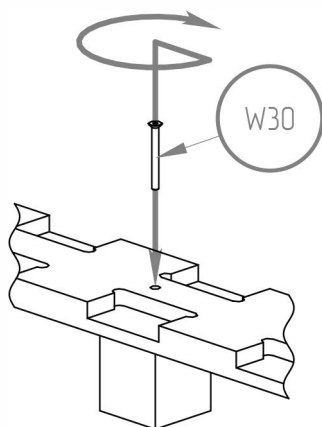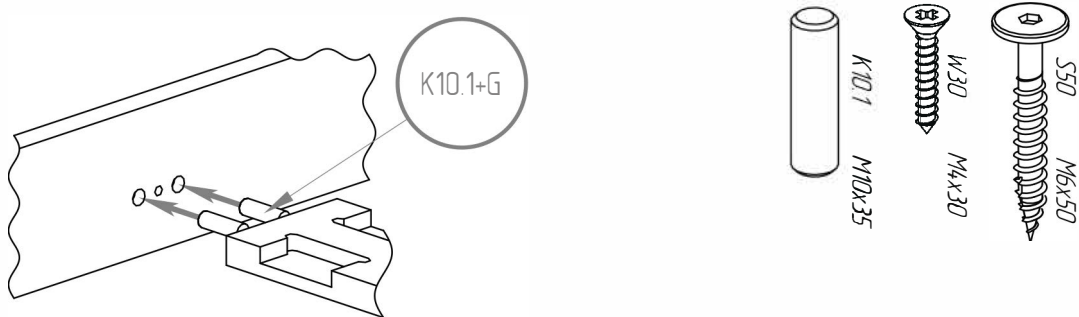

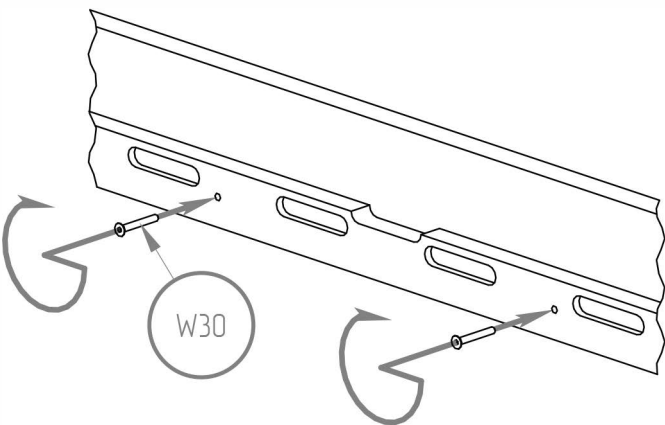


**Pro správnou instalaci všech prvků si
prosím přečtěte první část návodu.**

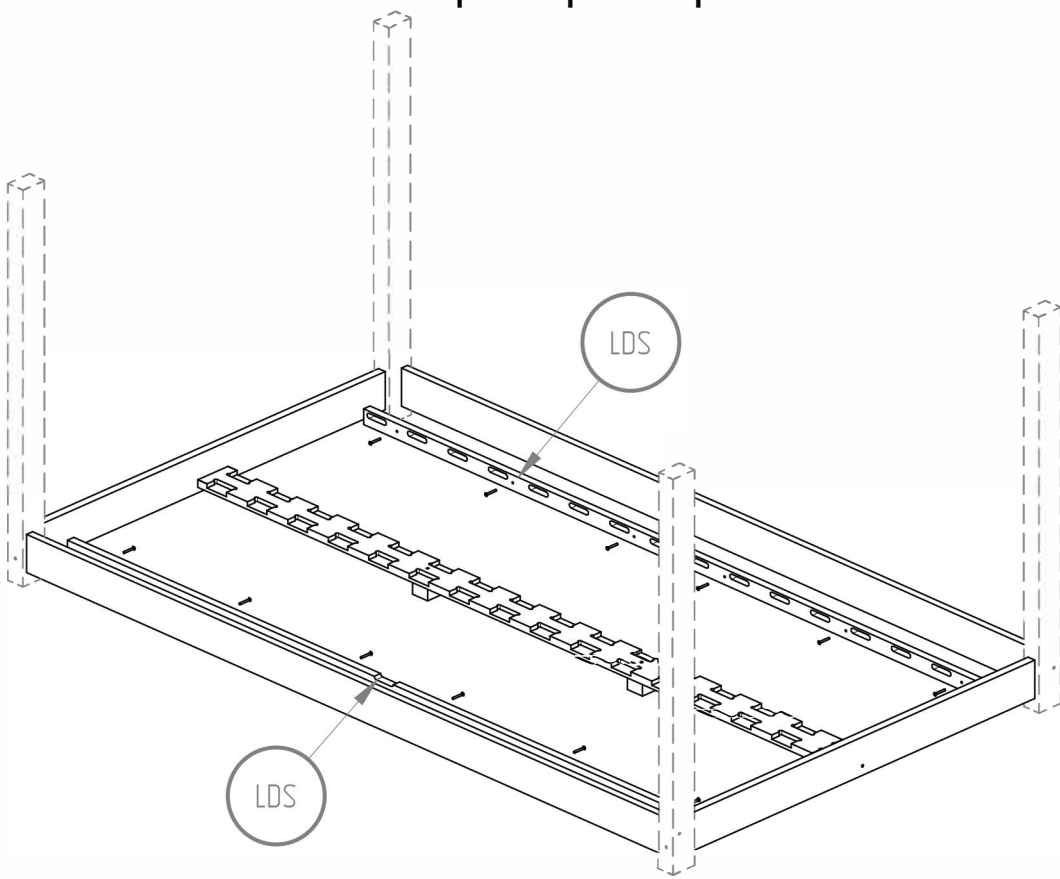





ANGLE BAR

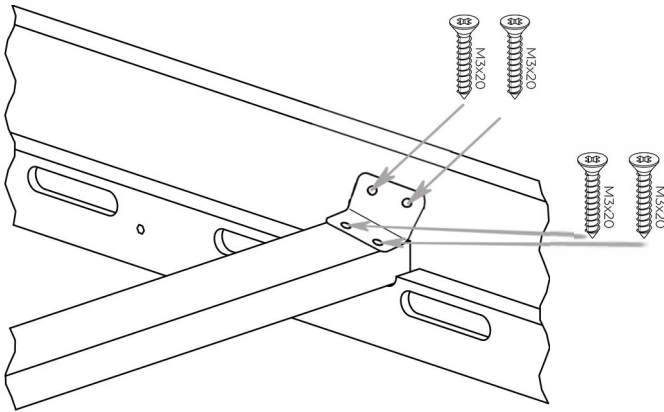

**Pro správnou instalaci všech prvků si
prosím přečtěte první část návodu.**

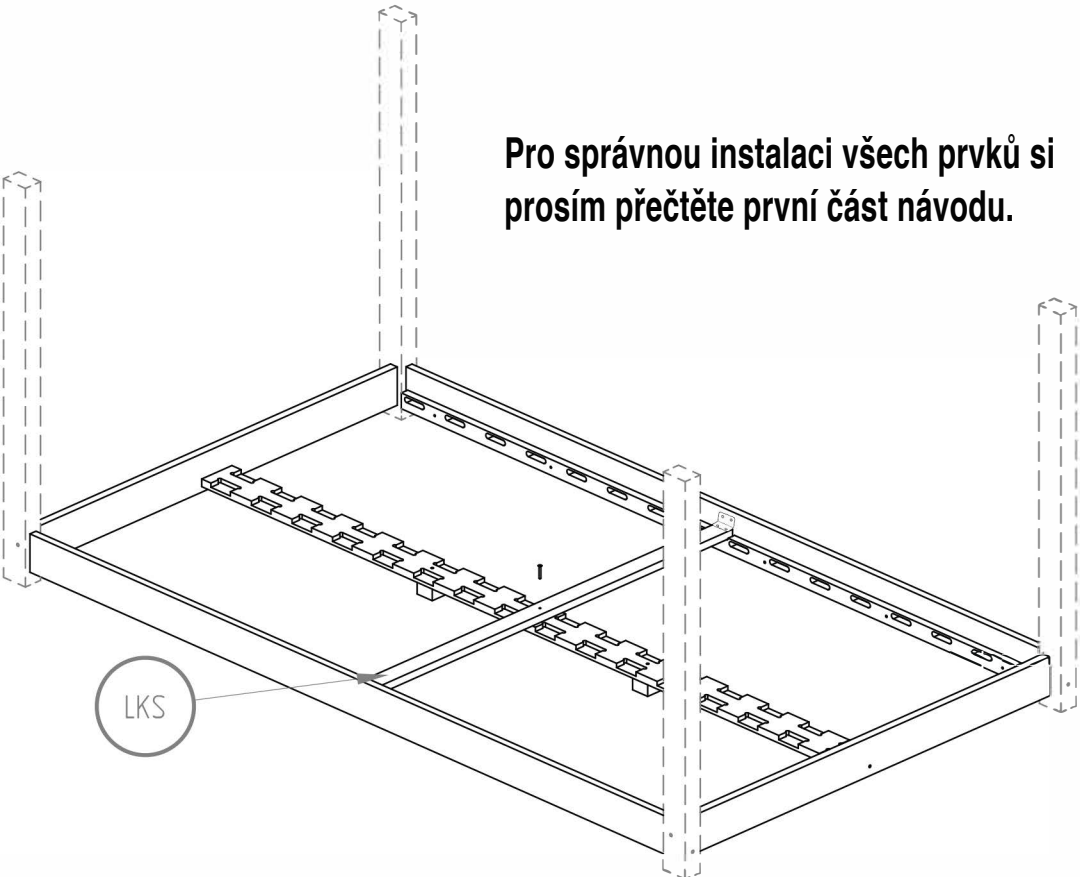

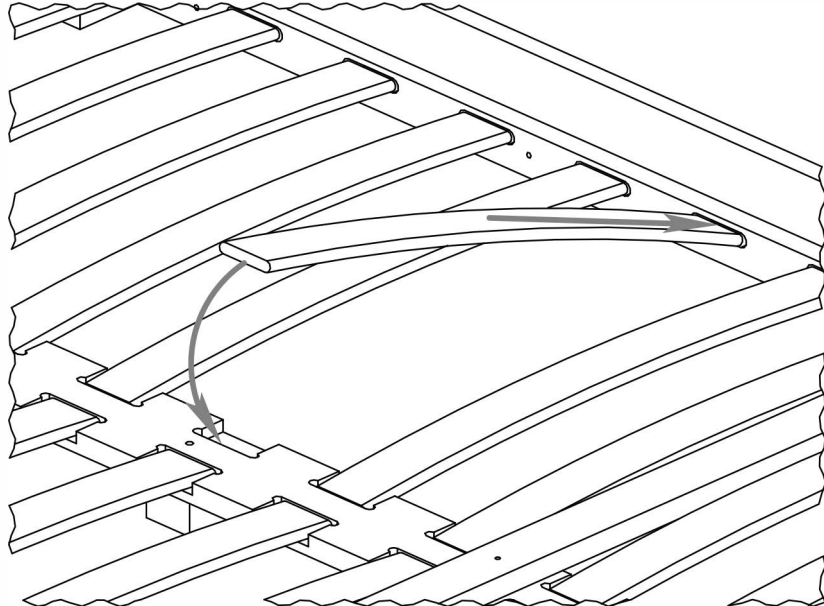

**Pro správnou instalaci všech prvků si prosím
přečtete první část návodu.**

