




E L I S

Návod na montáž



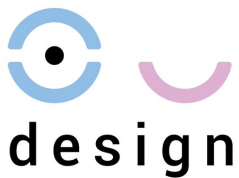


Postel Domeček classic
s komínem + zábrana


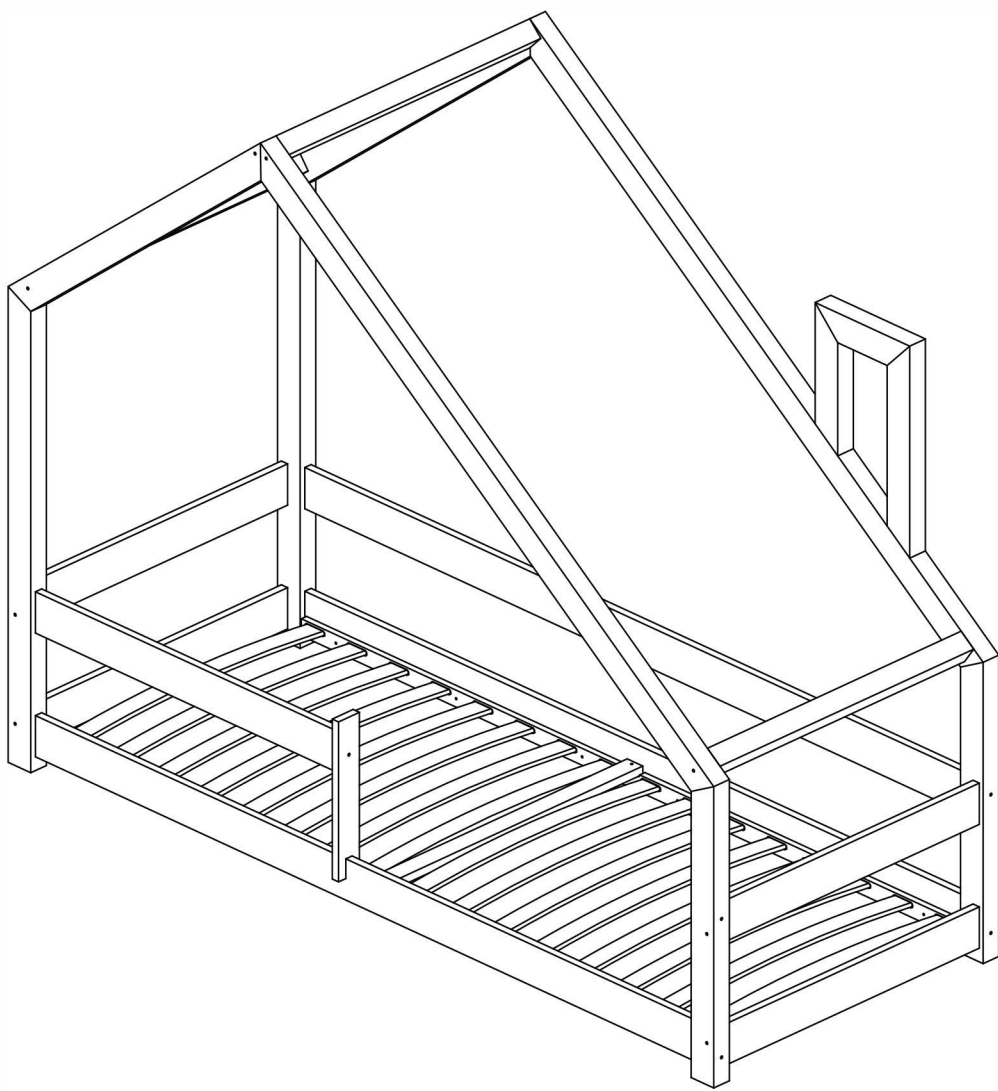


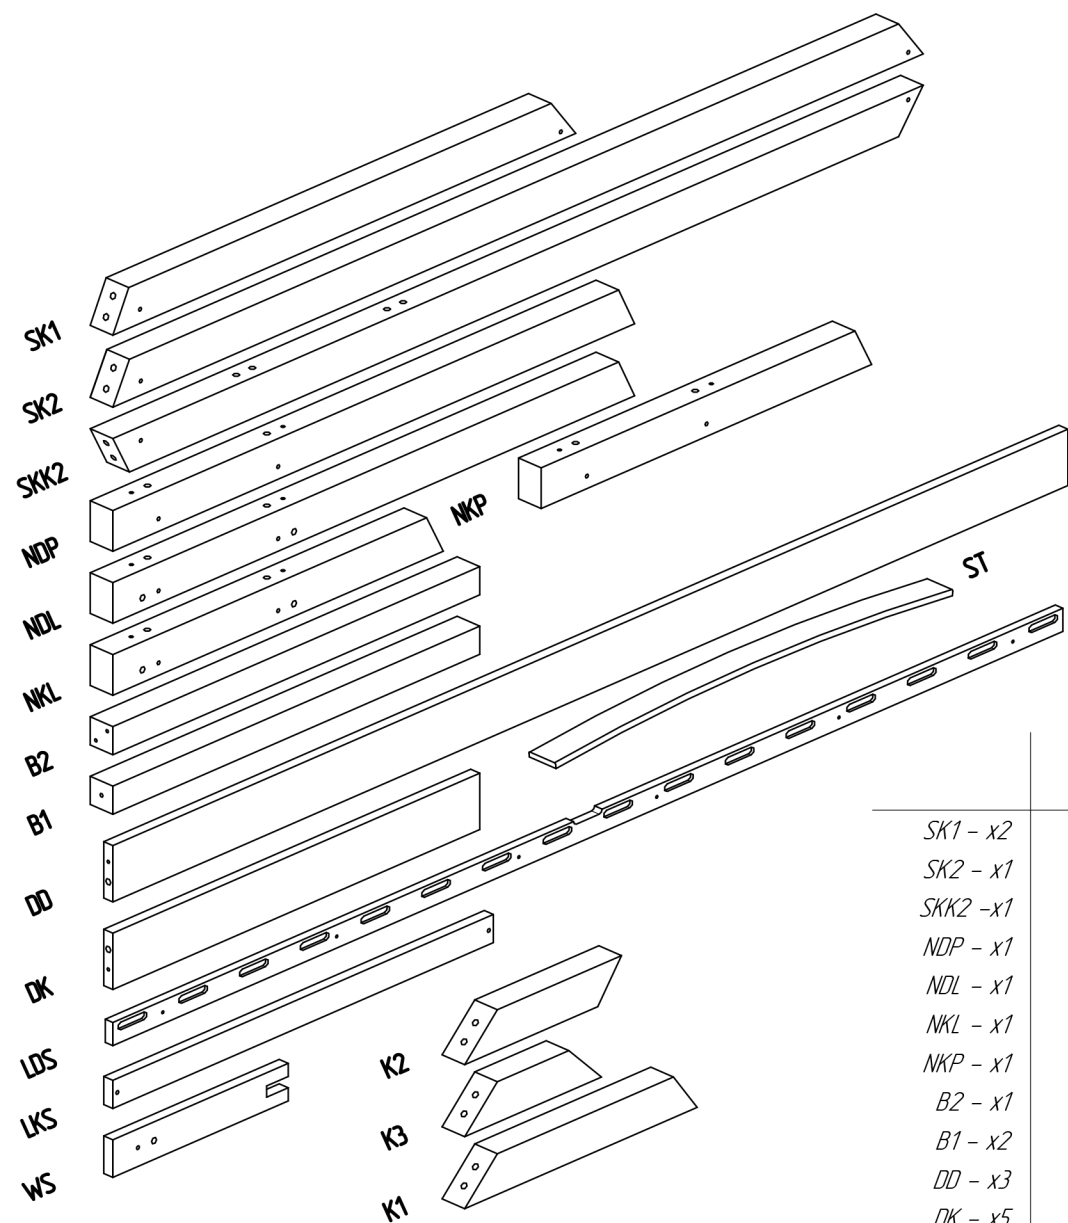

SK1 - x2
SK2 - x1
SKK2 - x1
NDP - x1
NDL - x1
NKL - x1
NKP - x1
B2 - x1
B1 - x2
DD - x3
DK - x5
WS - x1
LDS - x2
LKS - x1
ST - x10-16
K2 - x1
K3 - x1
K1 - x1

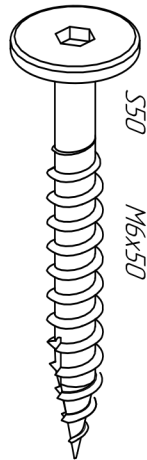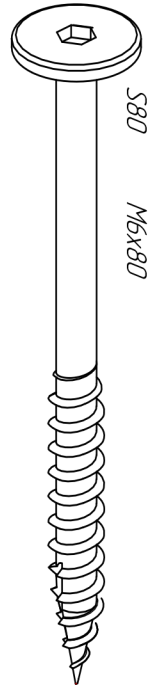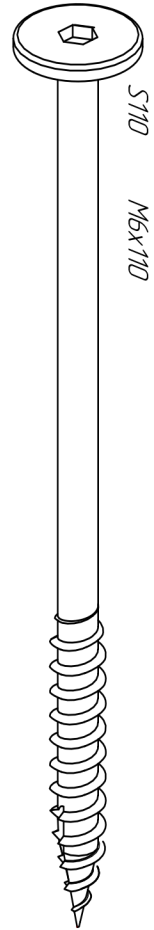

G
Glue Klej

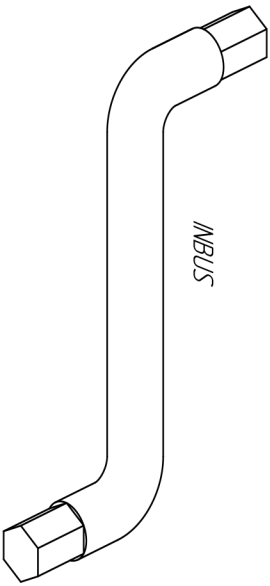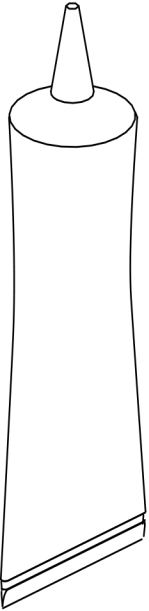

S110 - x8

S80 - x16

S50 - x1


W30 - x14

K10 - x28


G - x3


INBUS - x1


Počet otvorů pro vložení roštových lamel a počet dílů ST.

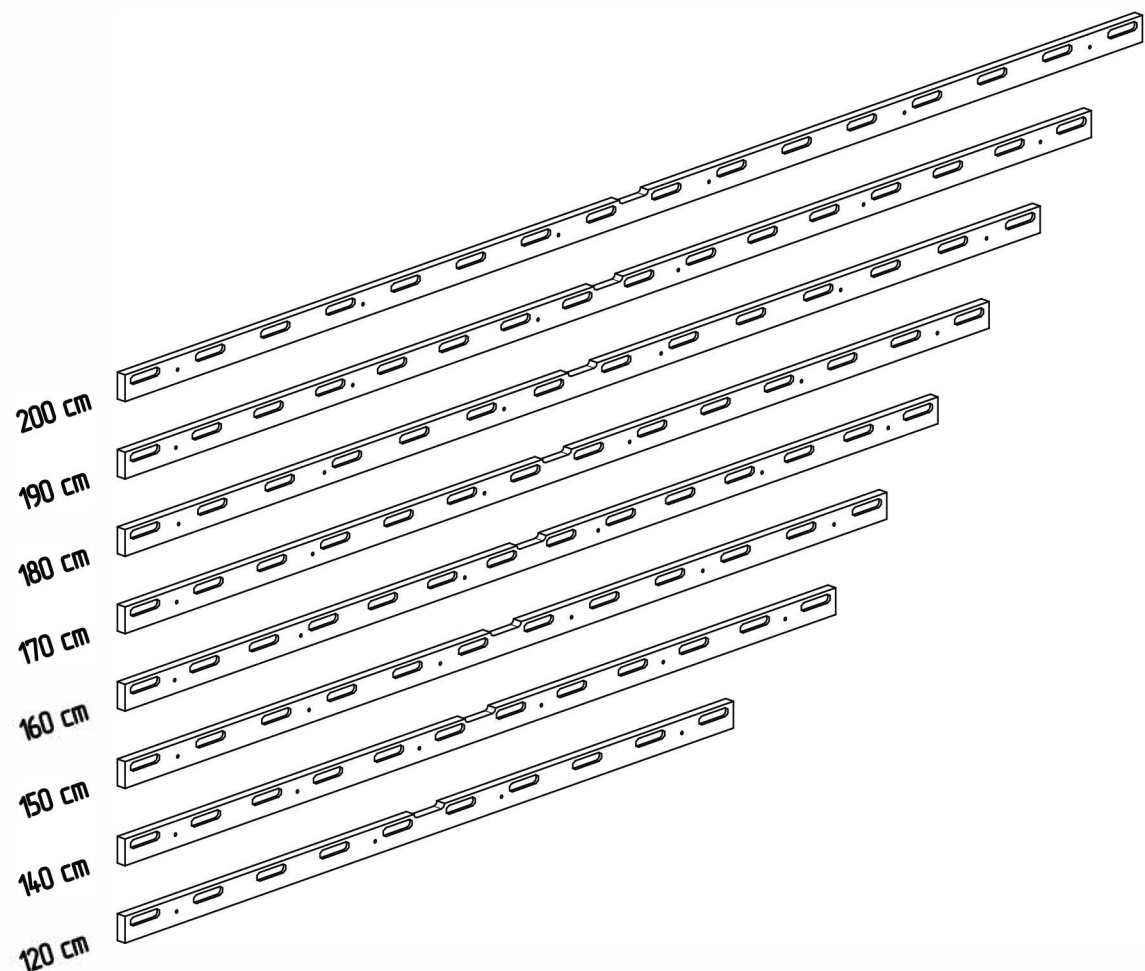




Délka	QT
200 cm	16
190 cm	16
180 cm	14
170 cm	14
160 cm	14
150 cm	12
140 cm	12
120 cm	10

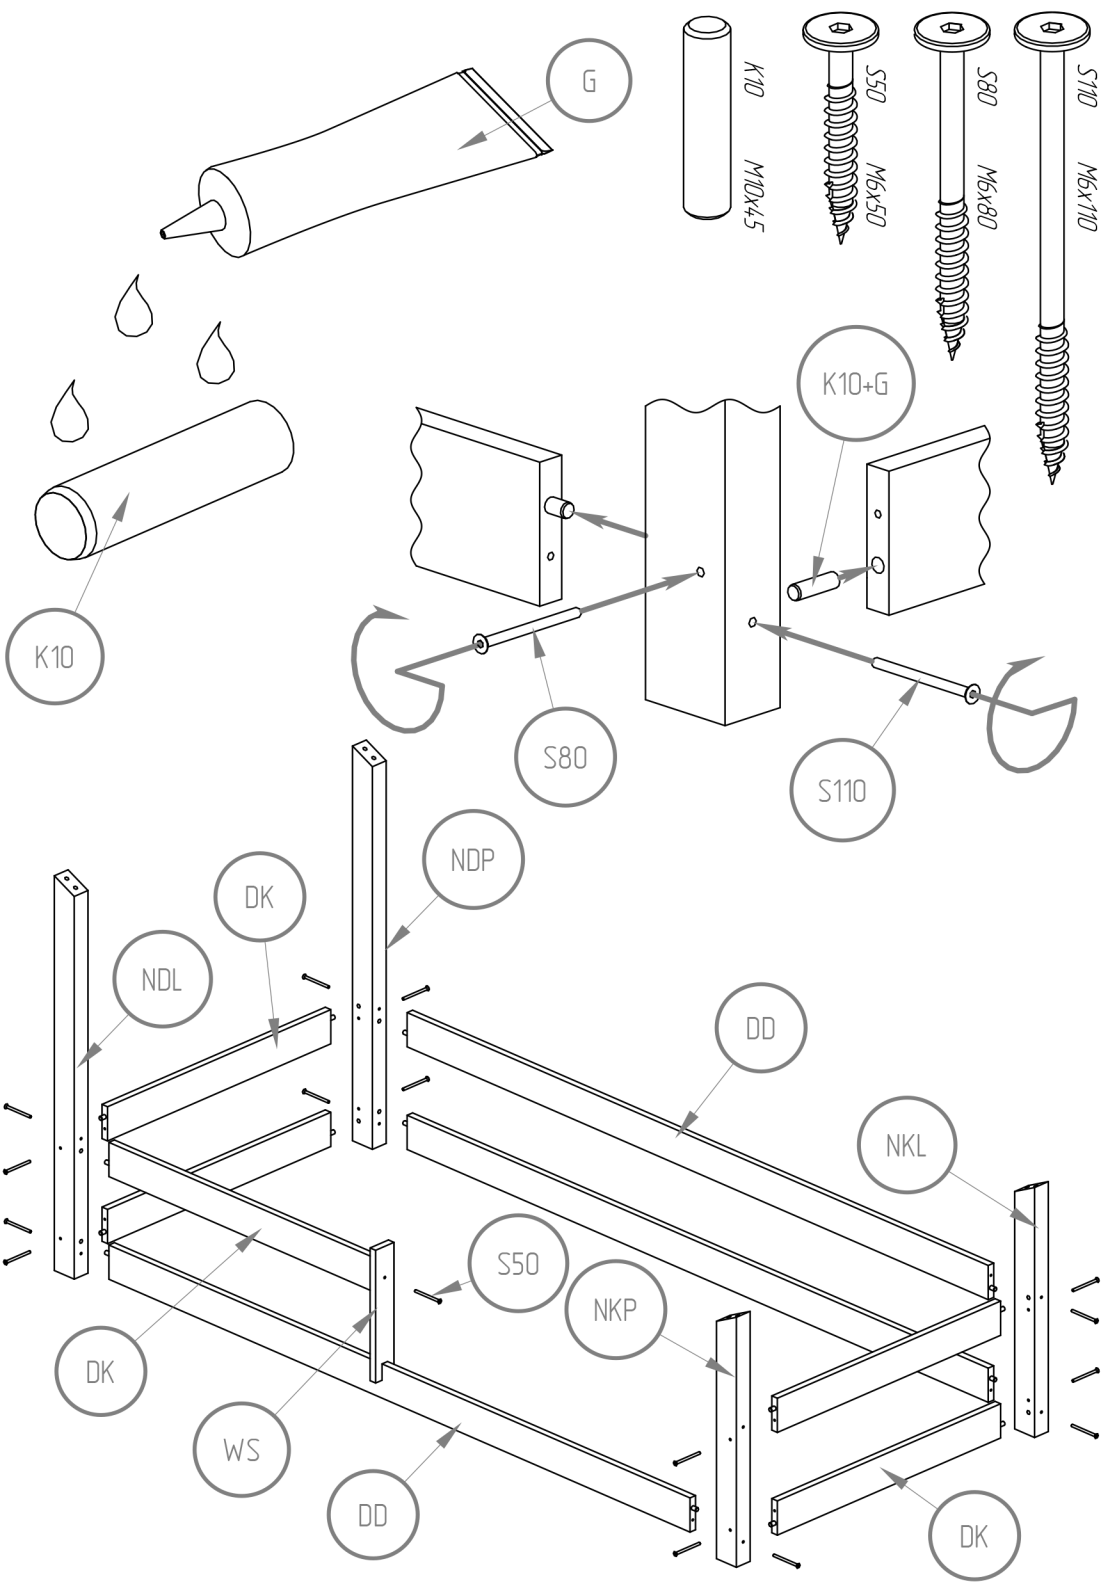



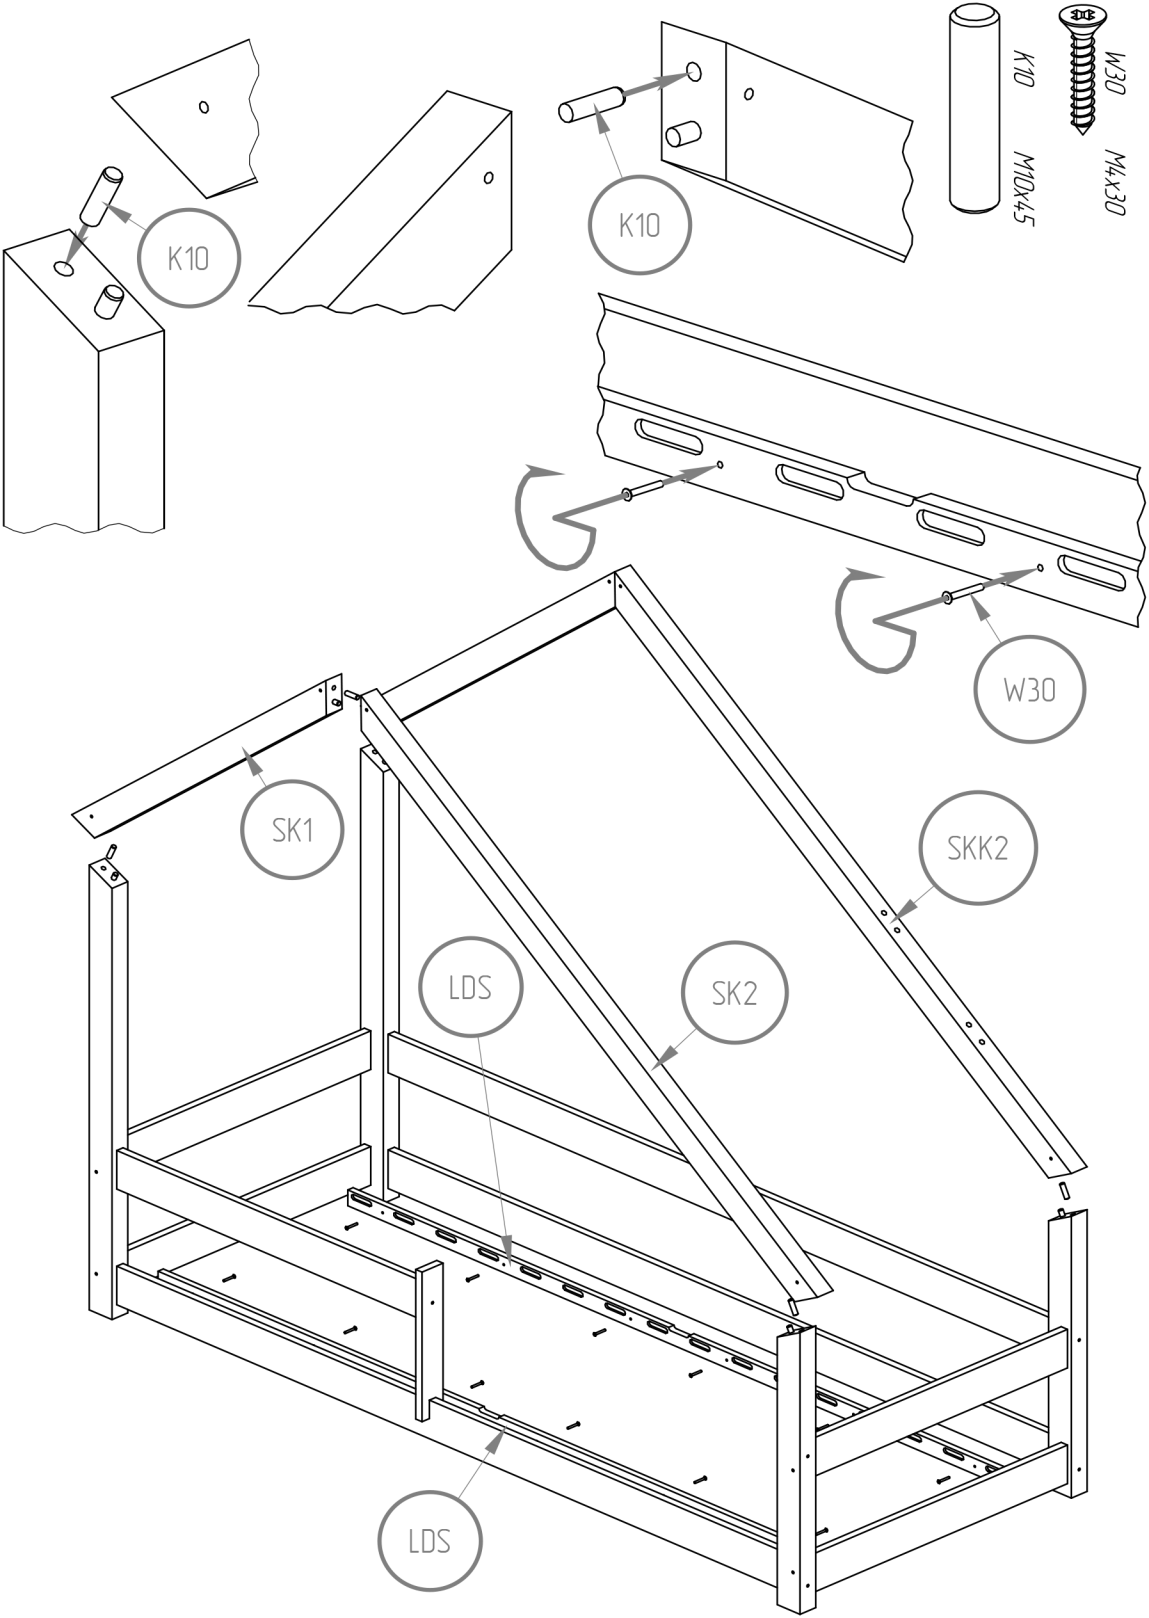


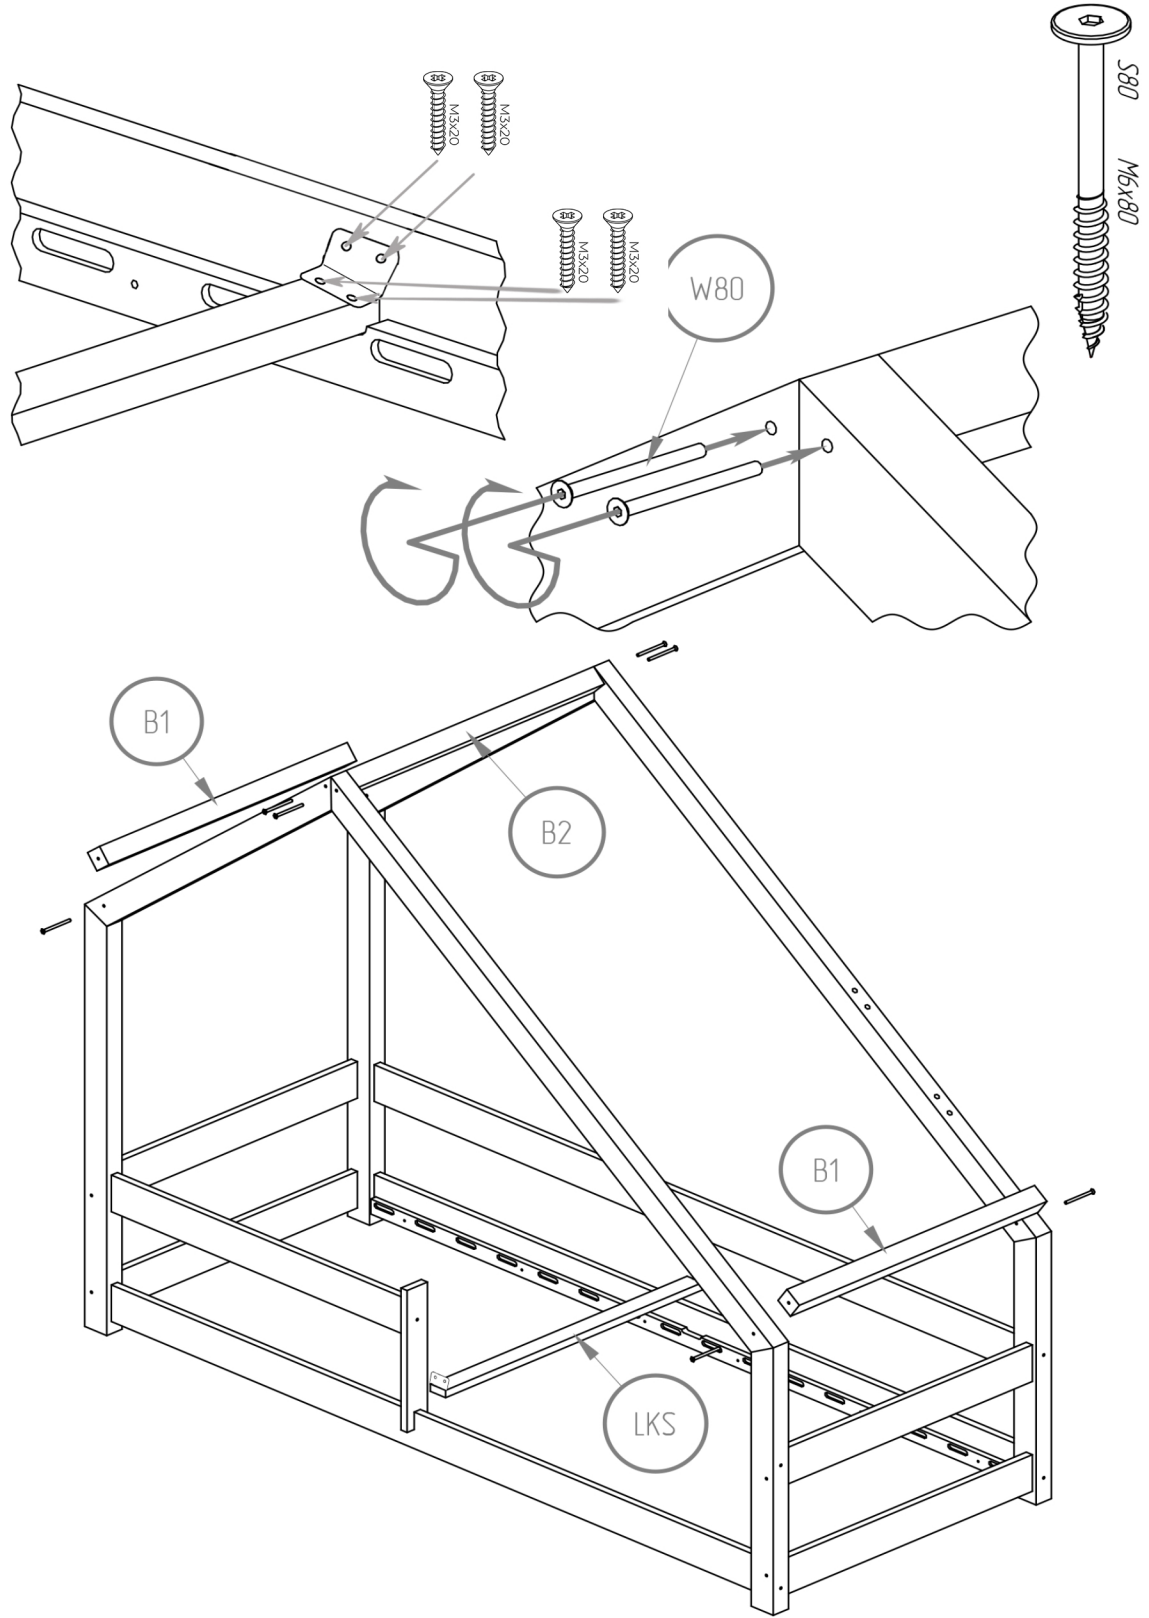

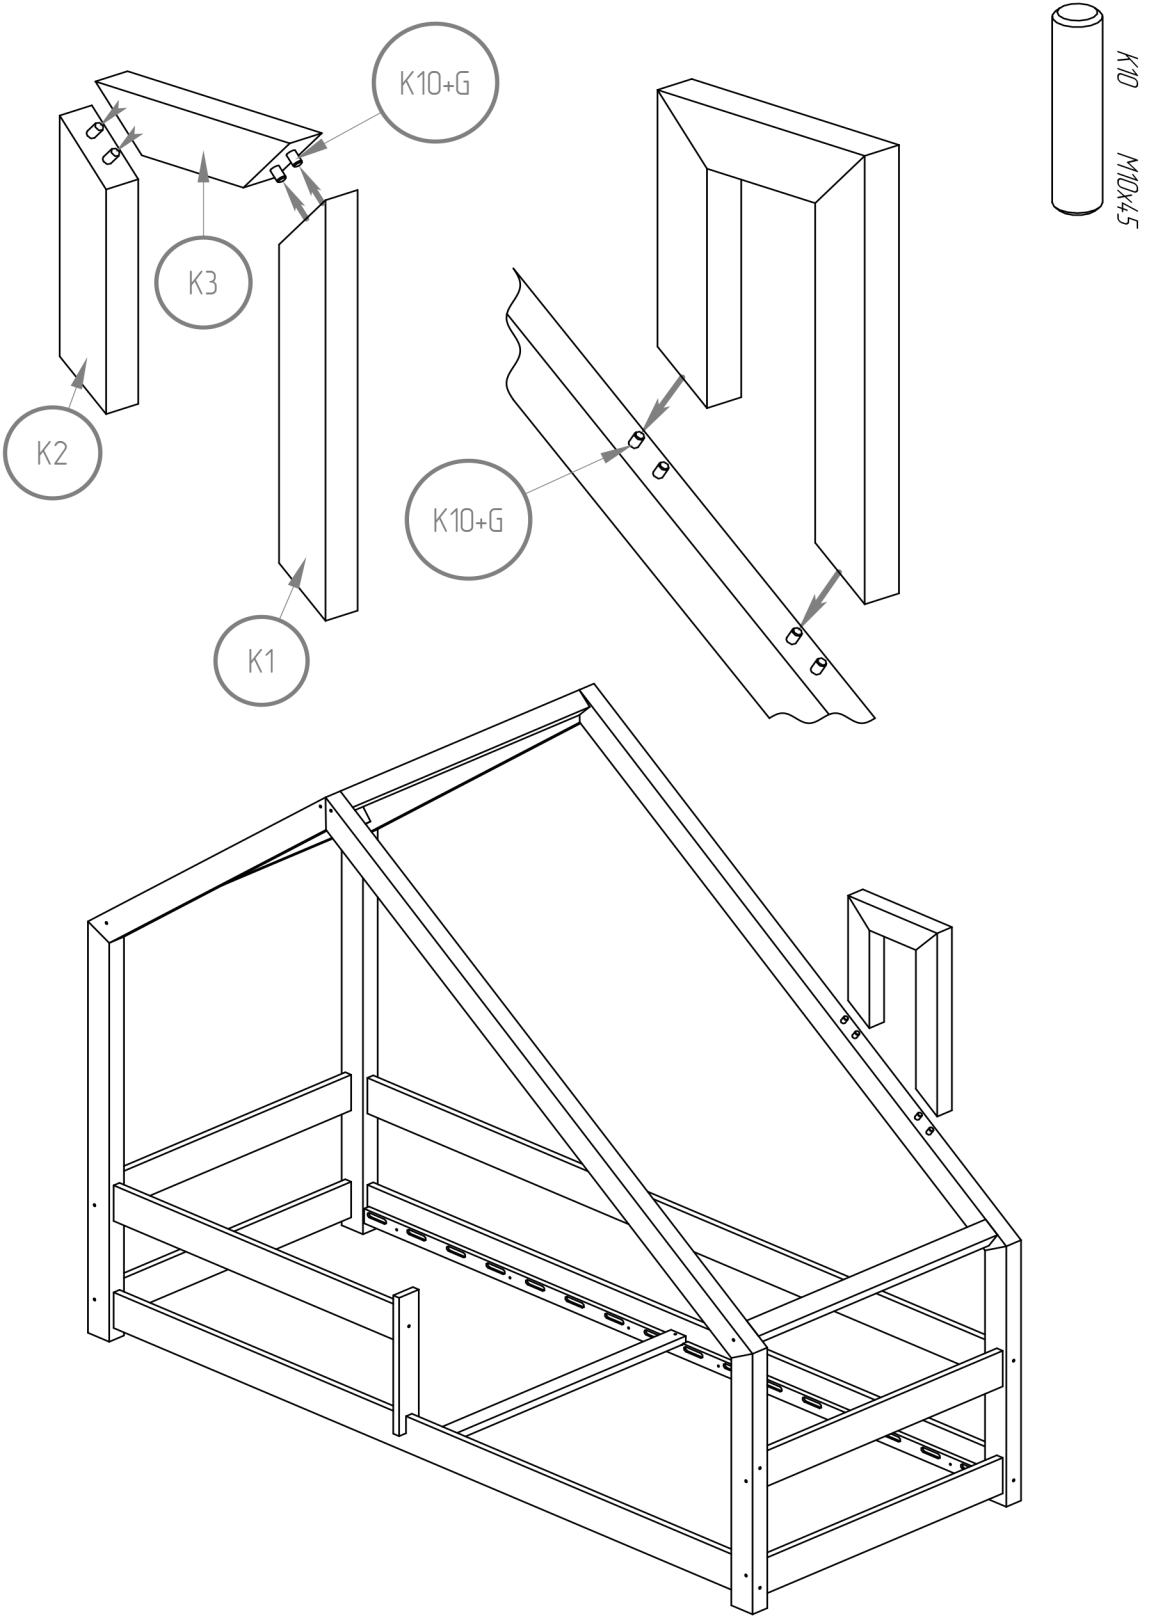

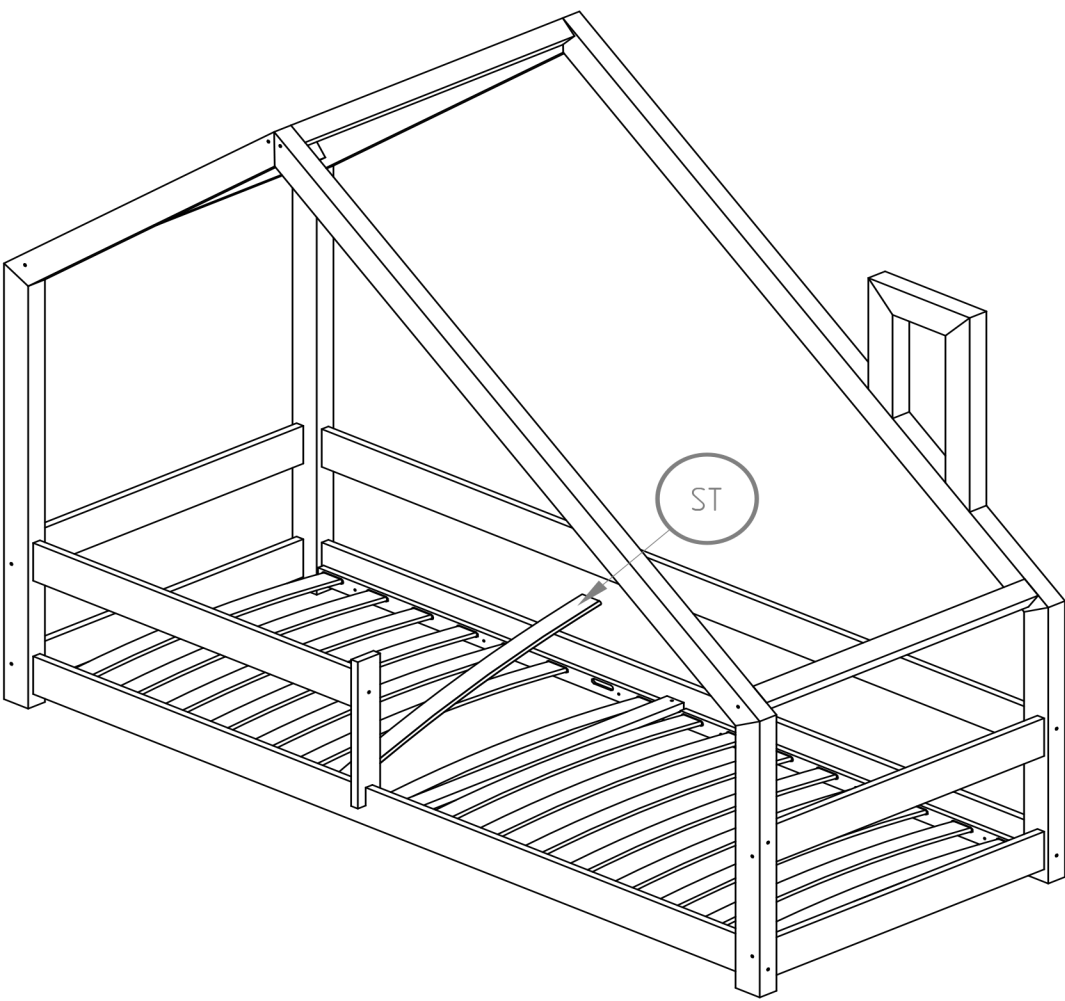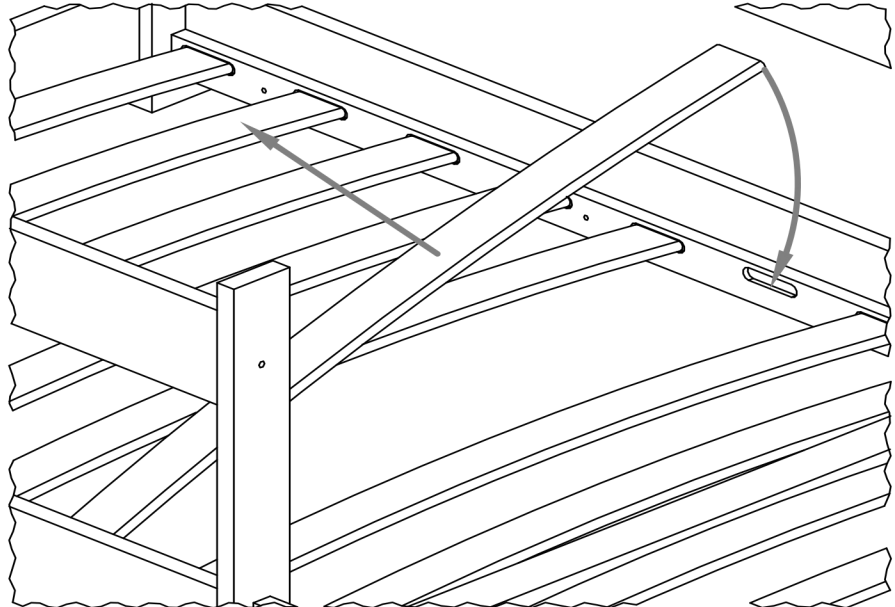

**Instalace postelí o šířce přes 100 cm,
doplňujeme tuto instrukci.**

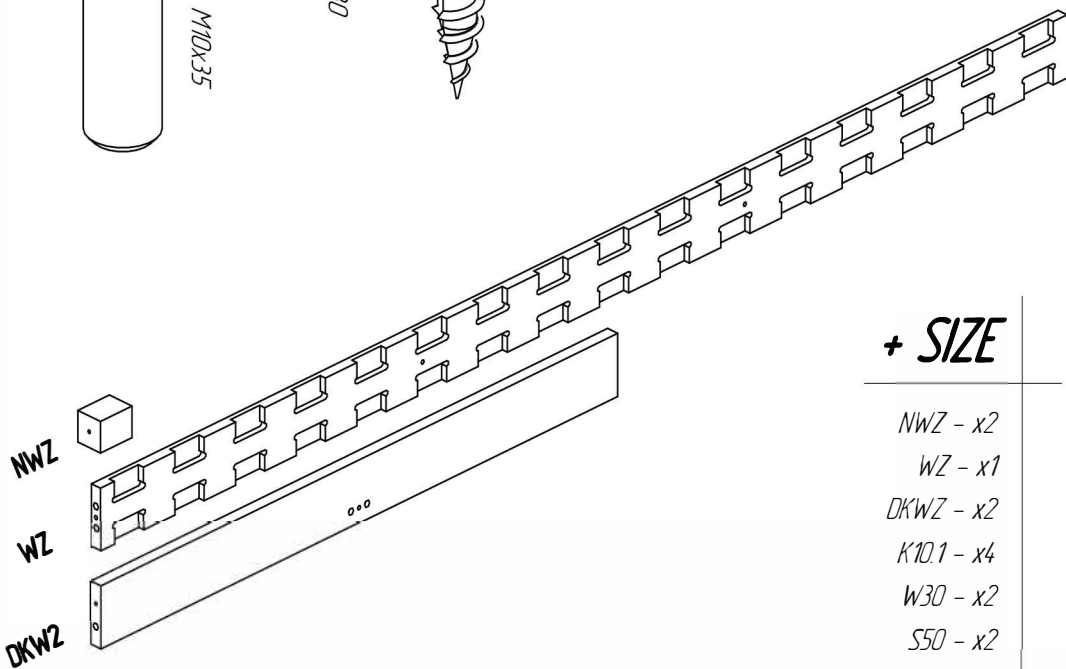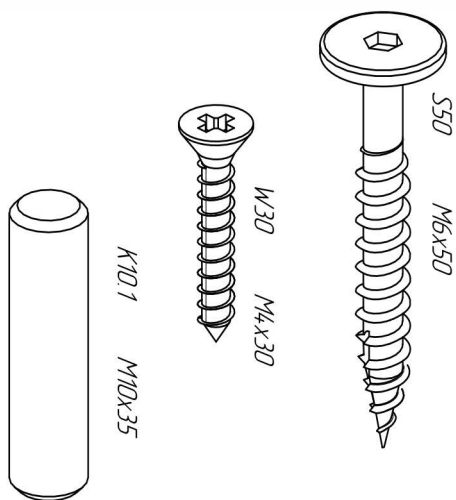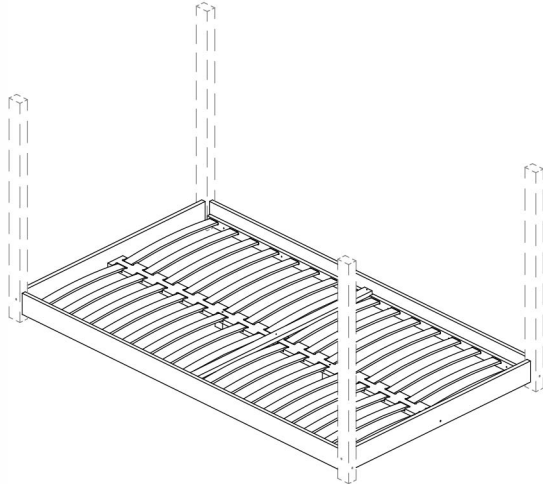

+ SIZE

NWZ - x2


WZ - x1


DKWZ - x2

K10.1 - x4


W30 - x2


S50 - x2

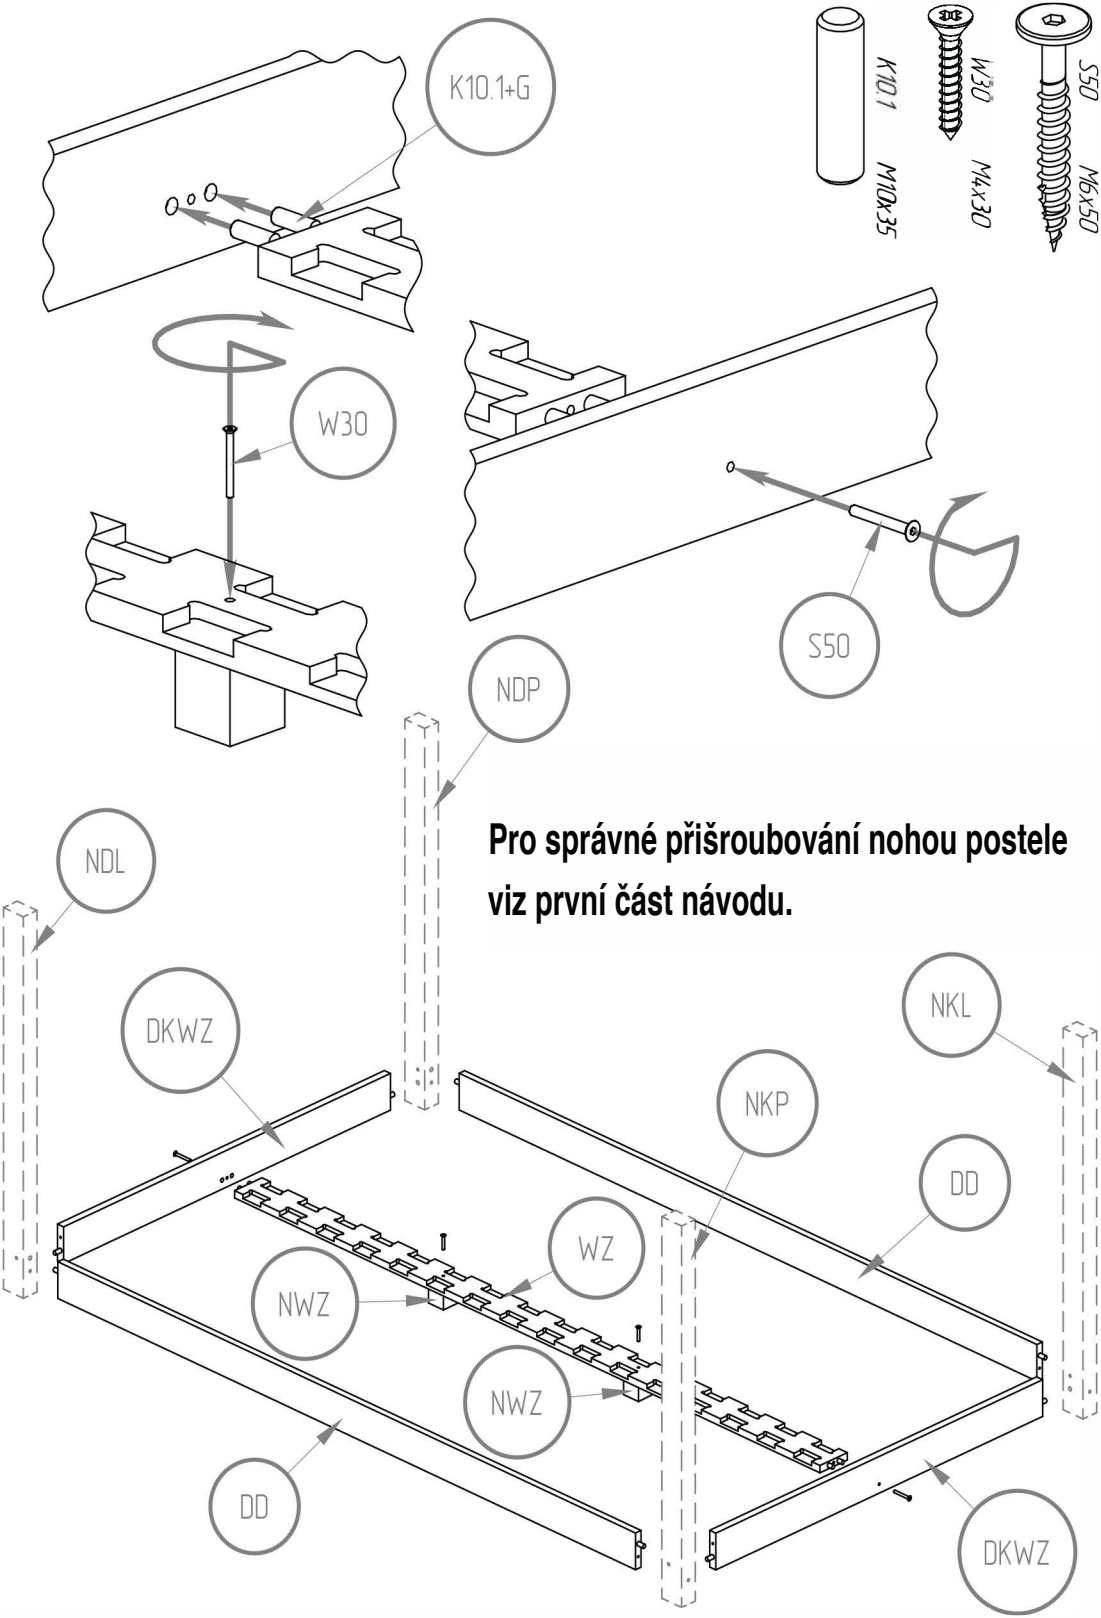

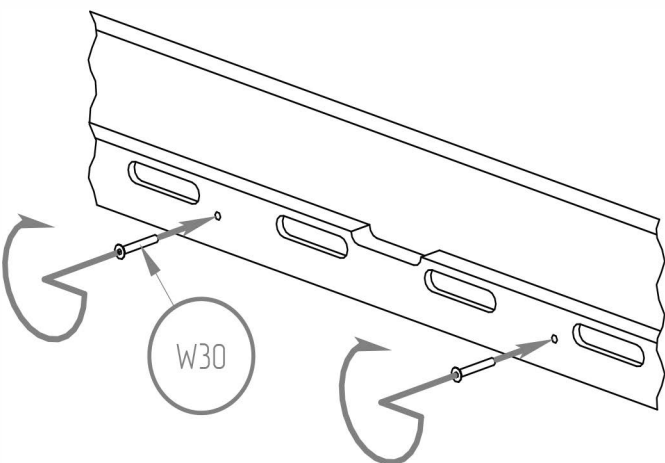


Pro správné přišroubování nohou postele viz první část návodu.

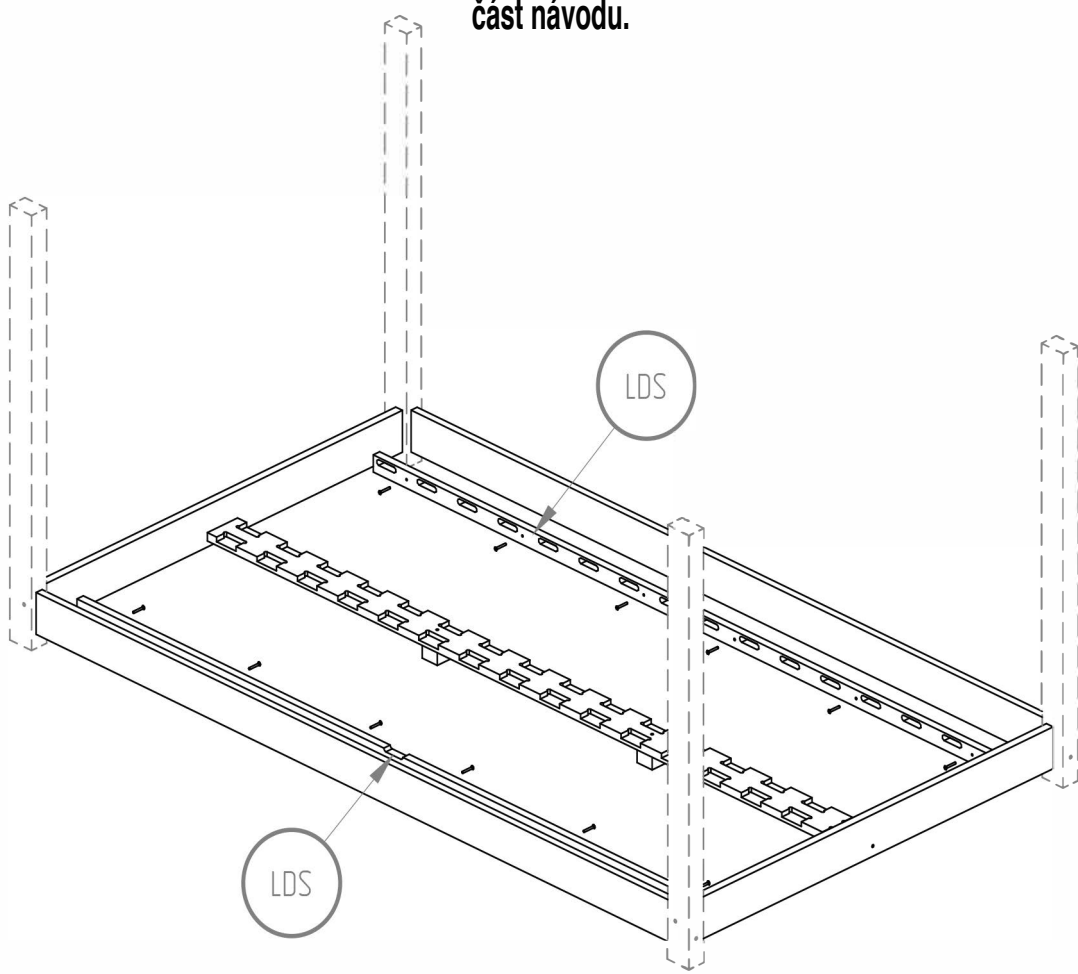





ANGLE BAR

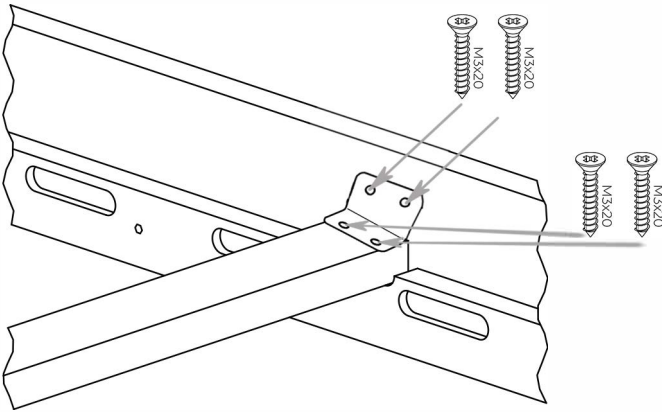

**Pro správné přišroubování nohou
postele viz první část návodu.**

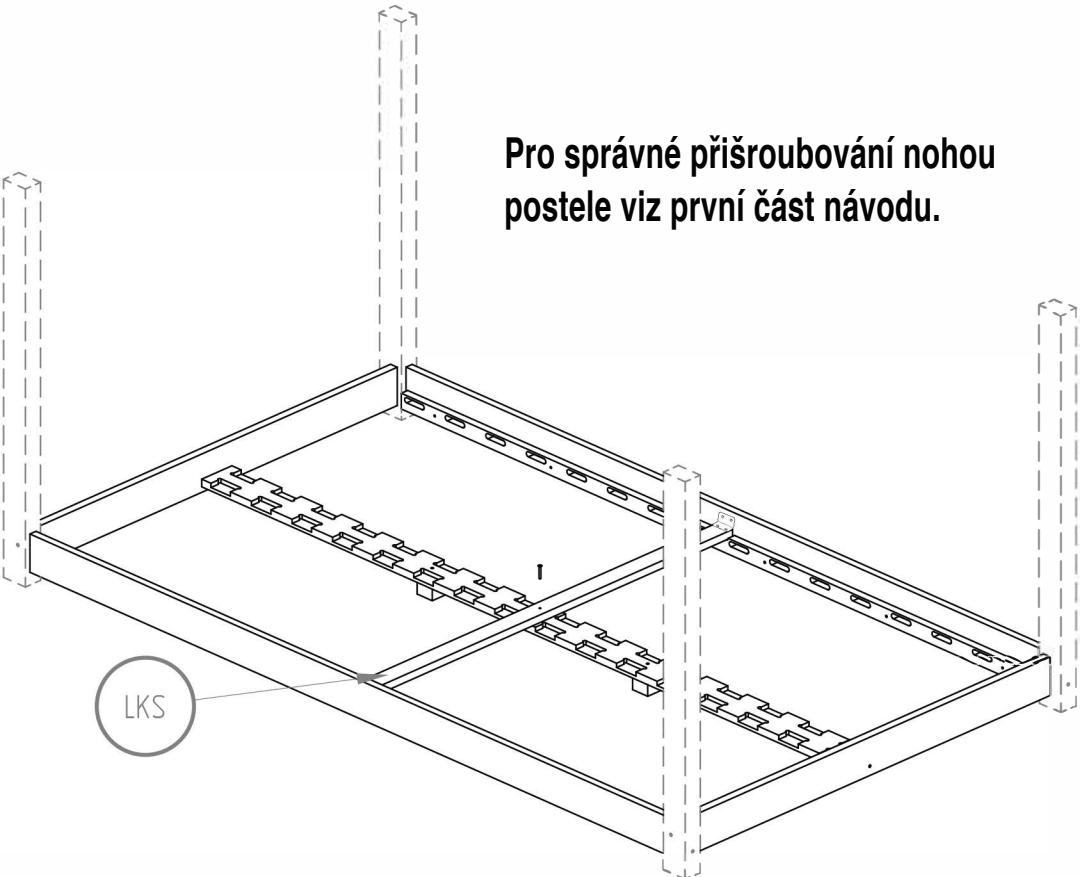

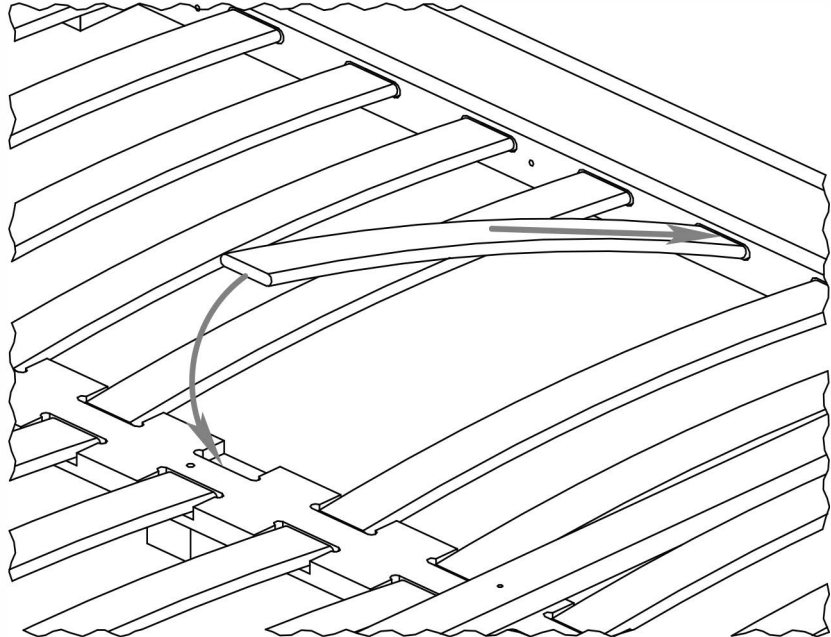

**Pro správné přišroubování nohou postele
viz první část návodu.**

