




E L I S

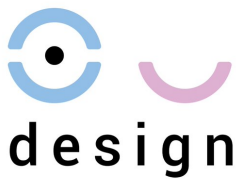







Návod na montáž

Postel Domeček classic
s komínem + šuplík

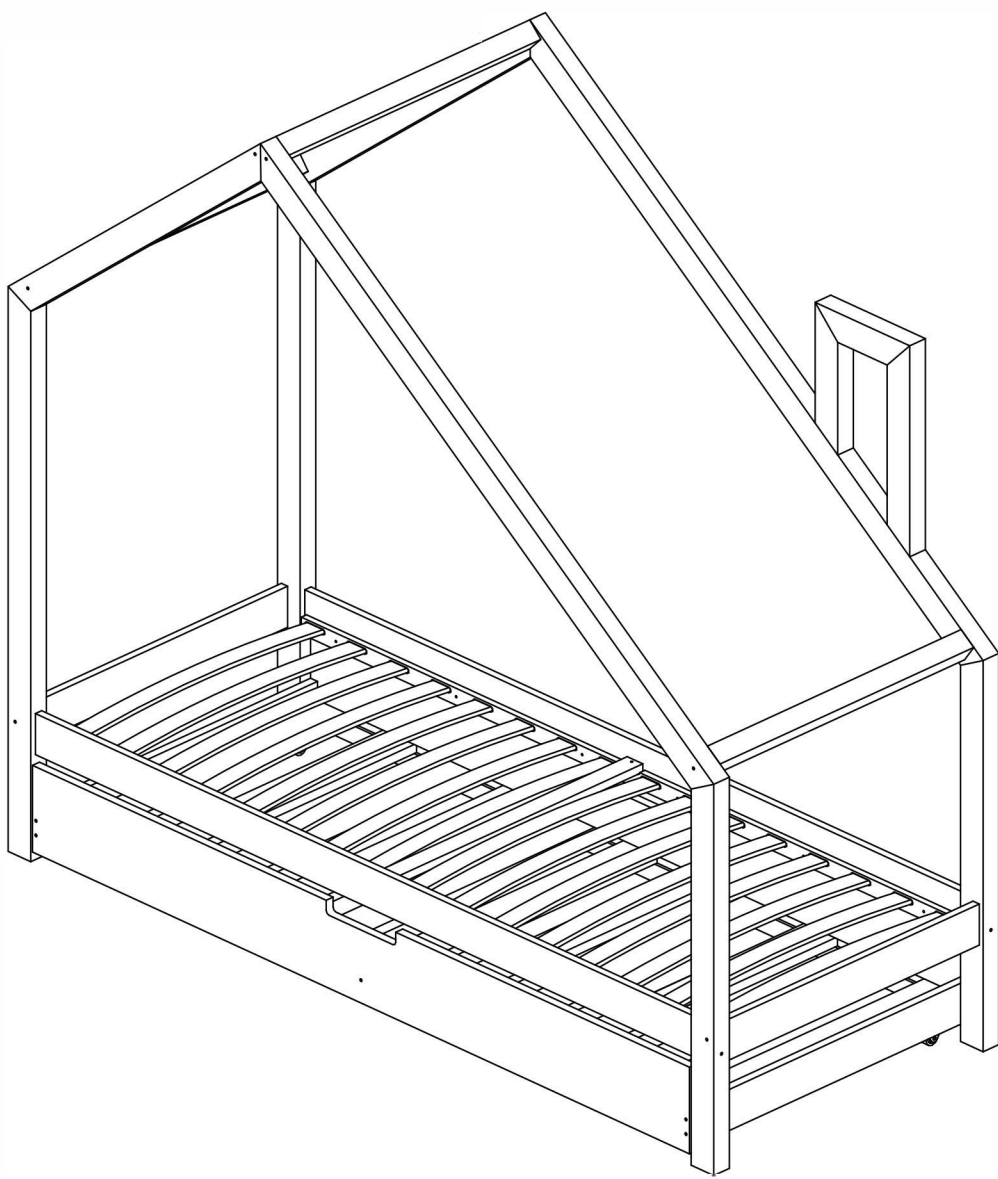

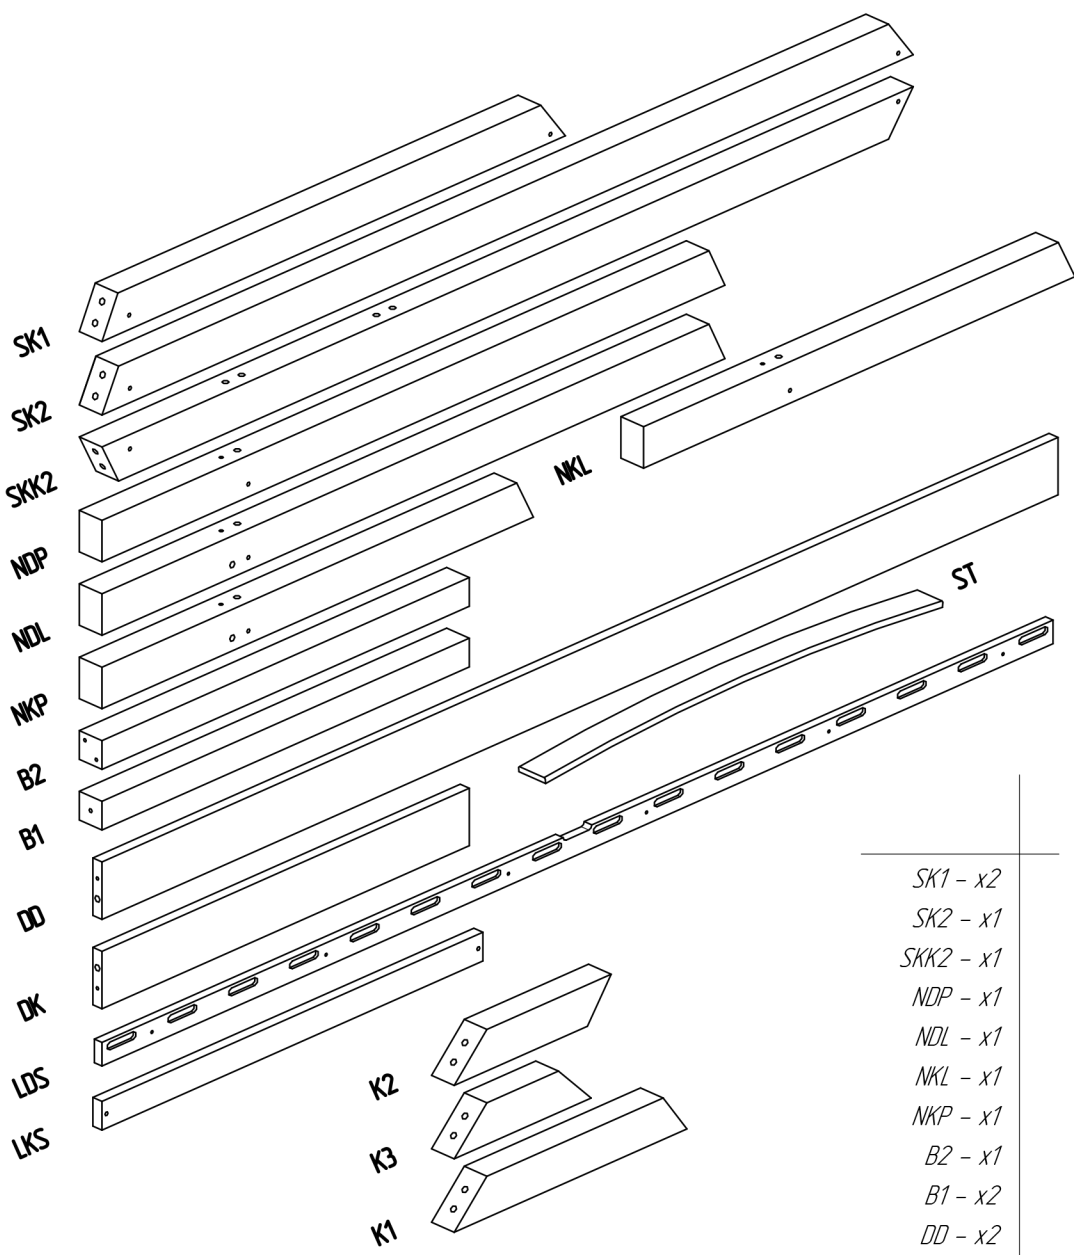

- | |
|-------------|
| SK1 - x2 |
| SK2 - x1 |
| SKK2 - x1 |
| NDP - x1 |
| NDL - x1 |
| NKL - x1 |
| NKP - x1 |
| B2 - x1 |
| B1 - x2 |
| DD - x2 |
| DK - x2 |
| LDS - x2 |
| LKS - x1 |
| ST - x10-16 |
| K1 - x1 |
| K2 - x1 |
| K3 - x1 |

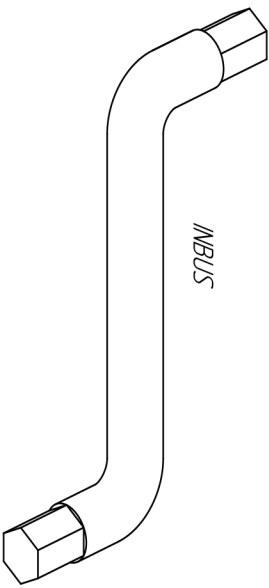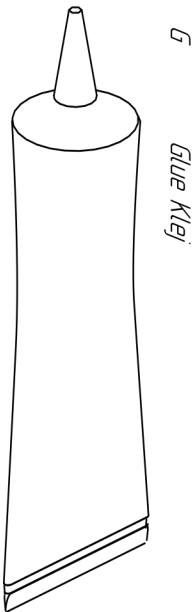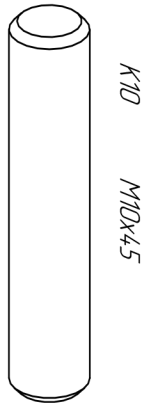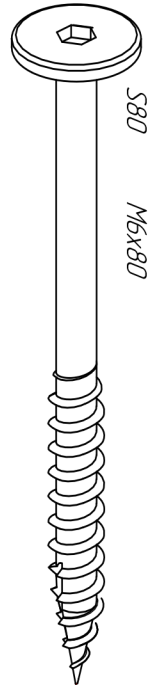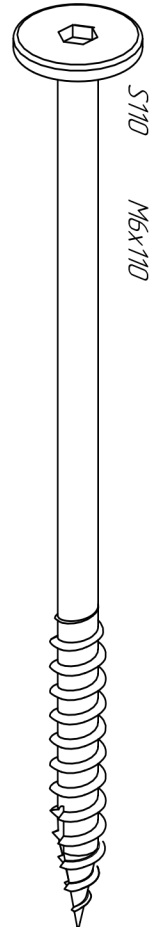

S110 - x4

S80 - x12


W30 - x14

K10 - x24


G - x3


INBUS - x1


Počet otvorů pro vložení roštových lamel a počet dílů ST.

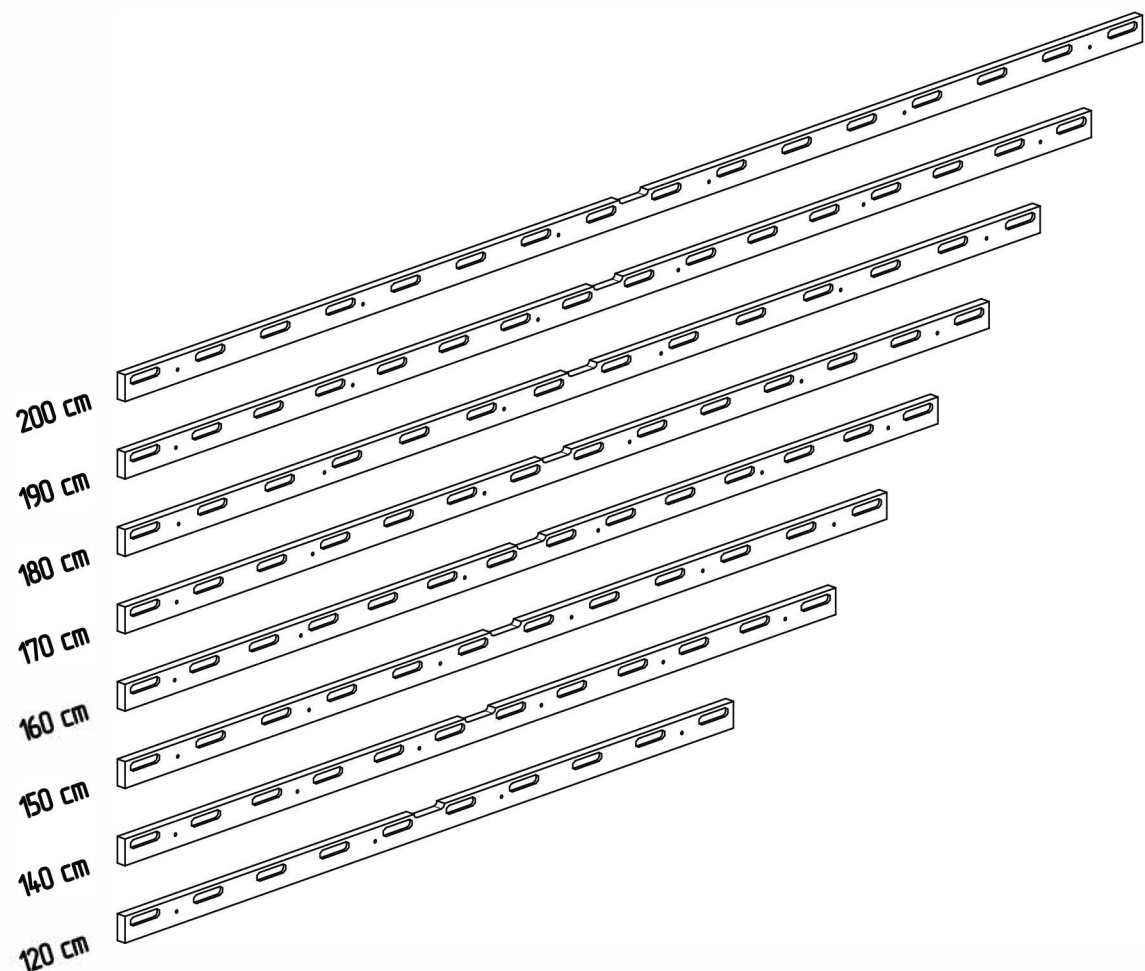




Délka	QT
200 cm	16
190 cm	16
180 cm	14
170 cm	14
160 cm	14
150 cm	12
140 cm	12
120 cm	10

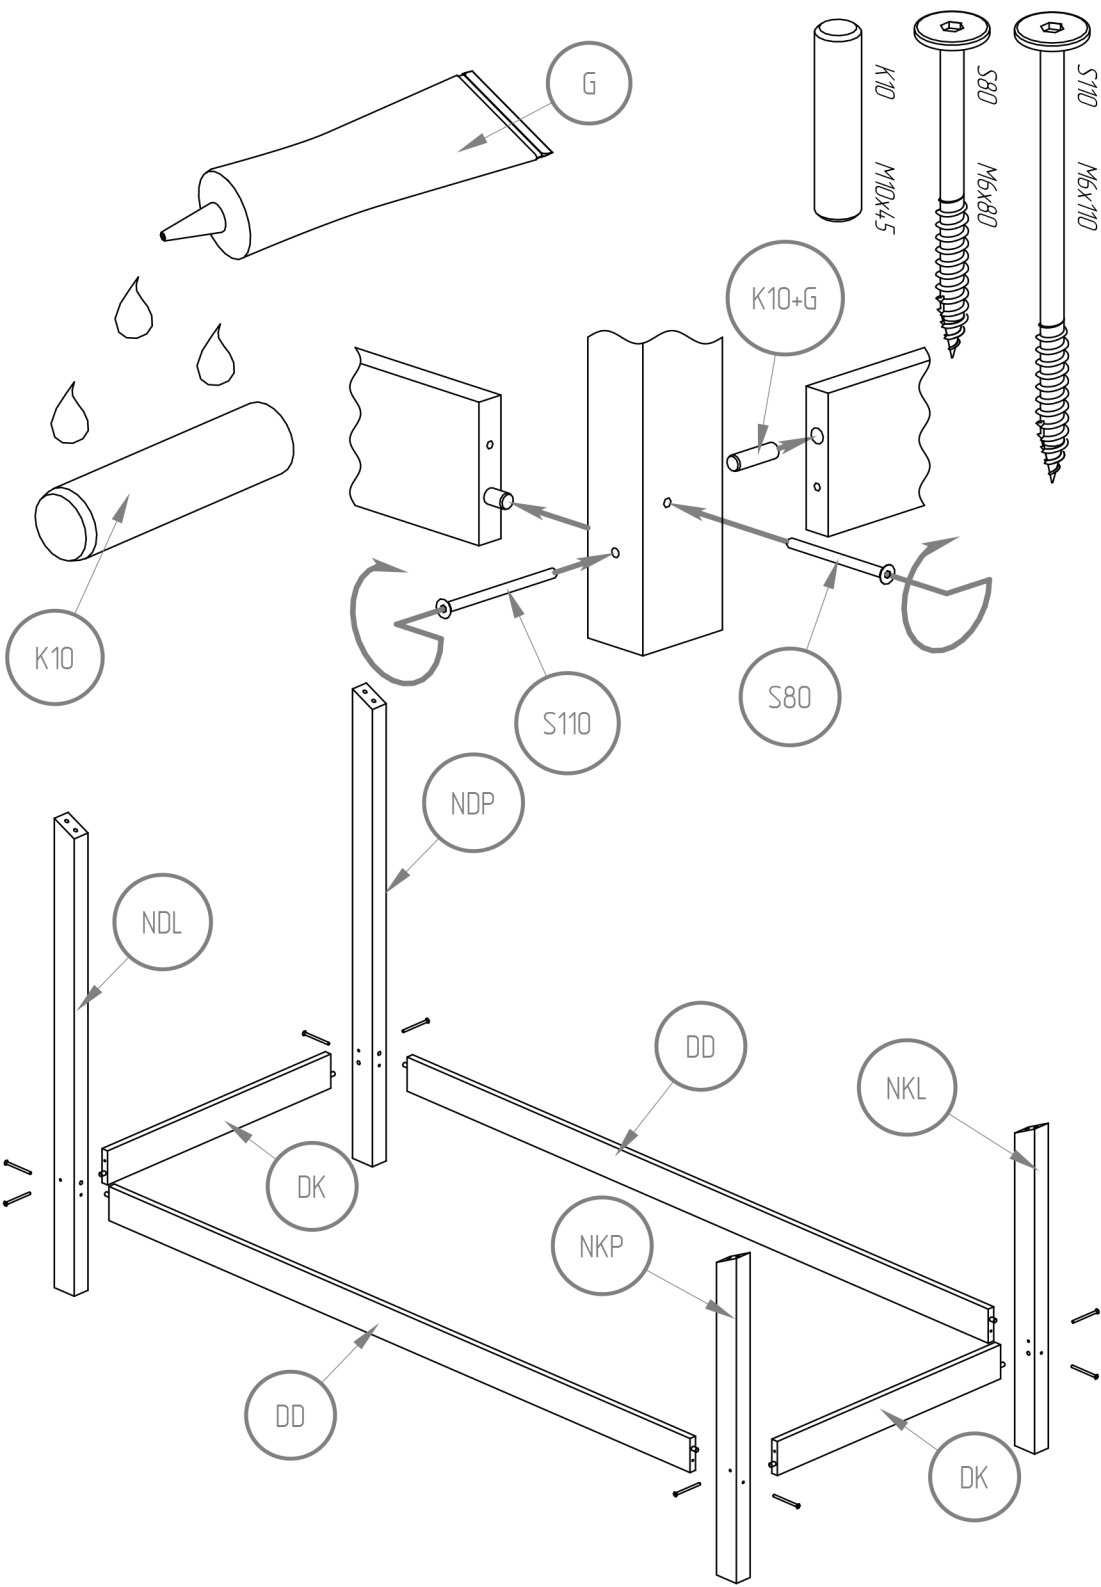



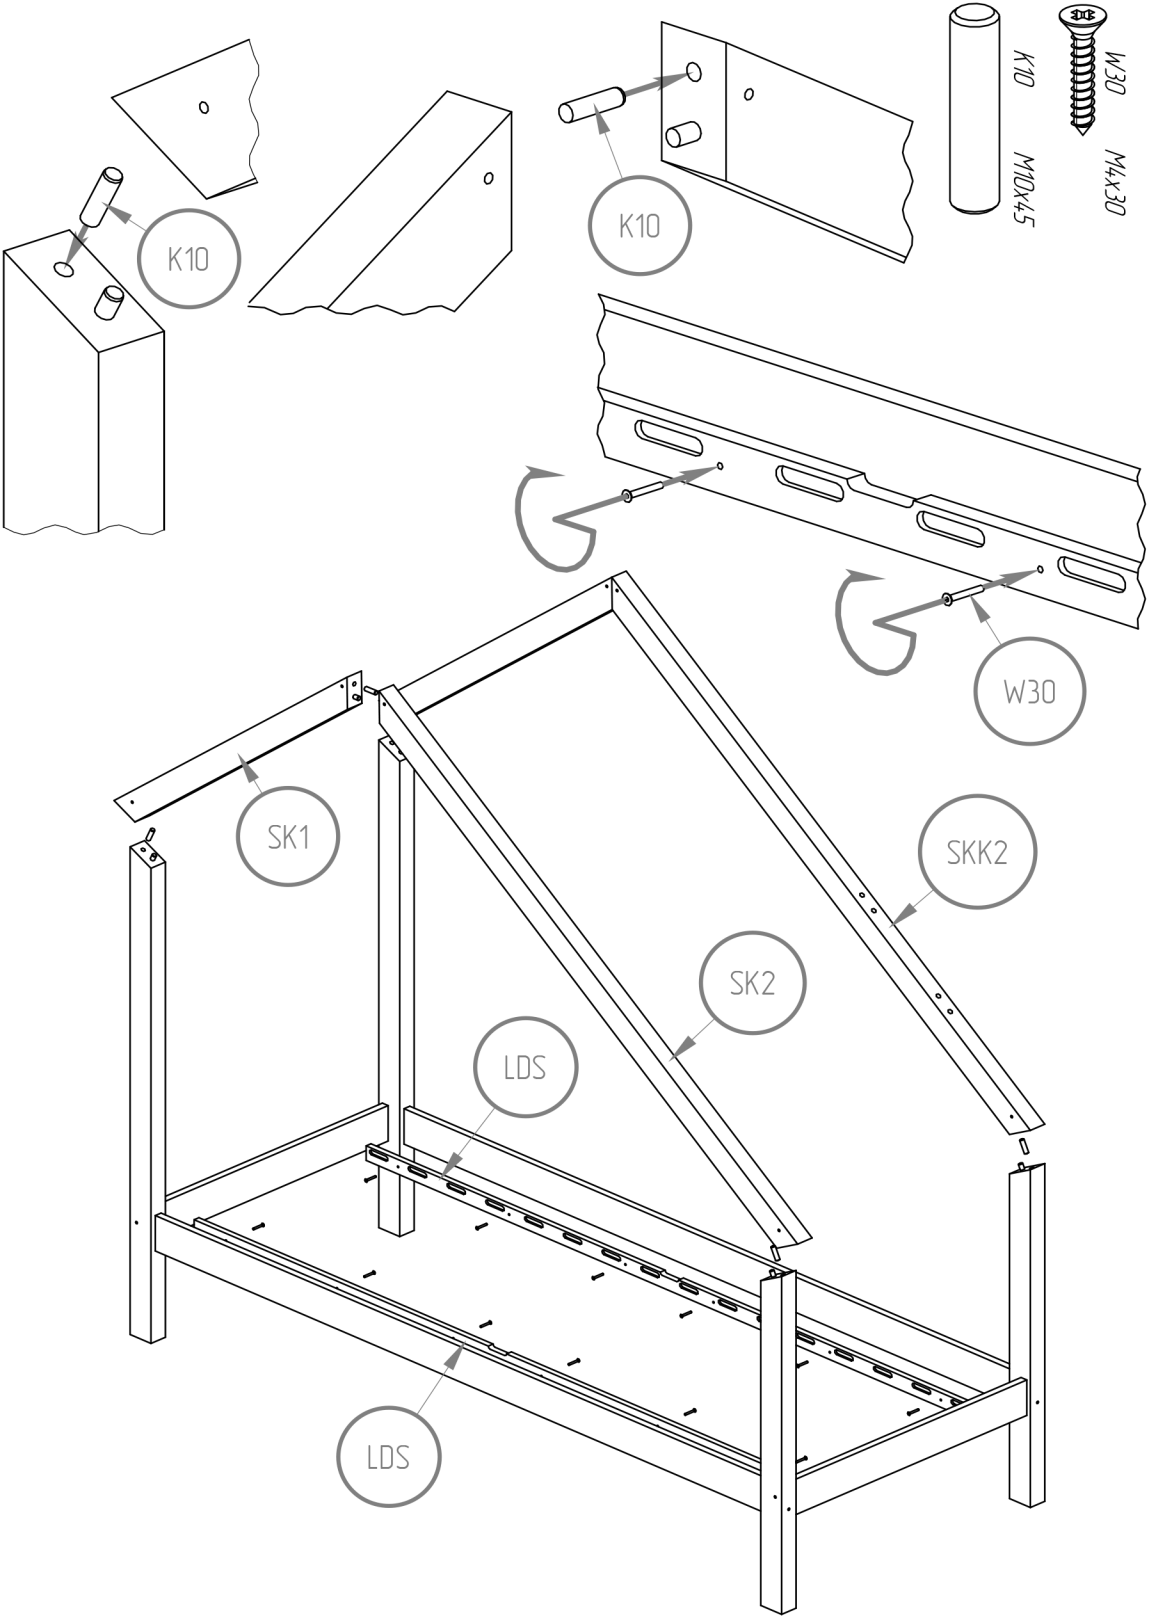


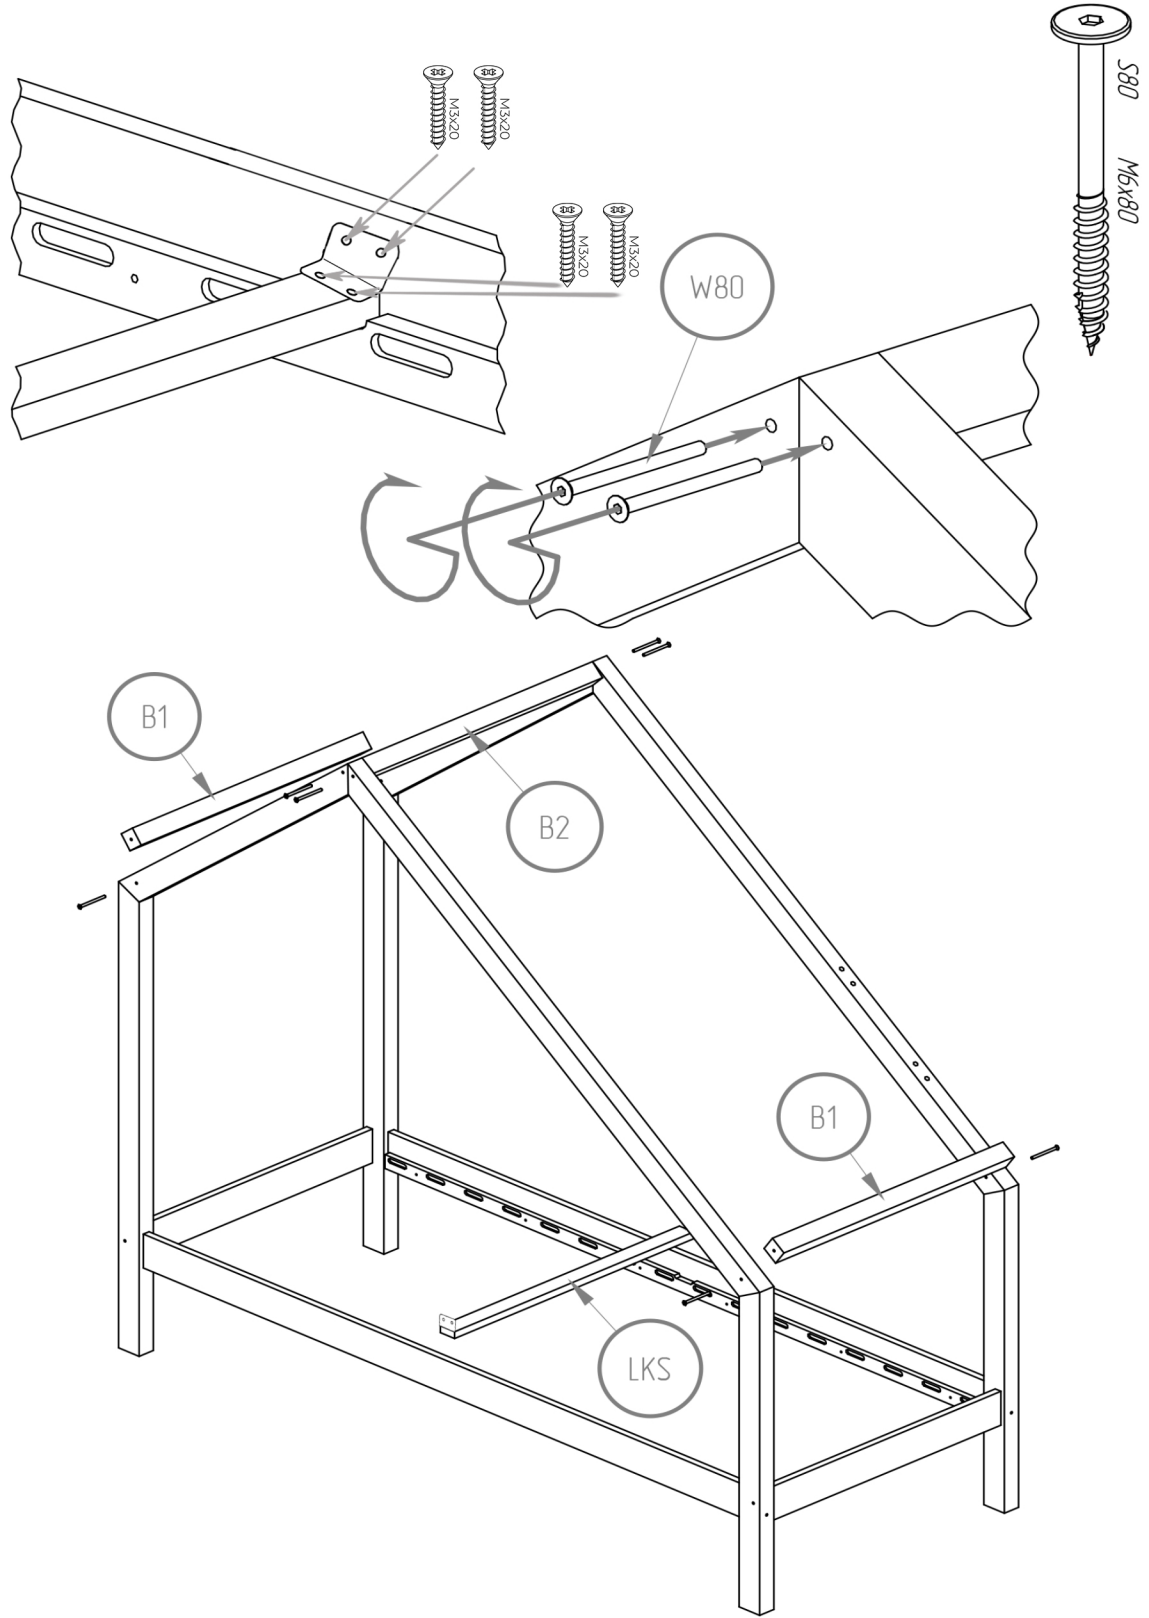

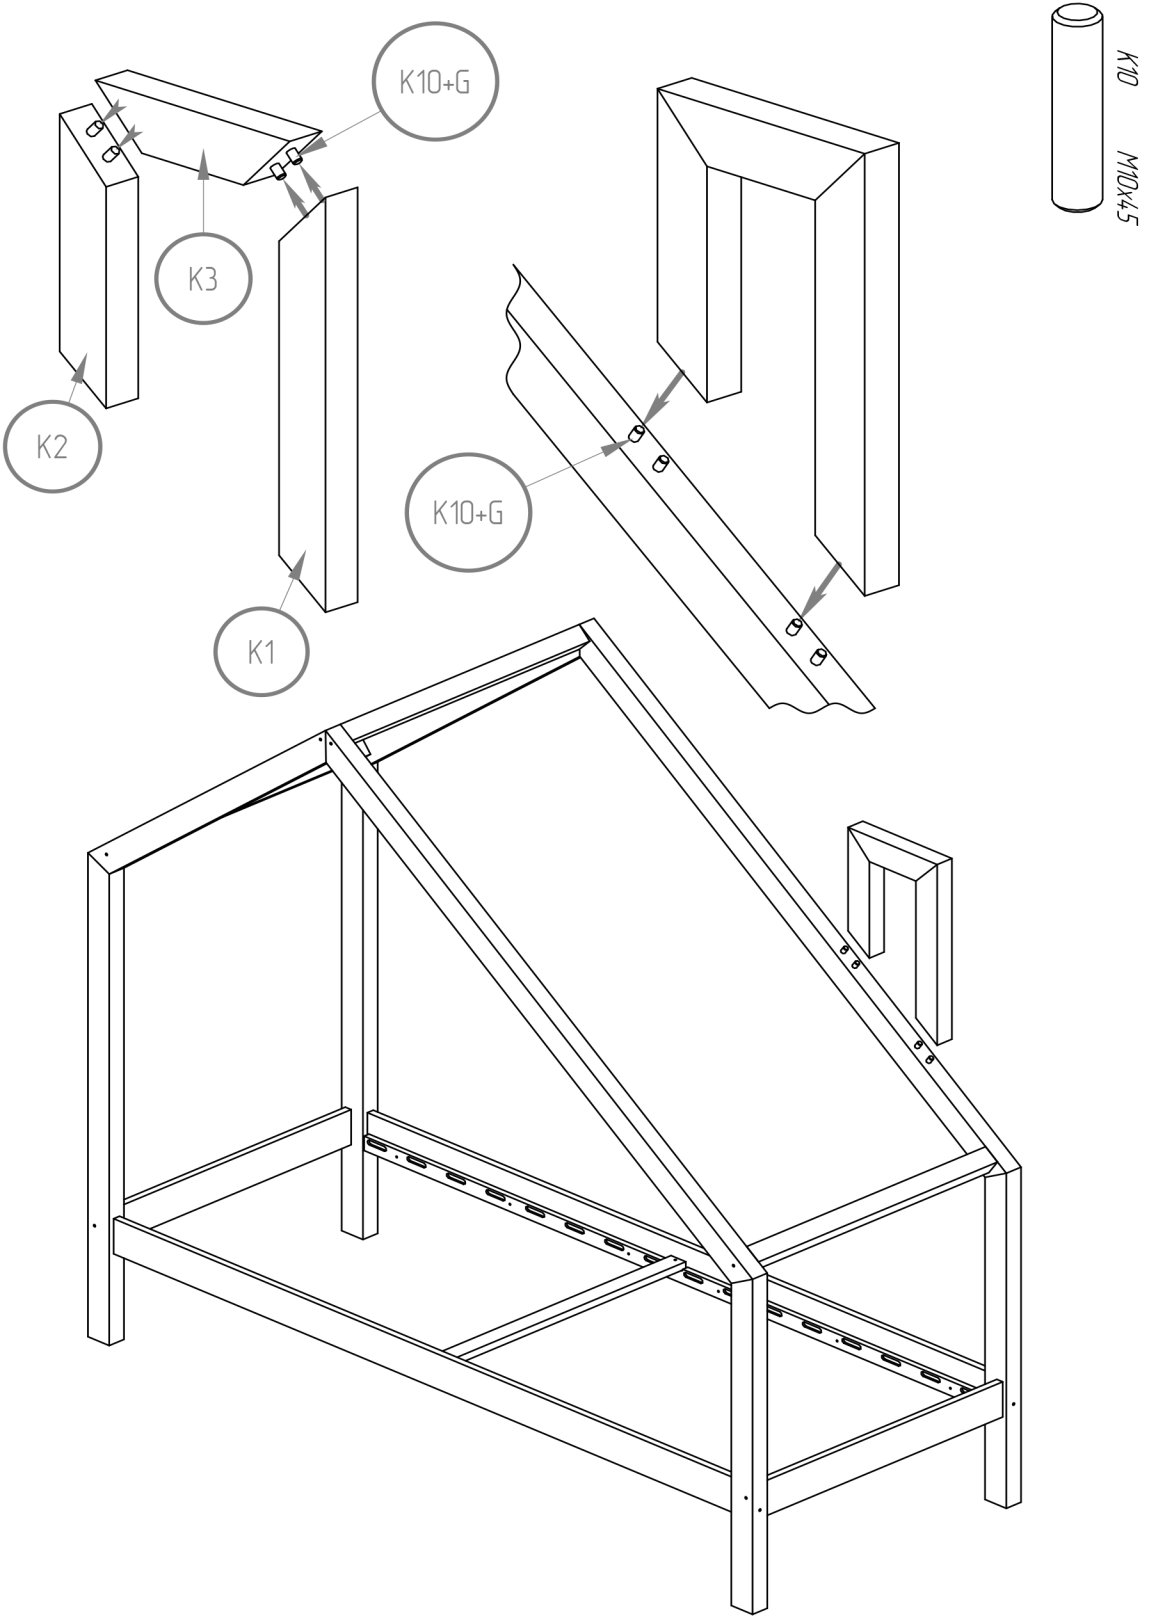

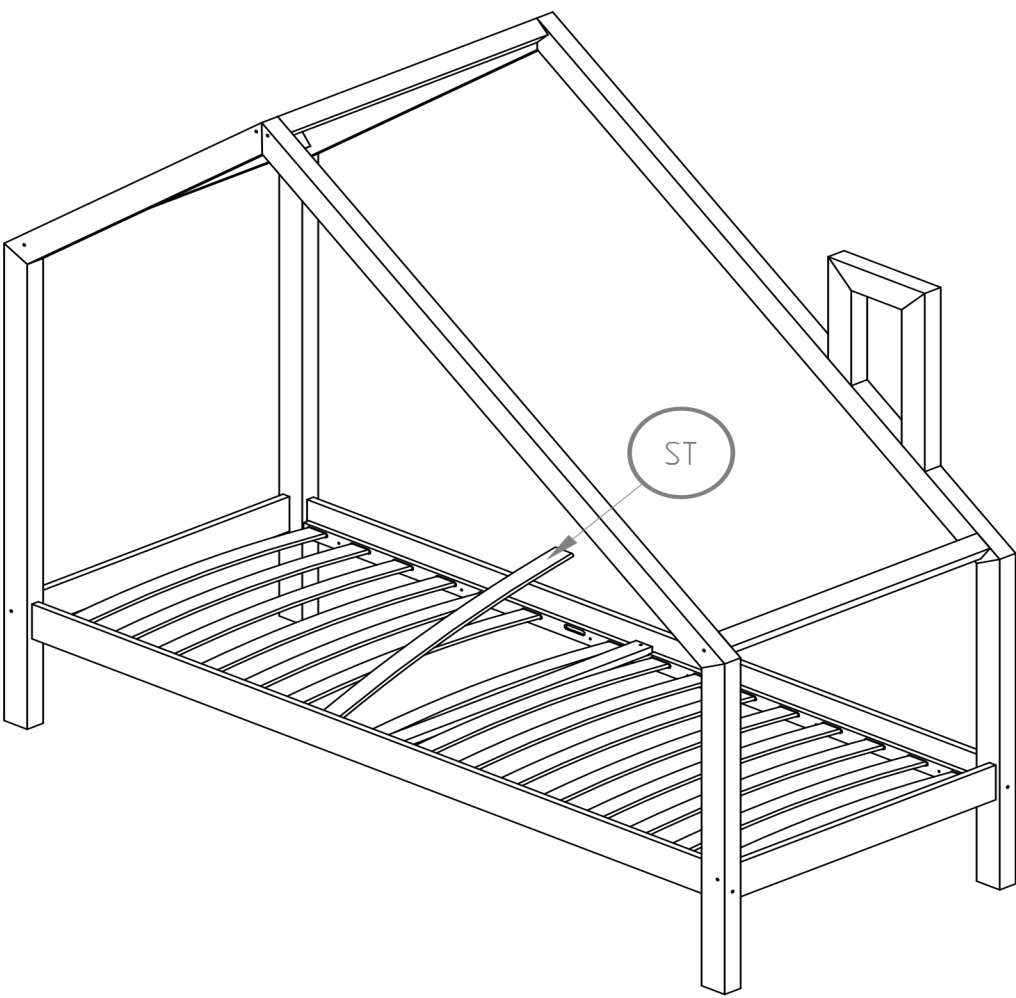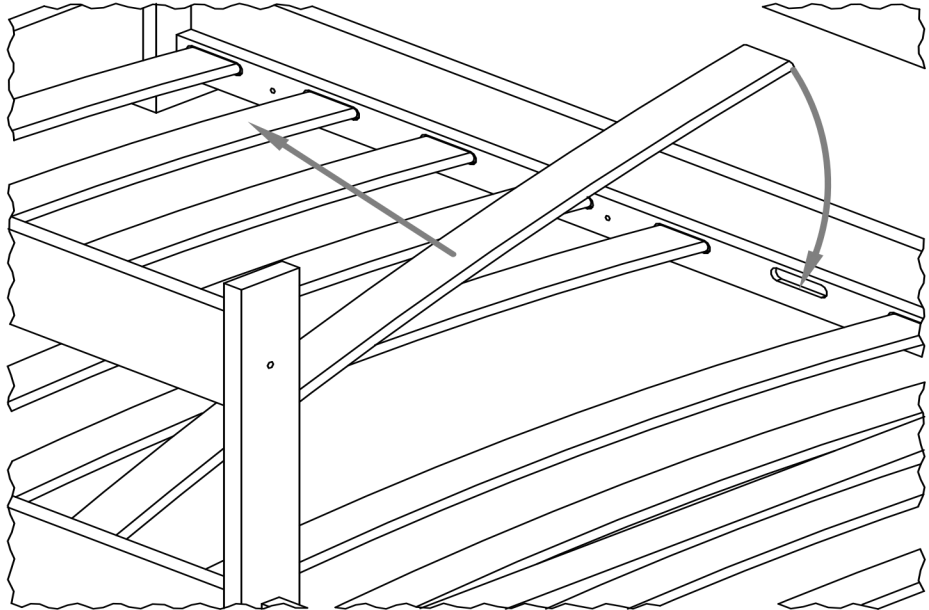

**Instalace postelí o šířce přes 100 cm,
doplňujeme tuto instrukci.**

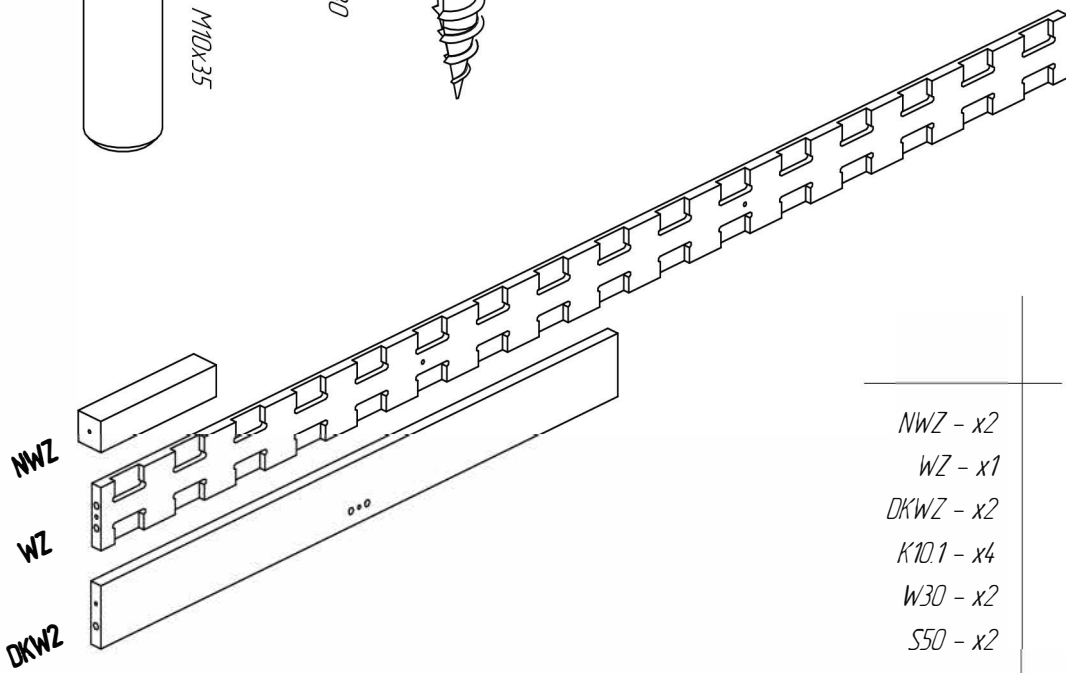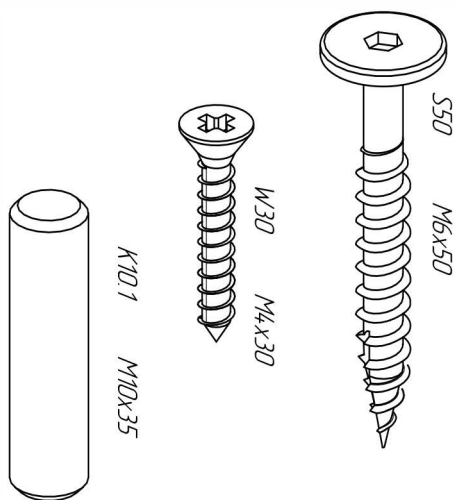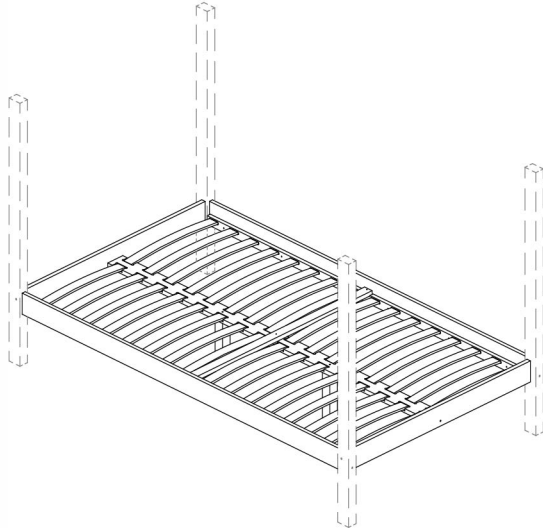

NWZ - x2


WZ - x1


DKWZ - x2

K10.1 - x4


W30 - x2


S50 - x2

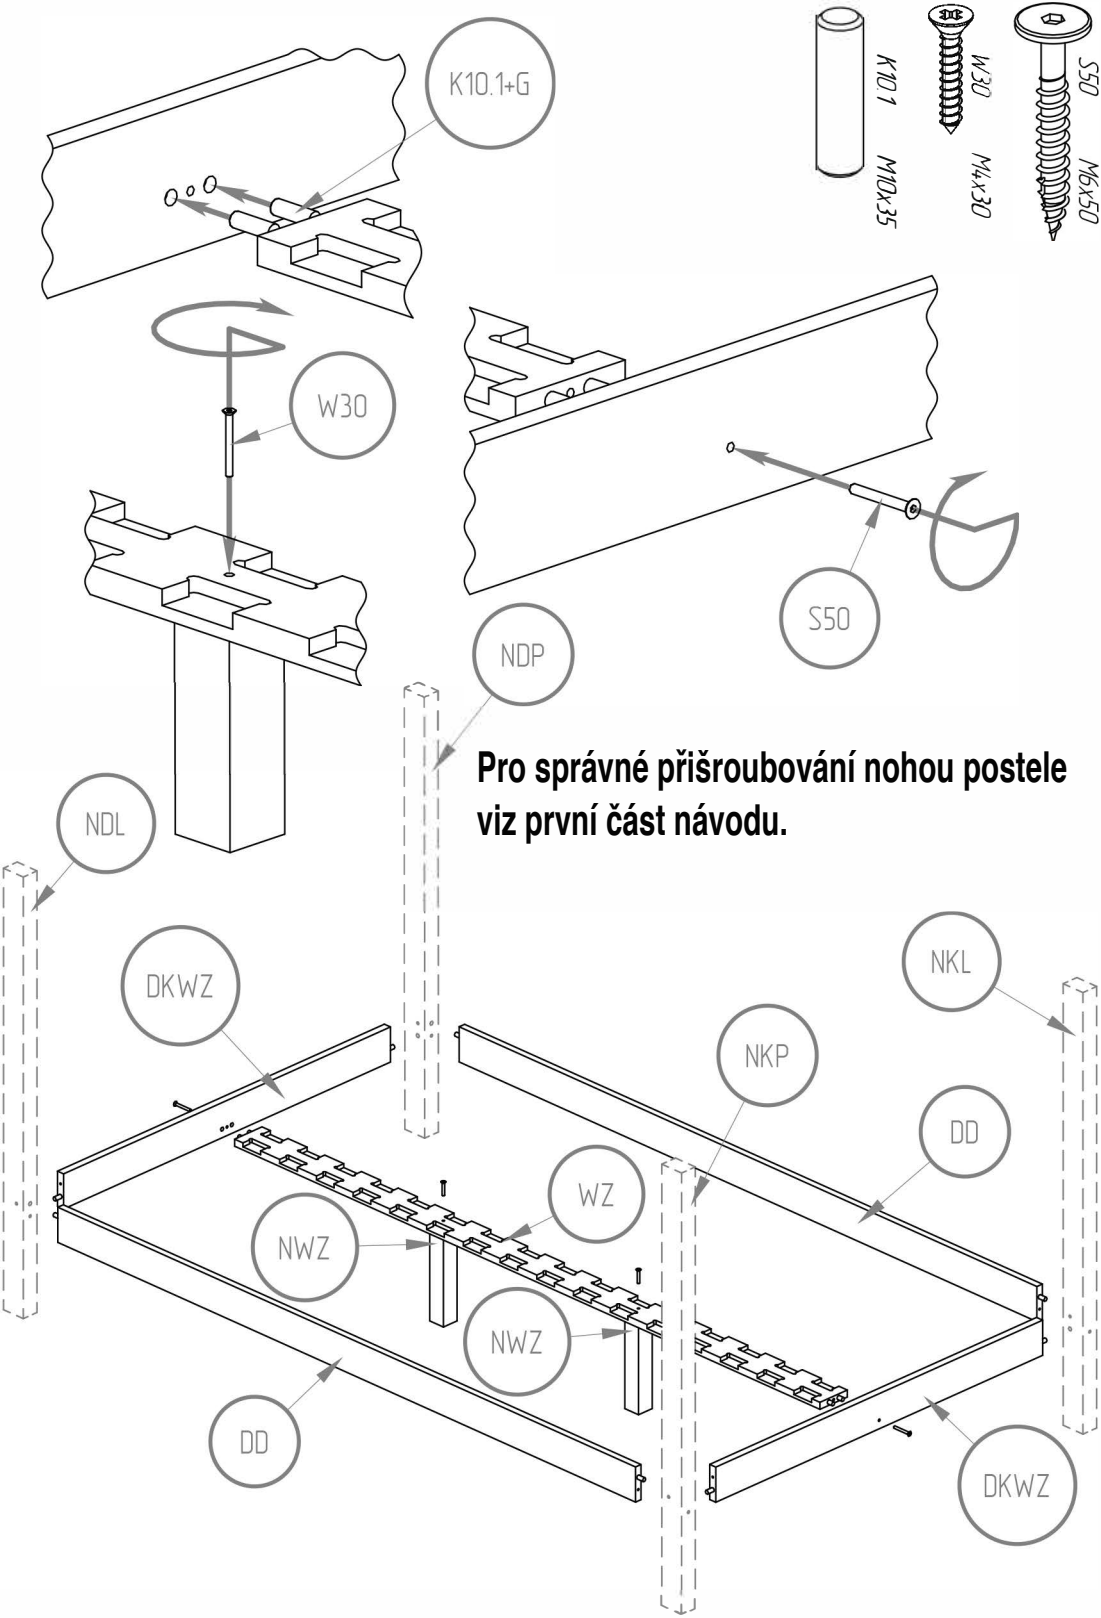

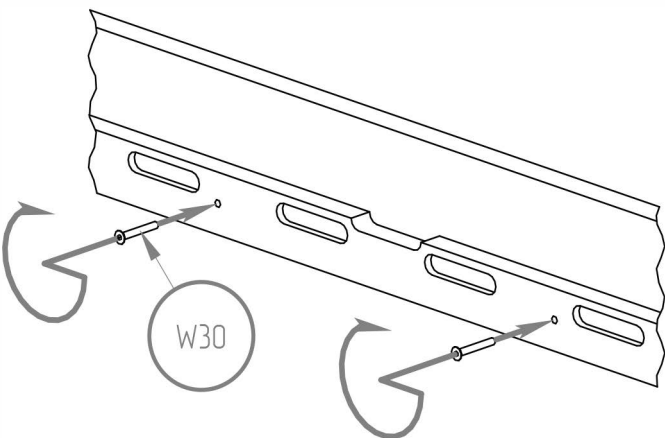


Pro správné přišroubování nohou postele viz první část návodu.

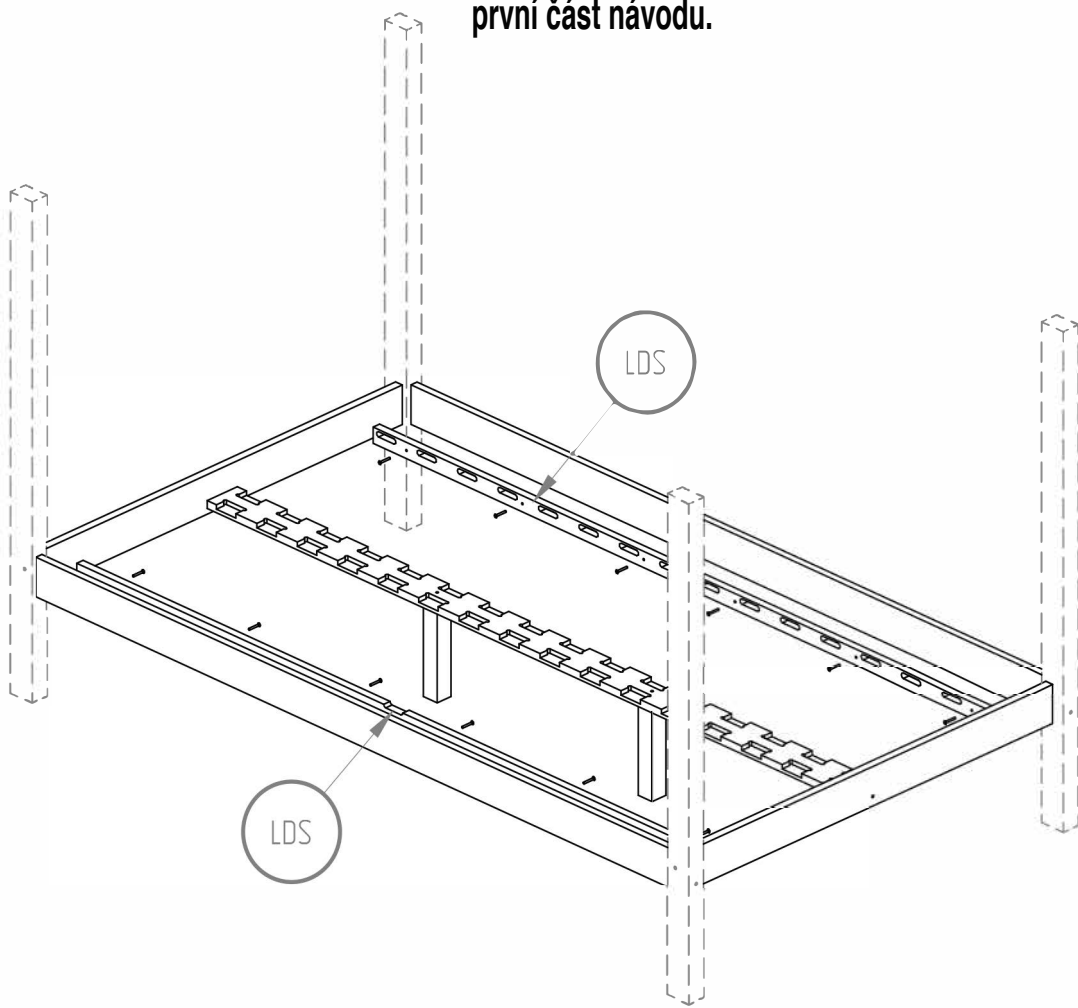





ANGLE BAR

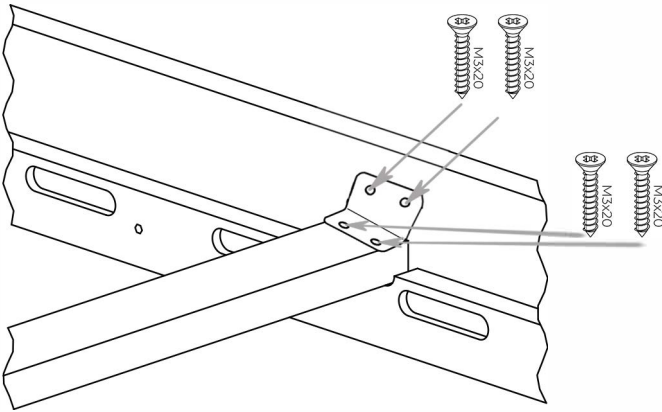


**Pro správné přišroubování nohou
postele viz první část návodu.**

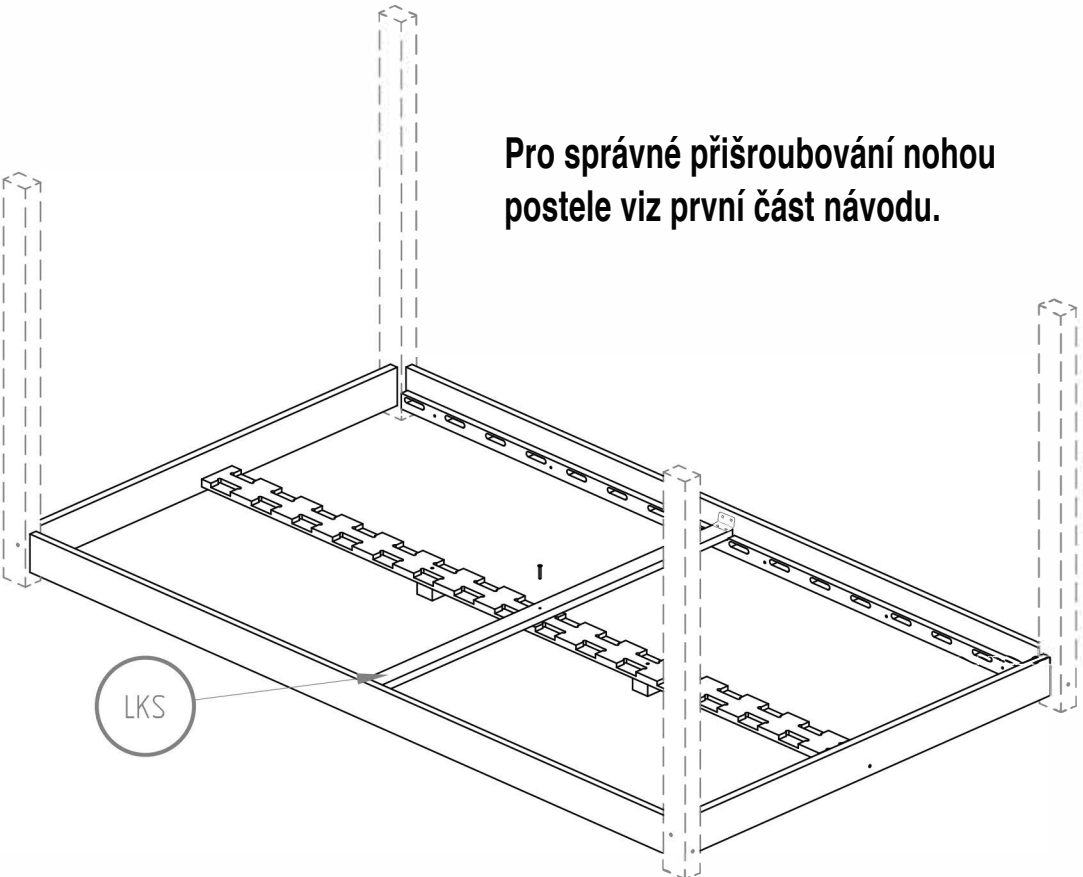


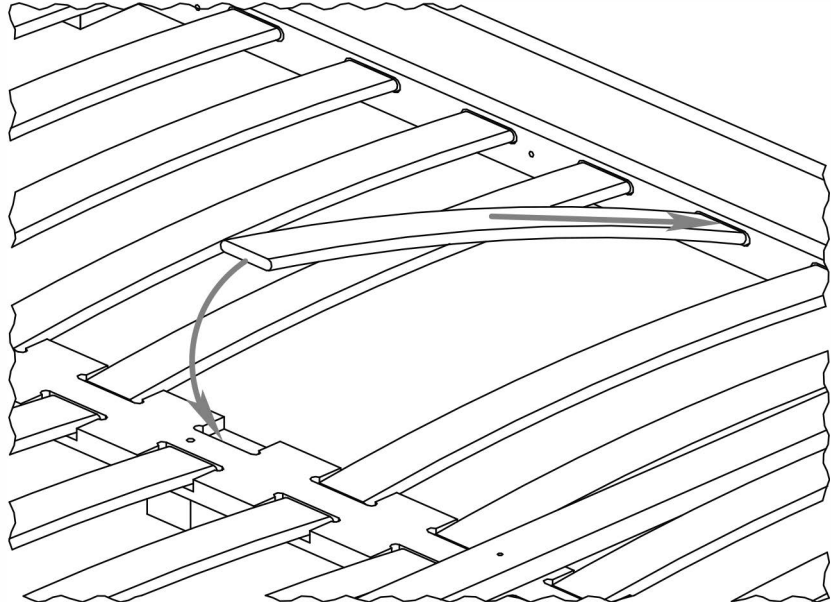


**Pro správné přišroubování nohou postele
viz první část návodu.**

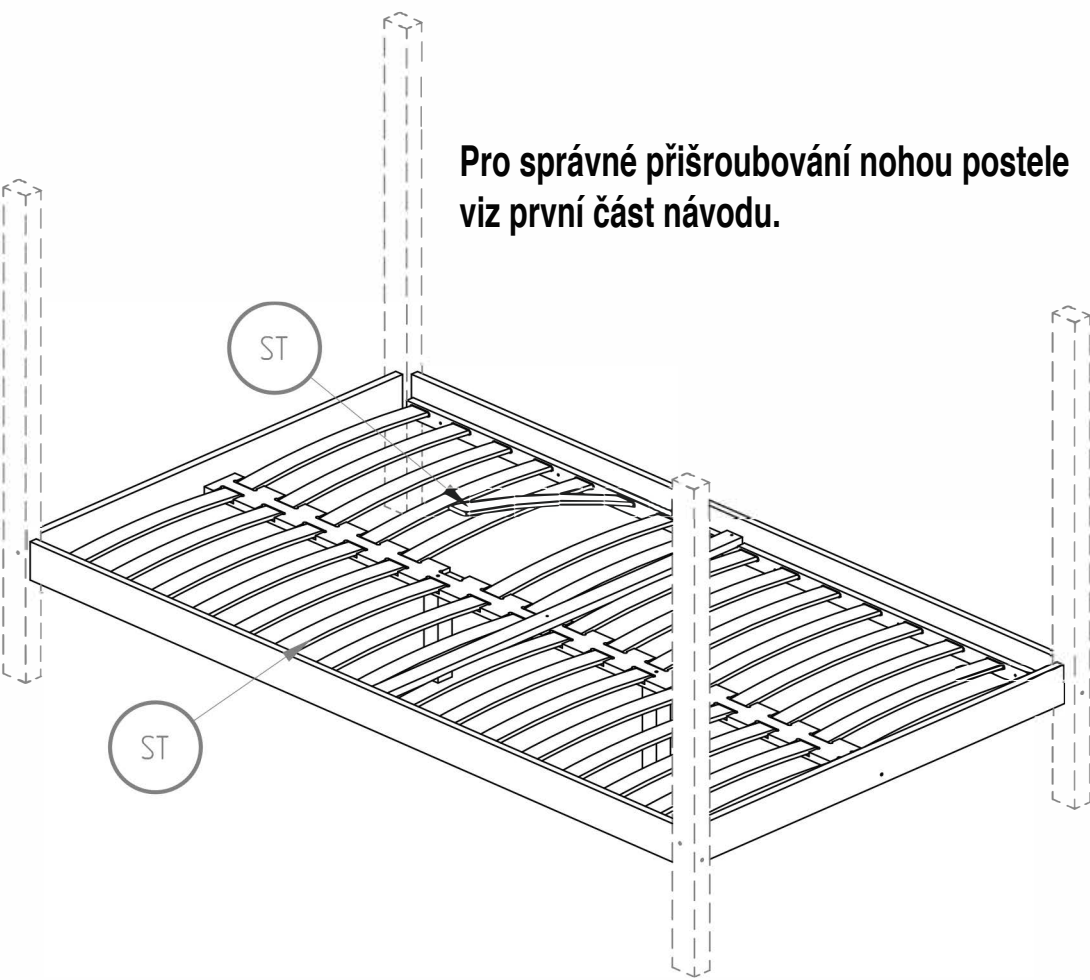

Návod na montáž Šuplík k posteli Clasic

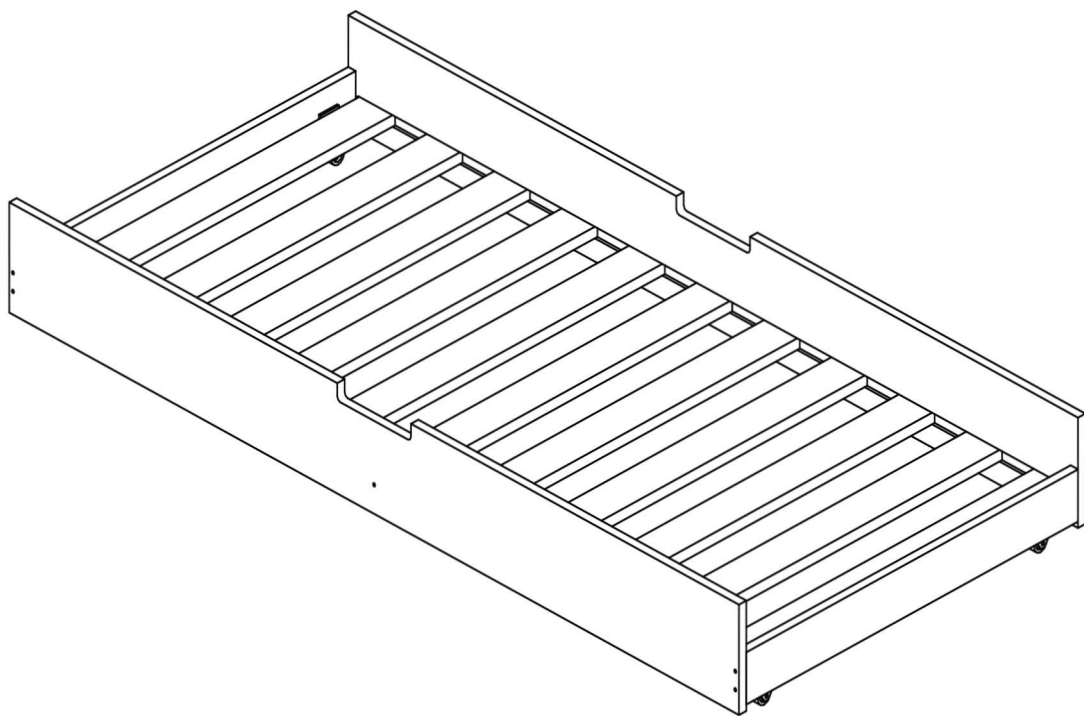

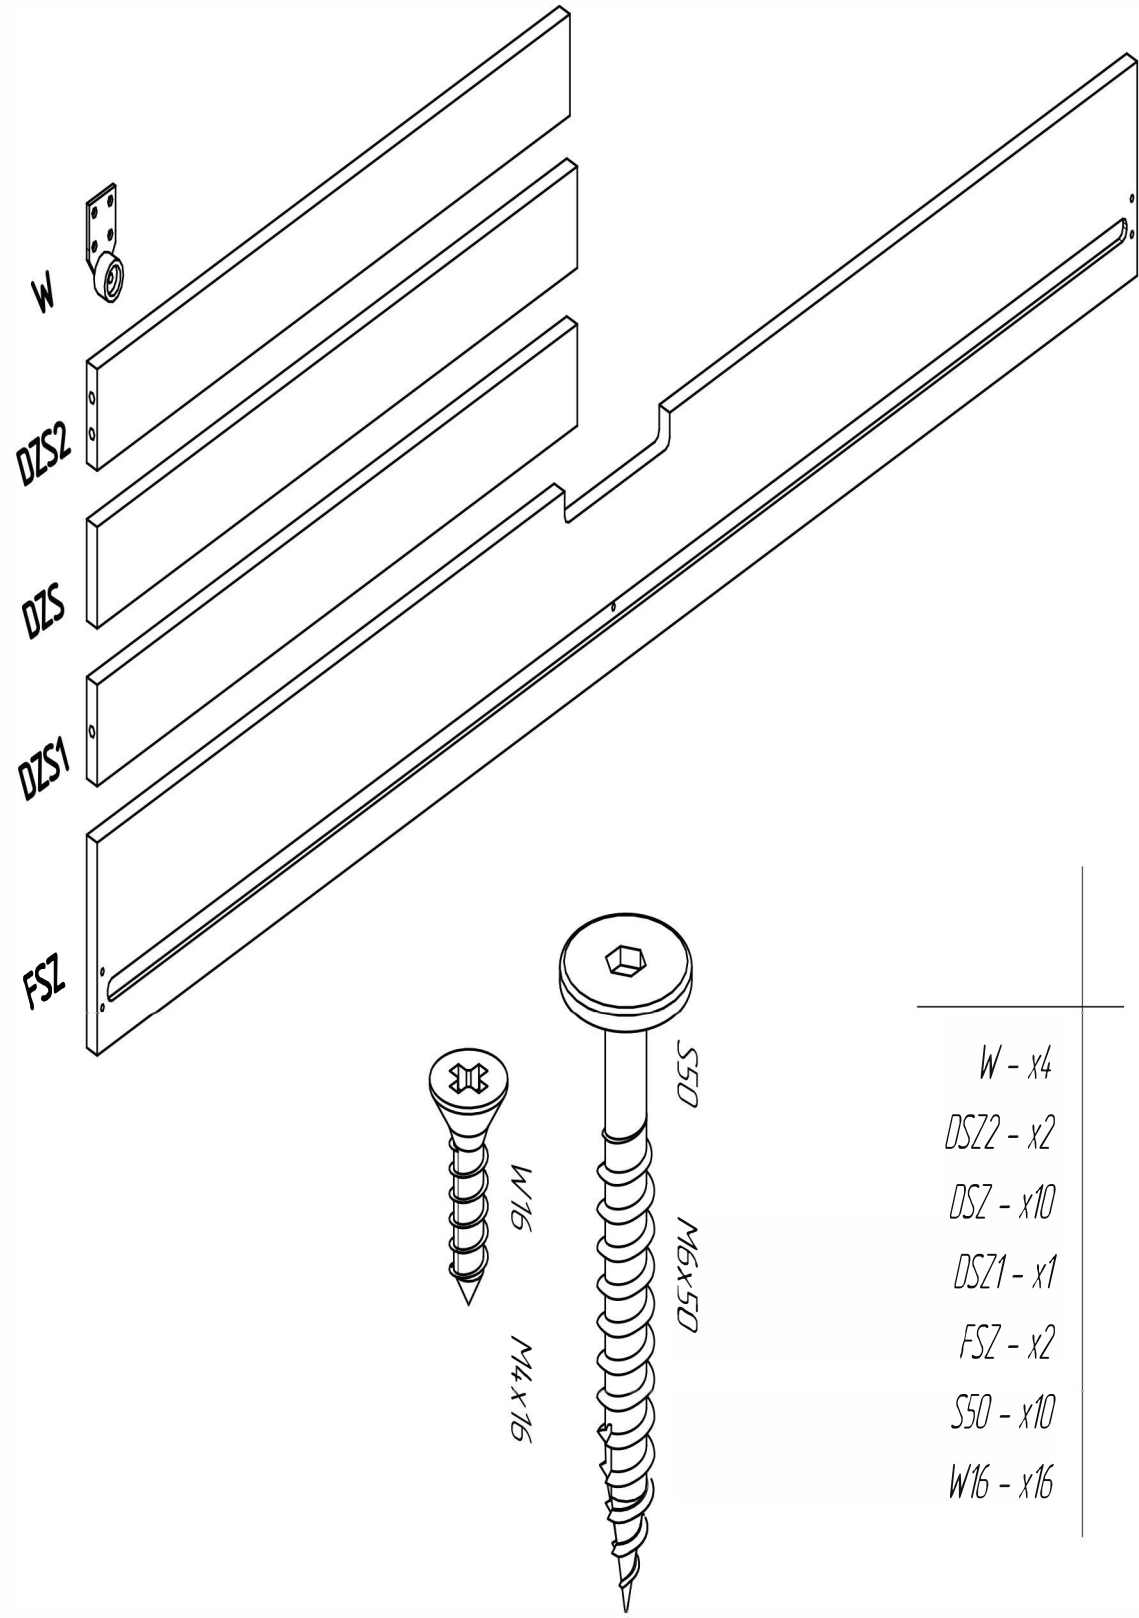

W - x4
DSZ2 - x2
DSZ - x10
DSZ1 - x1
FSZ - x2
S50 - x10
W16 - x16

