




E L I S

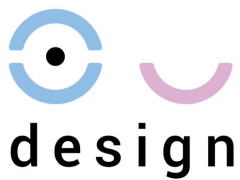





Návod na montáž

Postel domeček classic dominant

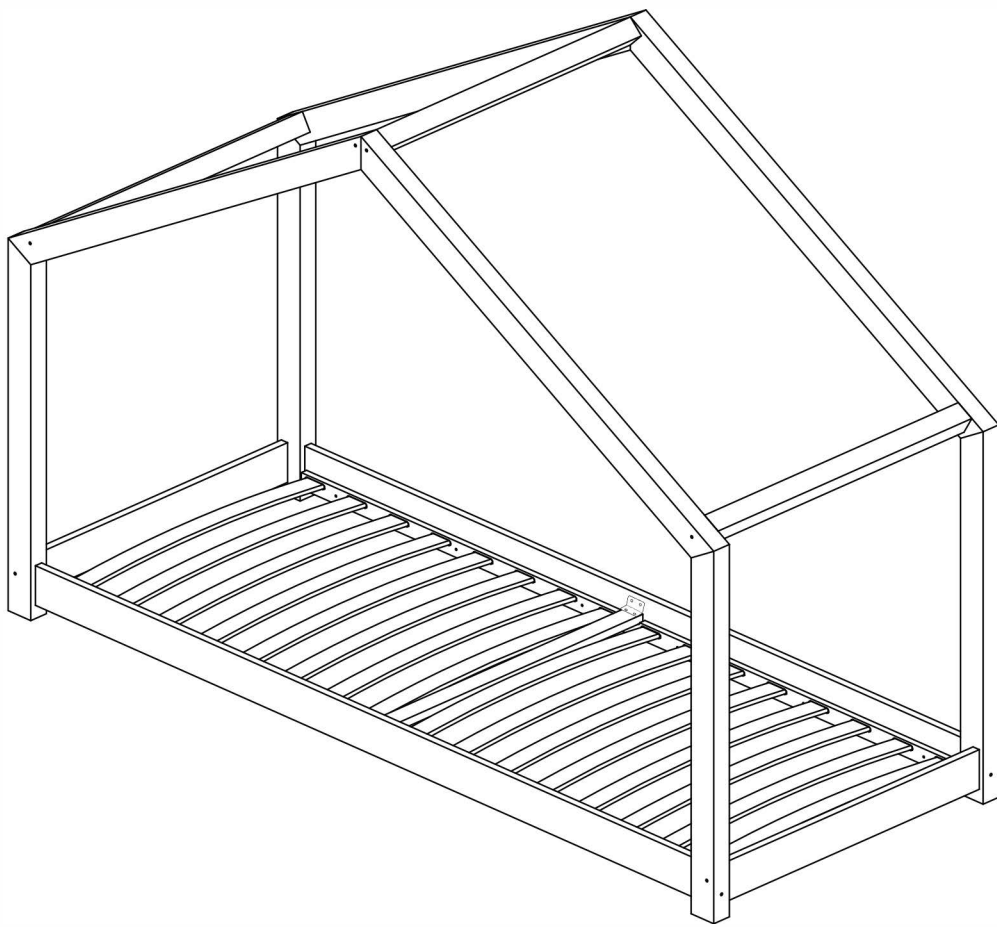

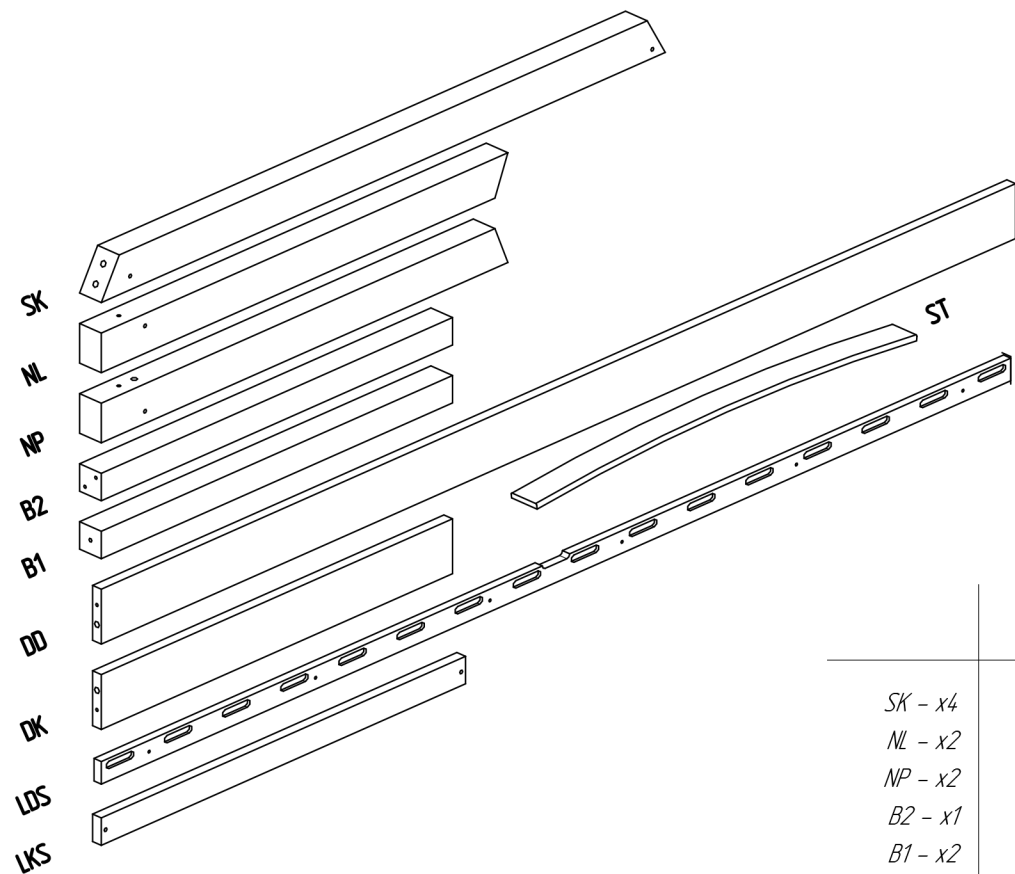


- | | |
|-----|----------|
| SK | - x4 |
| NL | - x2 |
| NP | - x2 |
| B2 | - x1 |
| B1 | - x2 |
| DD | - x2 |
| DK | - x2 |
| LDS | - x2 |
| LKS | - x1 |
| ST | - x10-16 |

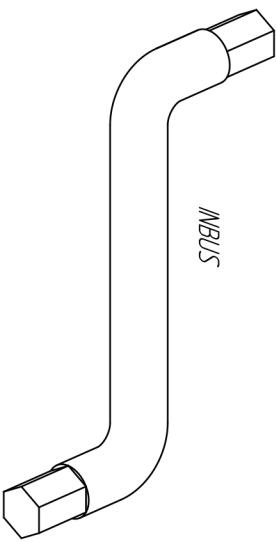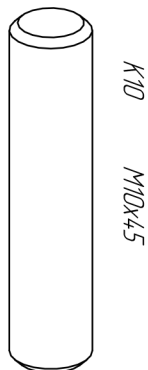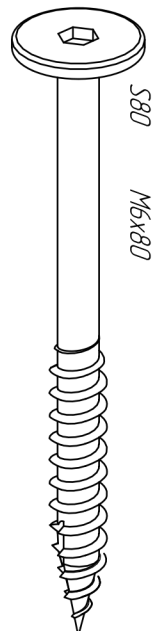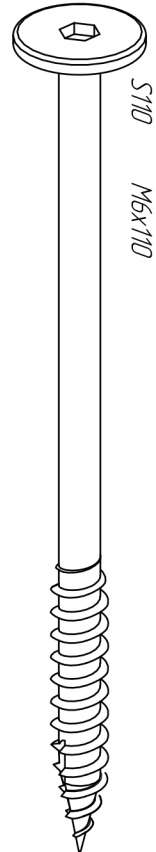



S110 - x4
S80 - x12
W30 - x14
K10 - x20
G - x3
INBUS - x1


Počet otvorů pro vložení roštových lamel a počet dílů ST.


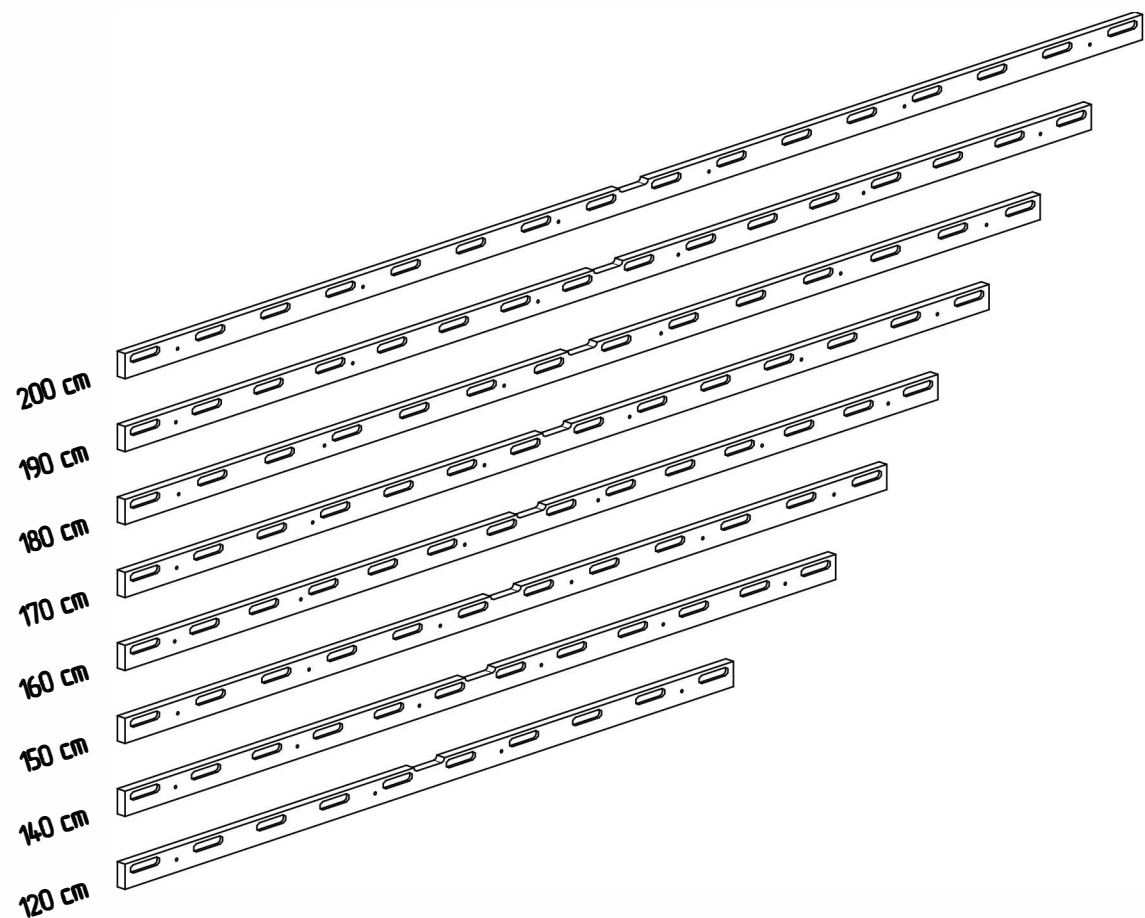


Délka	QT
200 cm	16
190 cm	16
180 cm	14
170 cm	14
160 cm	14
150 cm	12
140 cm	12
120 cm	10

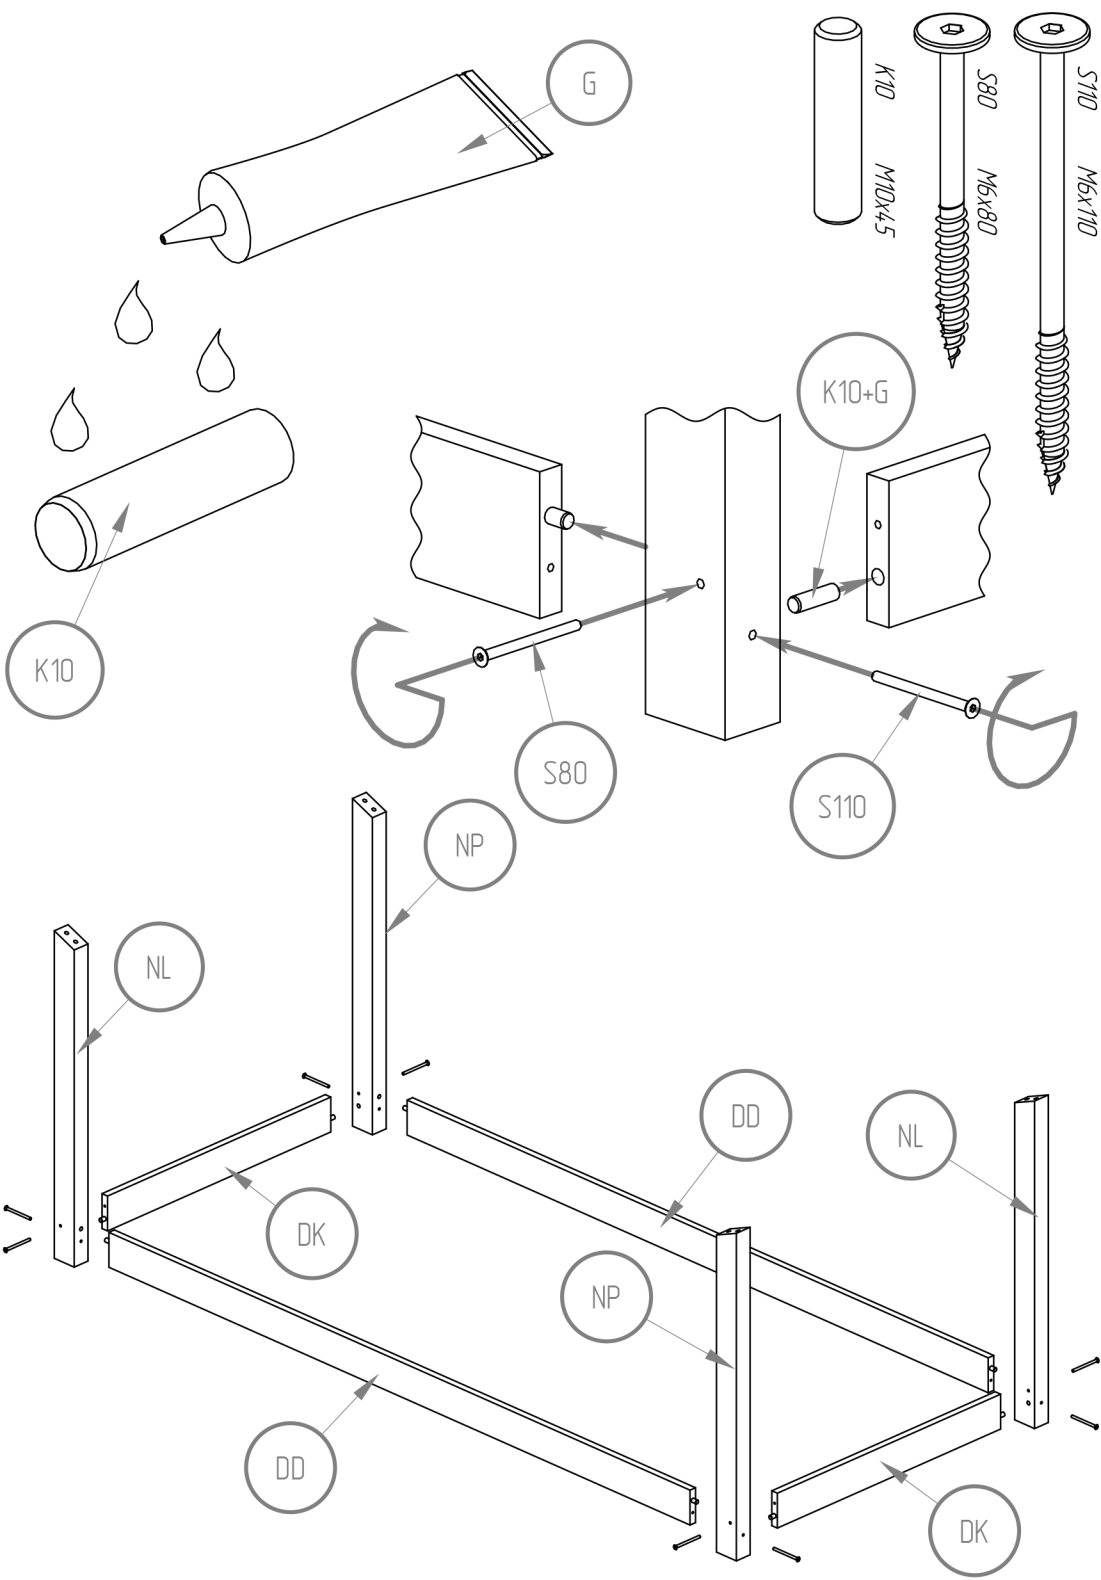


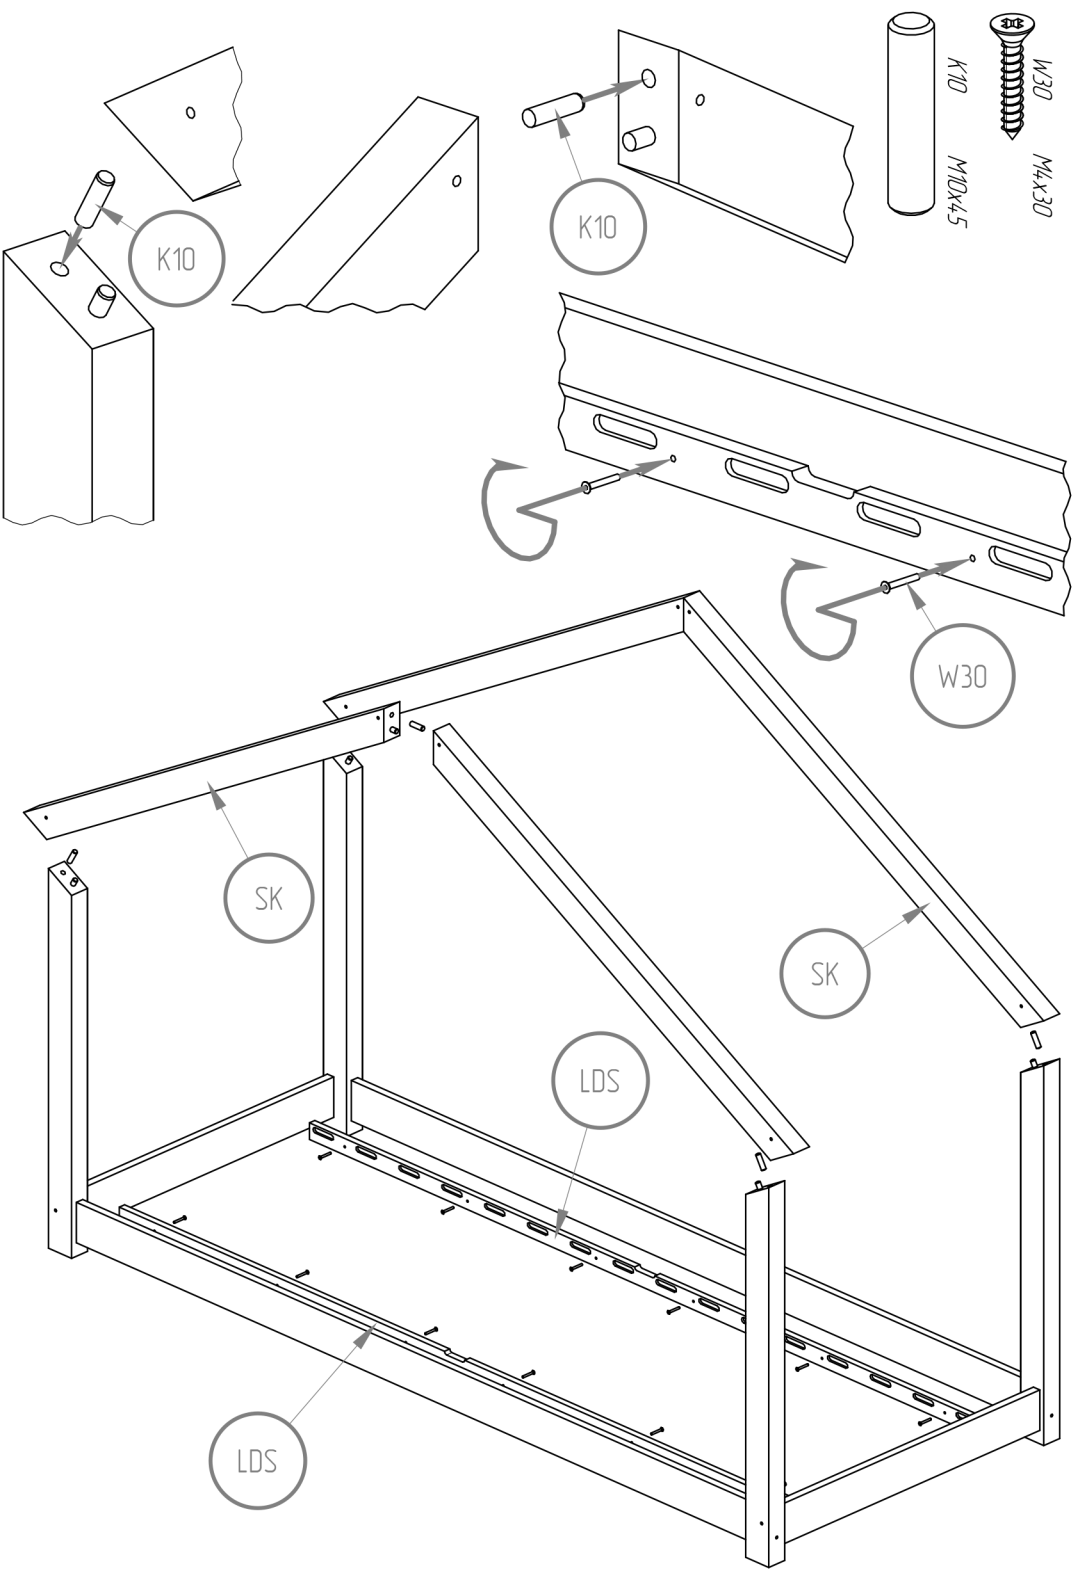

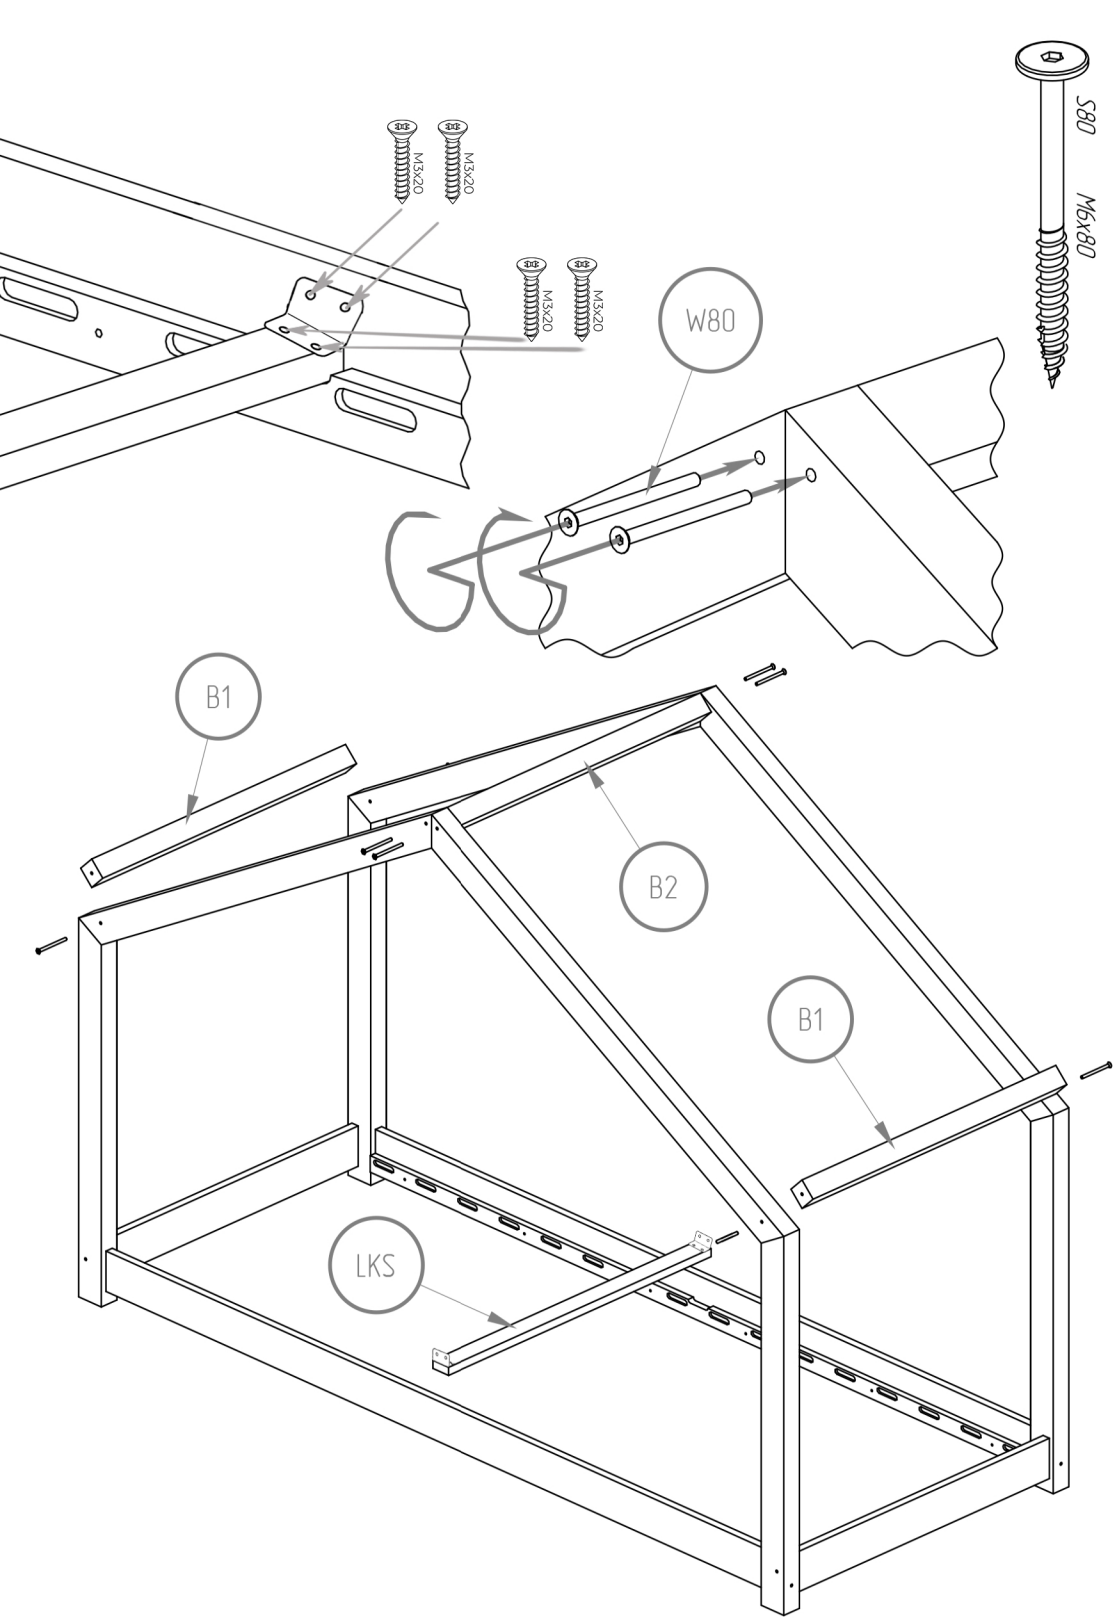


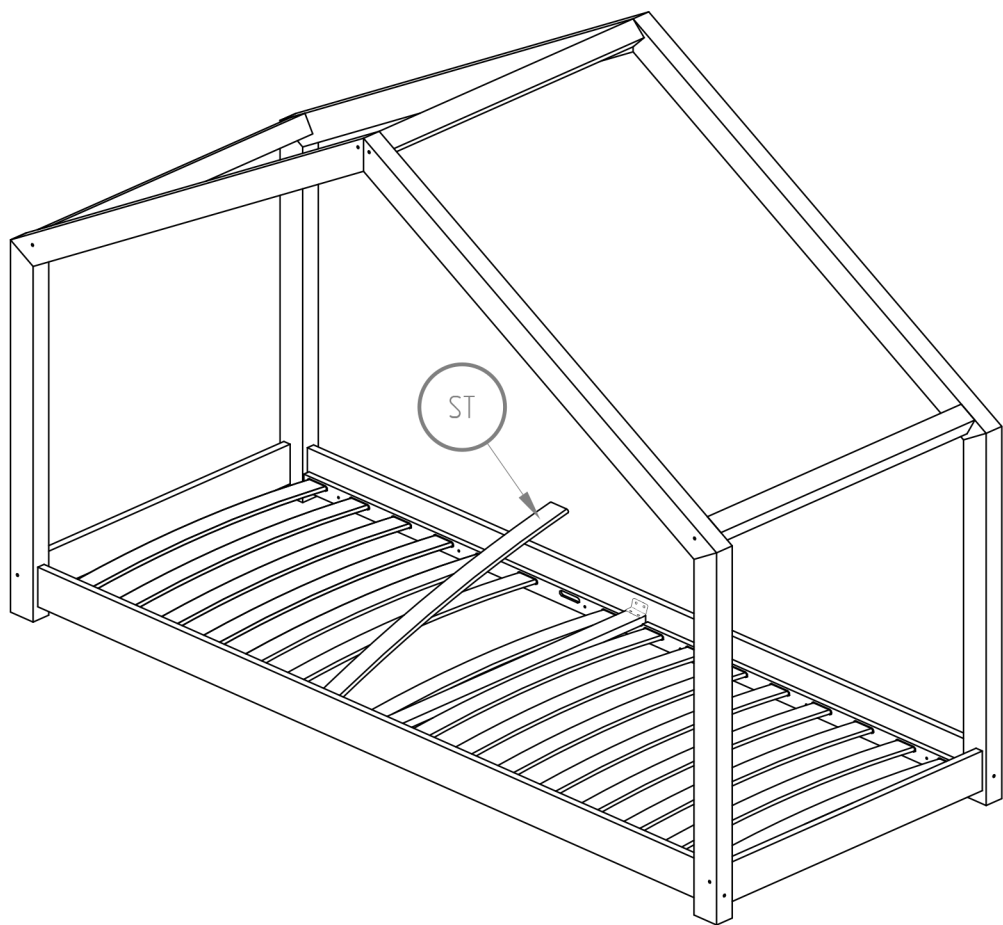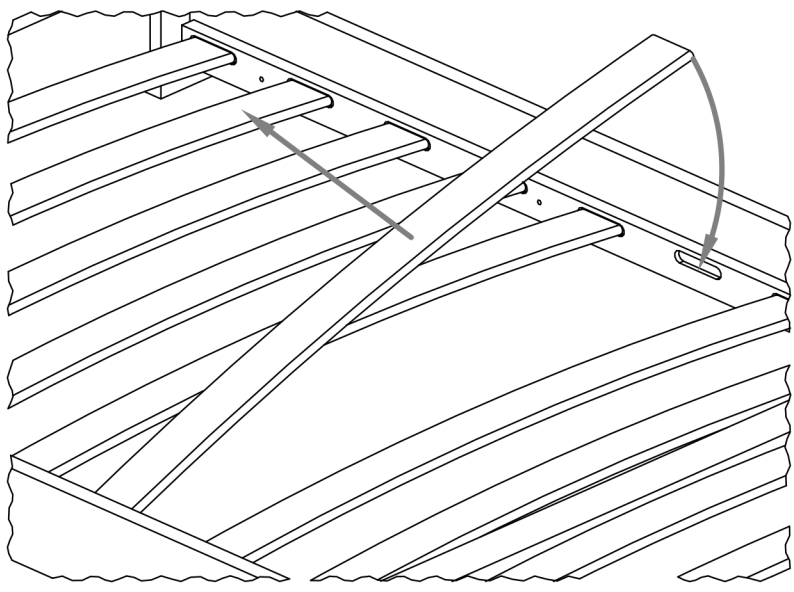


Instalace postelí o šířce přes 100 cm, doplňujeme tuto instrukci.

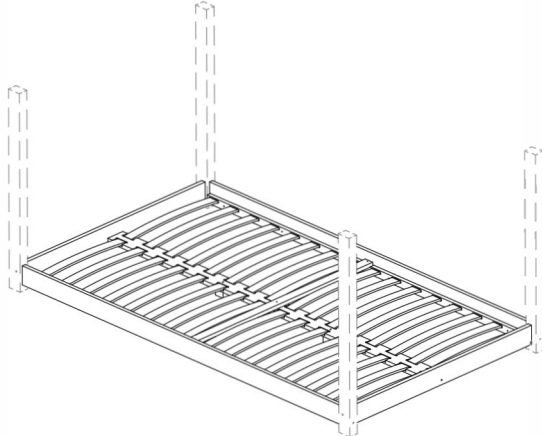


K10.1 M10x35



W30 M4x30

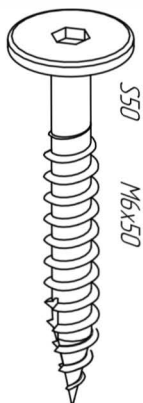

S50 M6x50

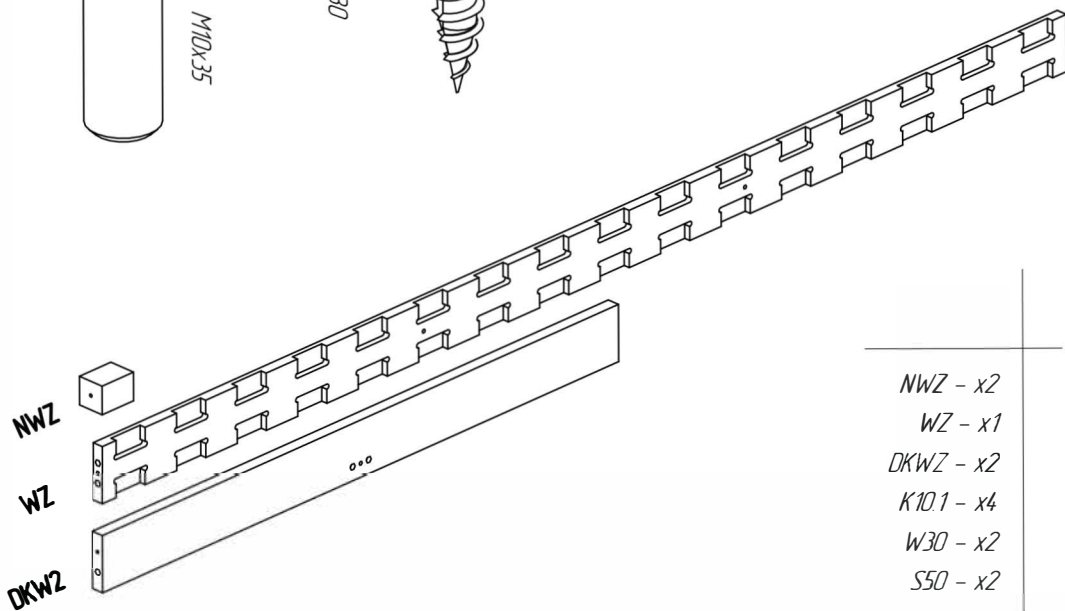

NWZ - x2


WZ - x1


DKW2 - x2

K10.1 - x4


W30 - x2



S50 - x2

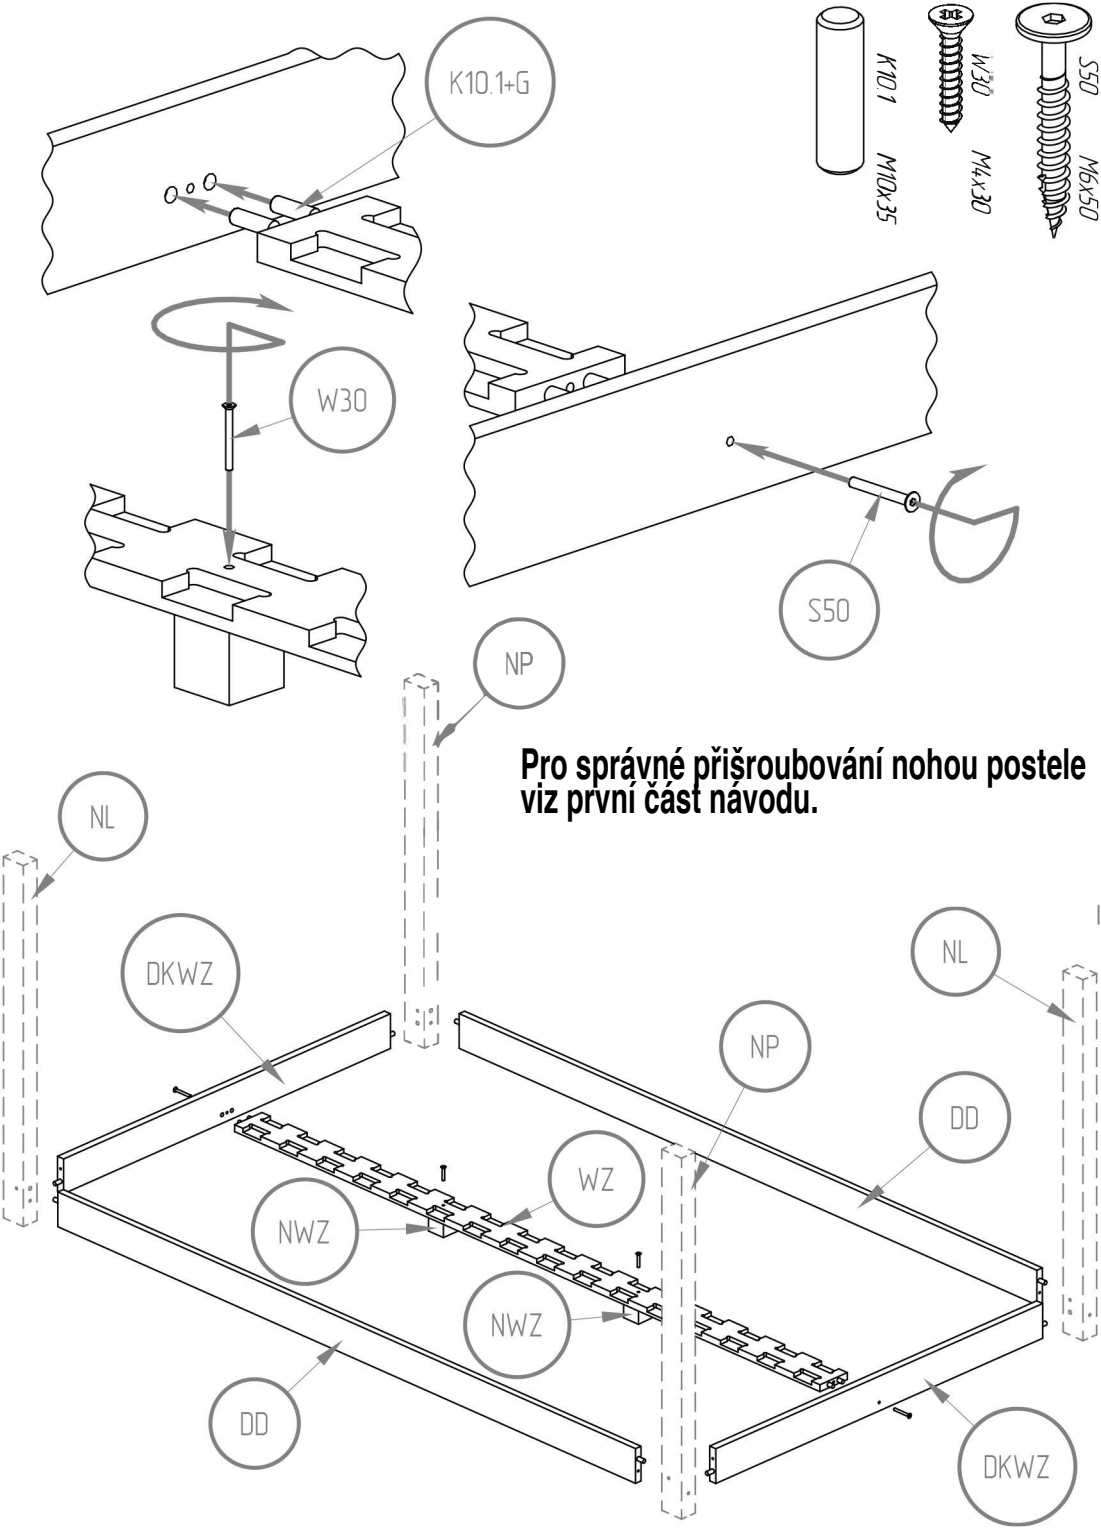

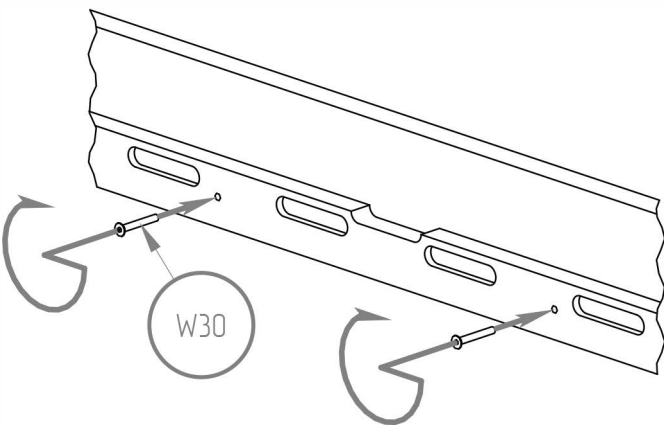



Pro správné přišroubování nohou postele
viz první část návodu

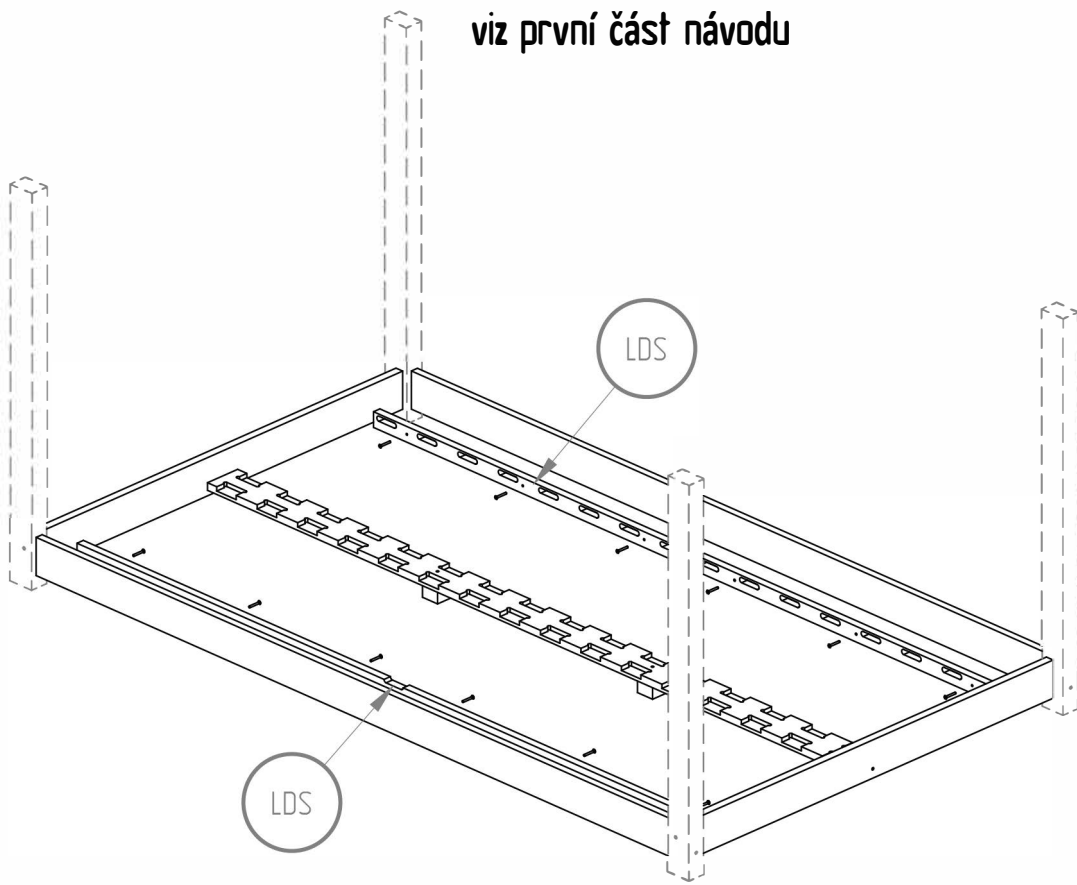

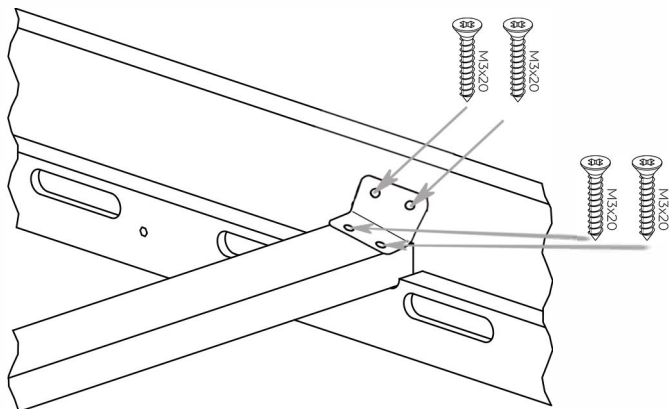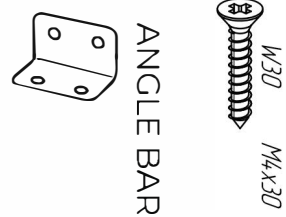

**Pro správné přišroubování nohou
postele viz první část návodu**

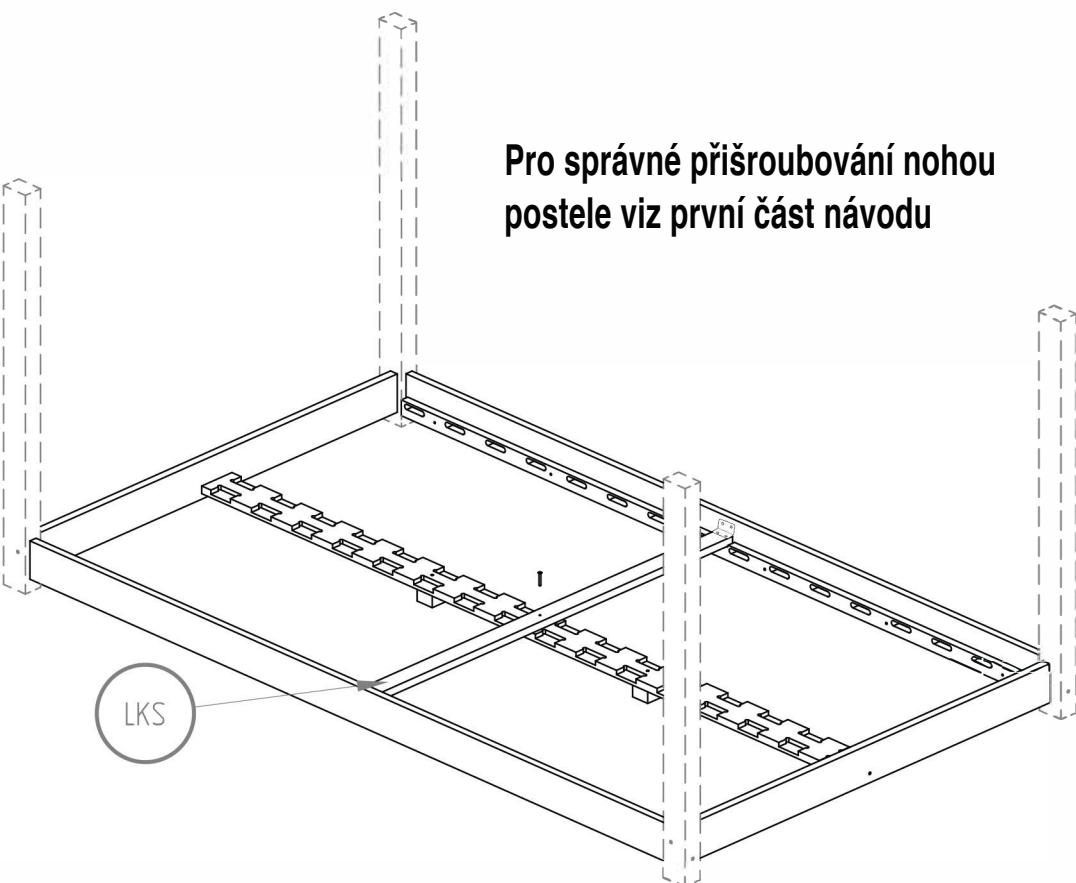

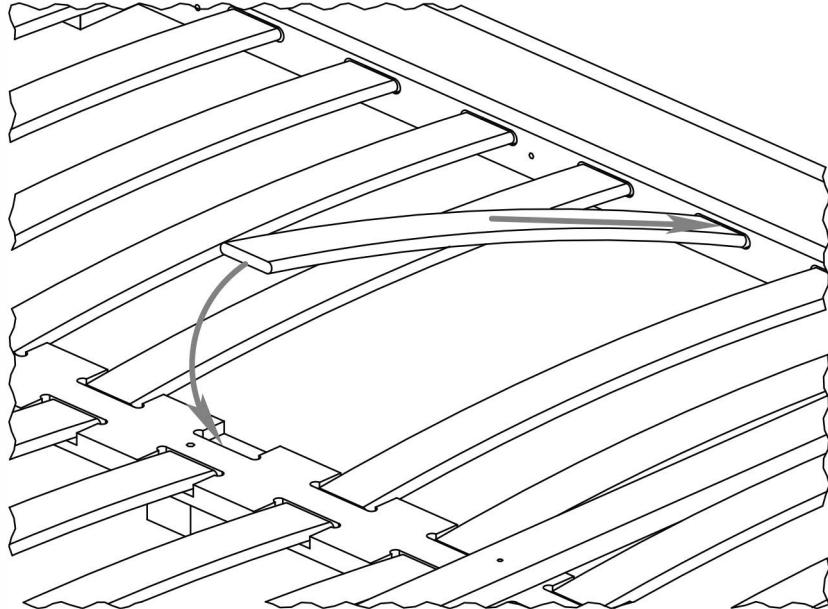

Pro správné přišroubování nohou postele viz první část návodu.

