





E L I S

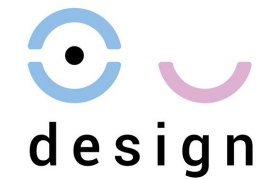

Návod na montáž

Patrová postel  
KOSMOS oval

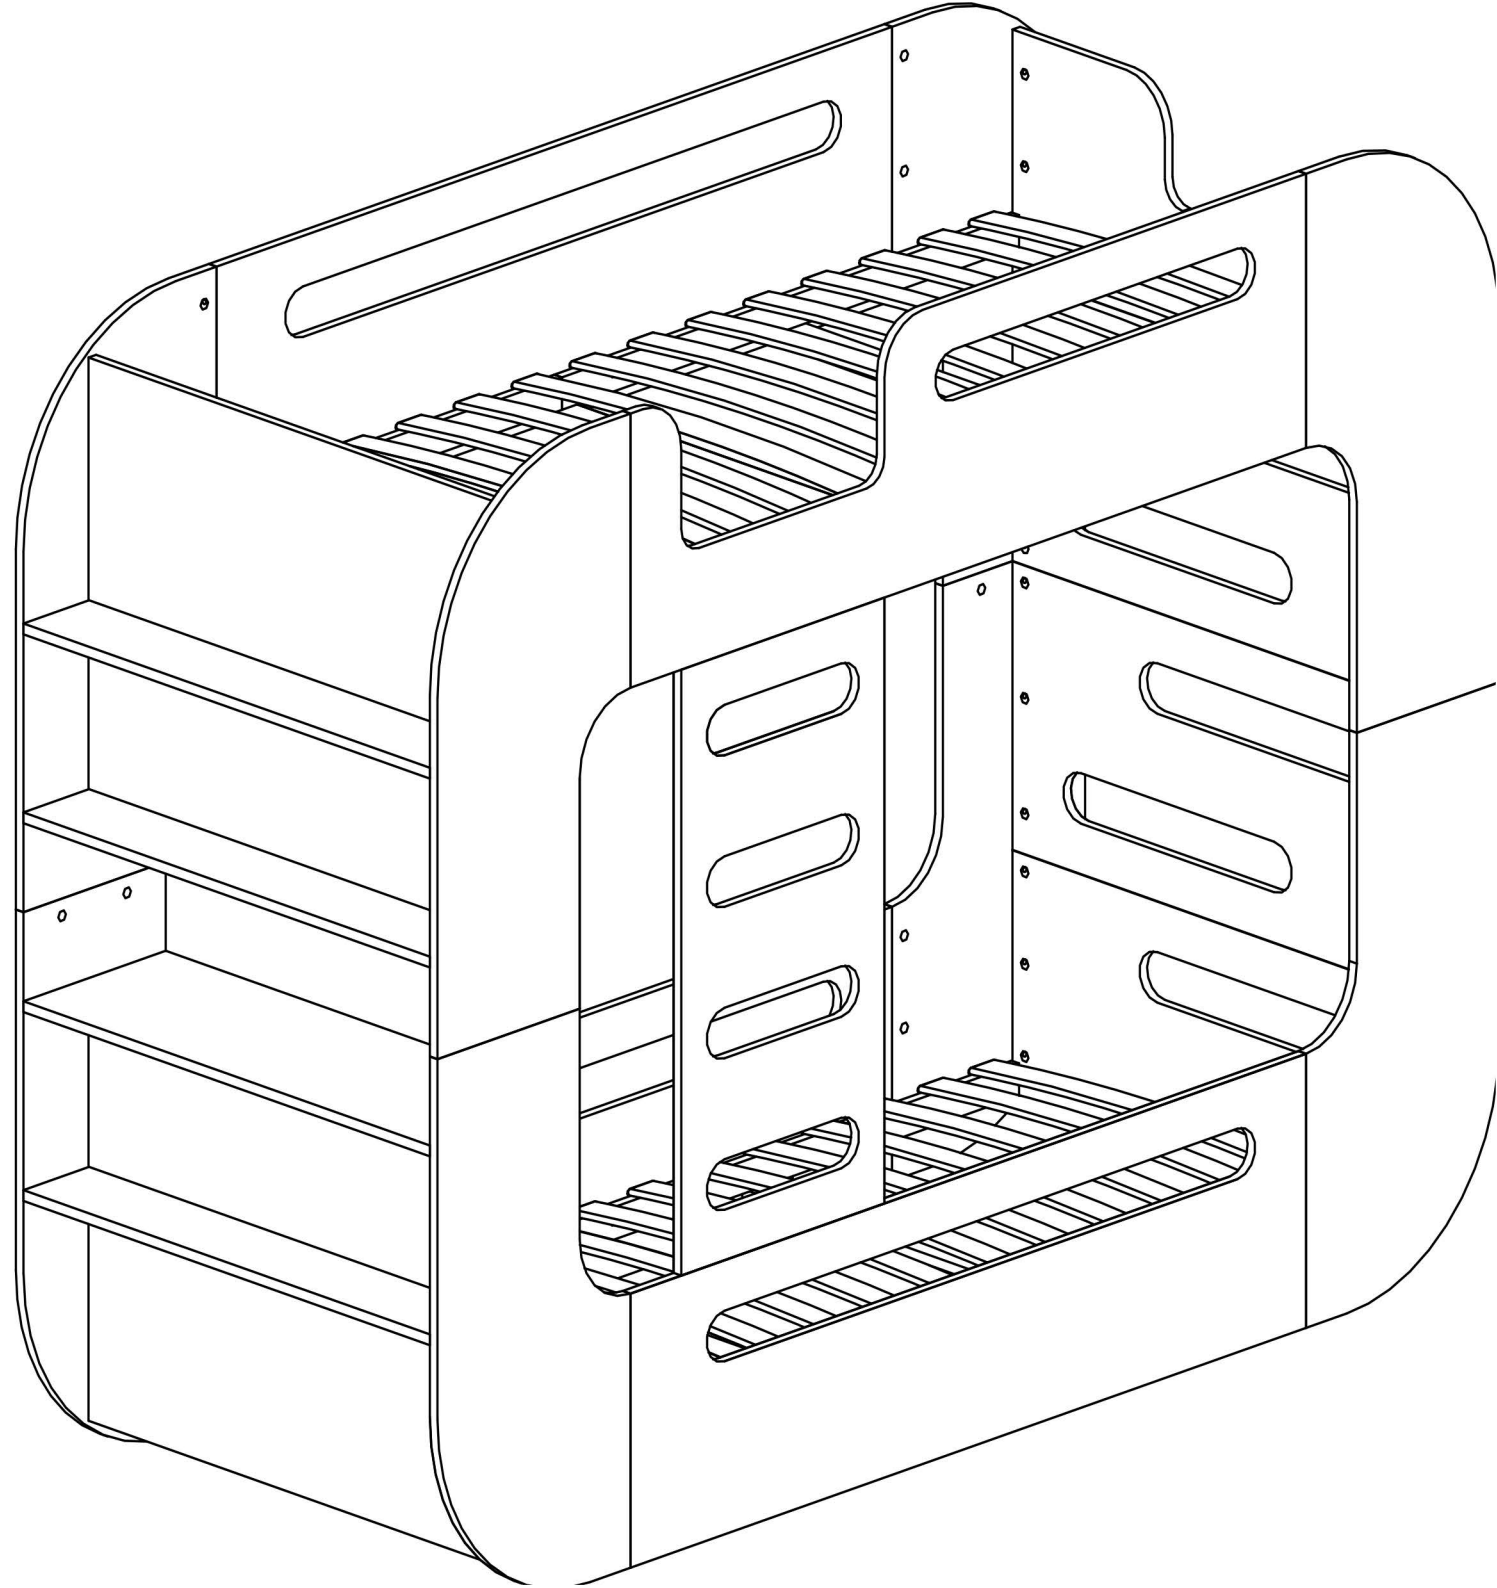

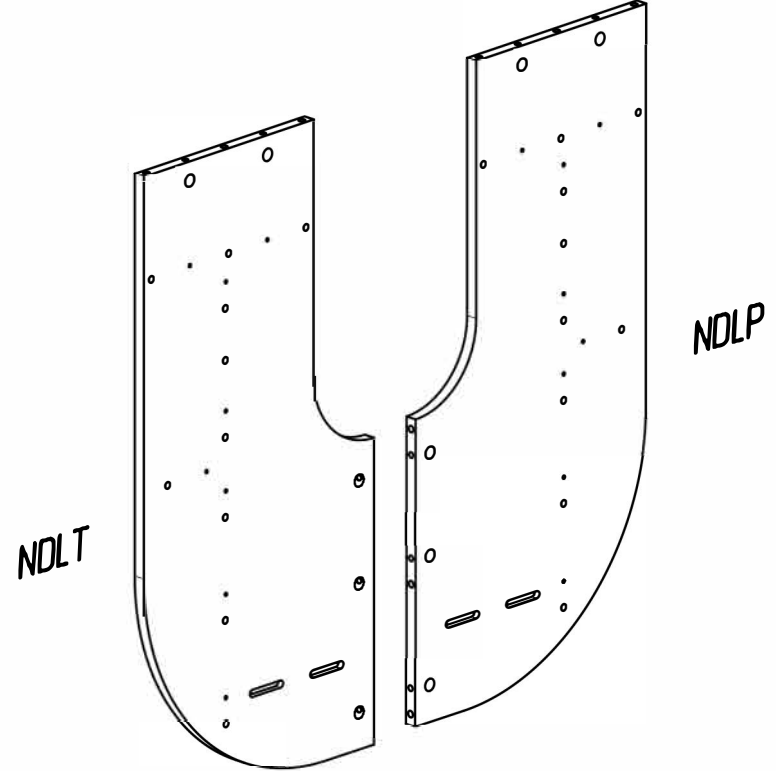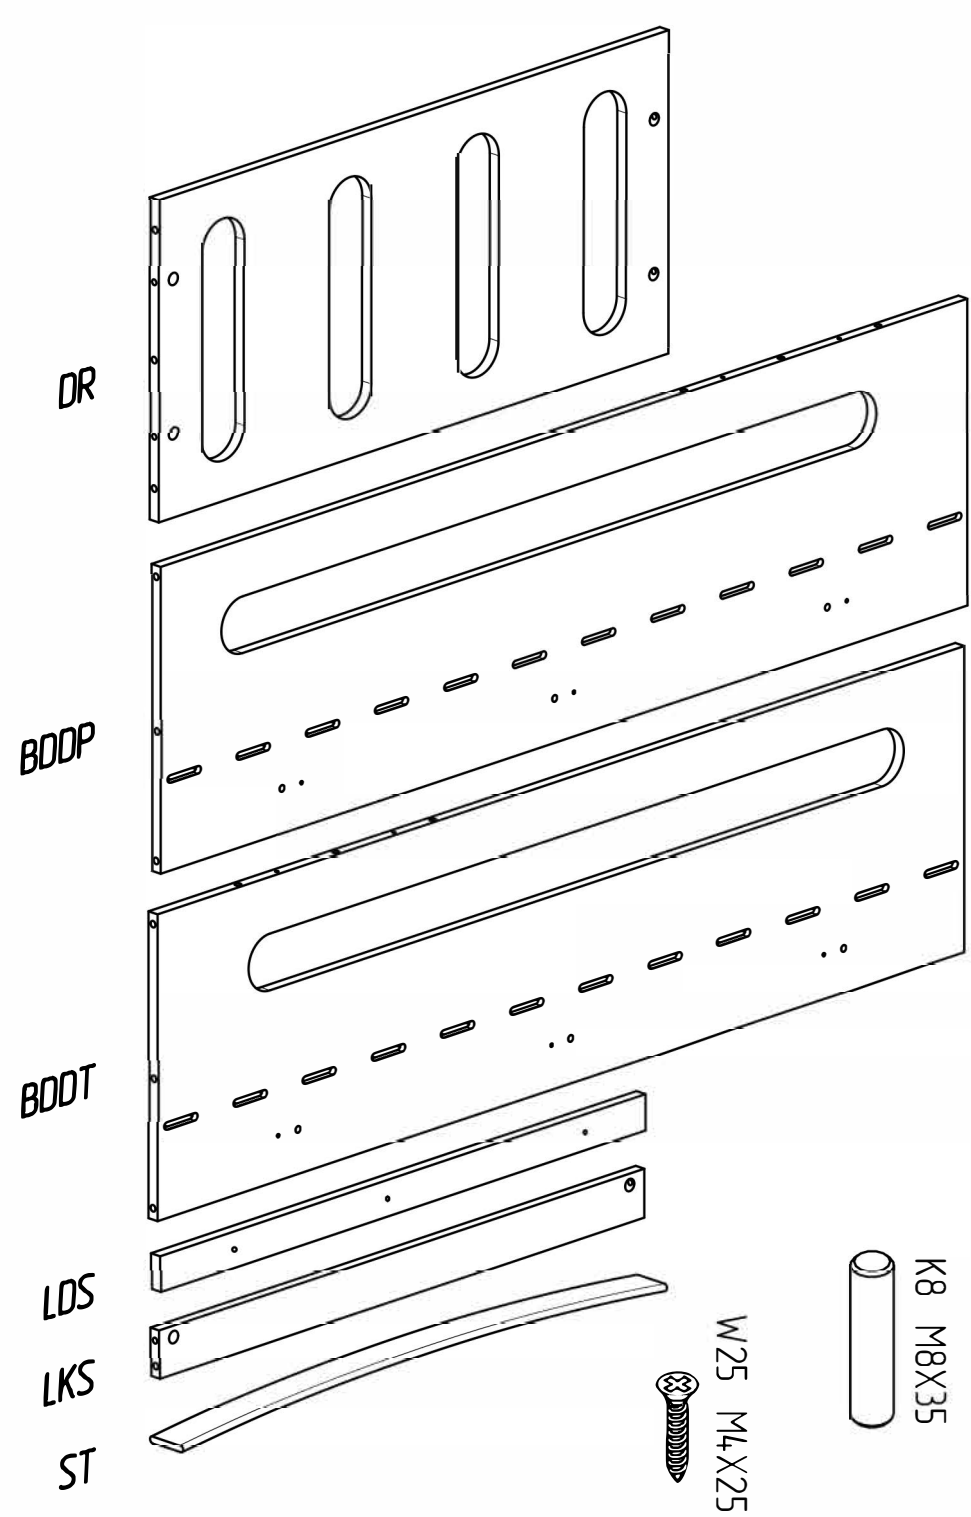


**ŠROUBY**

**PRVKY**

- Mi - x104
- TRZ - x104
- K8 - x113
- W25 - x24

- DR - x1
- BDDP - x1
- BDDT - x1
- NDLT - x1
- NDLP - x1
- LDS - x4
- LKS - x3
- ST - x12-16



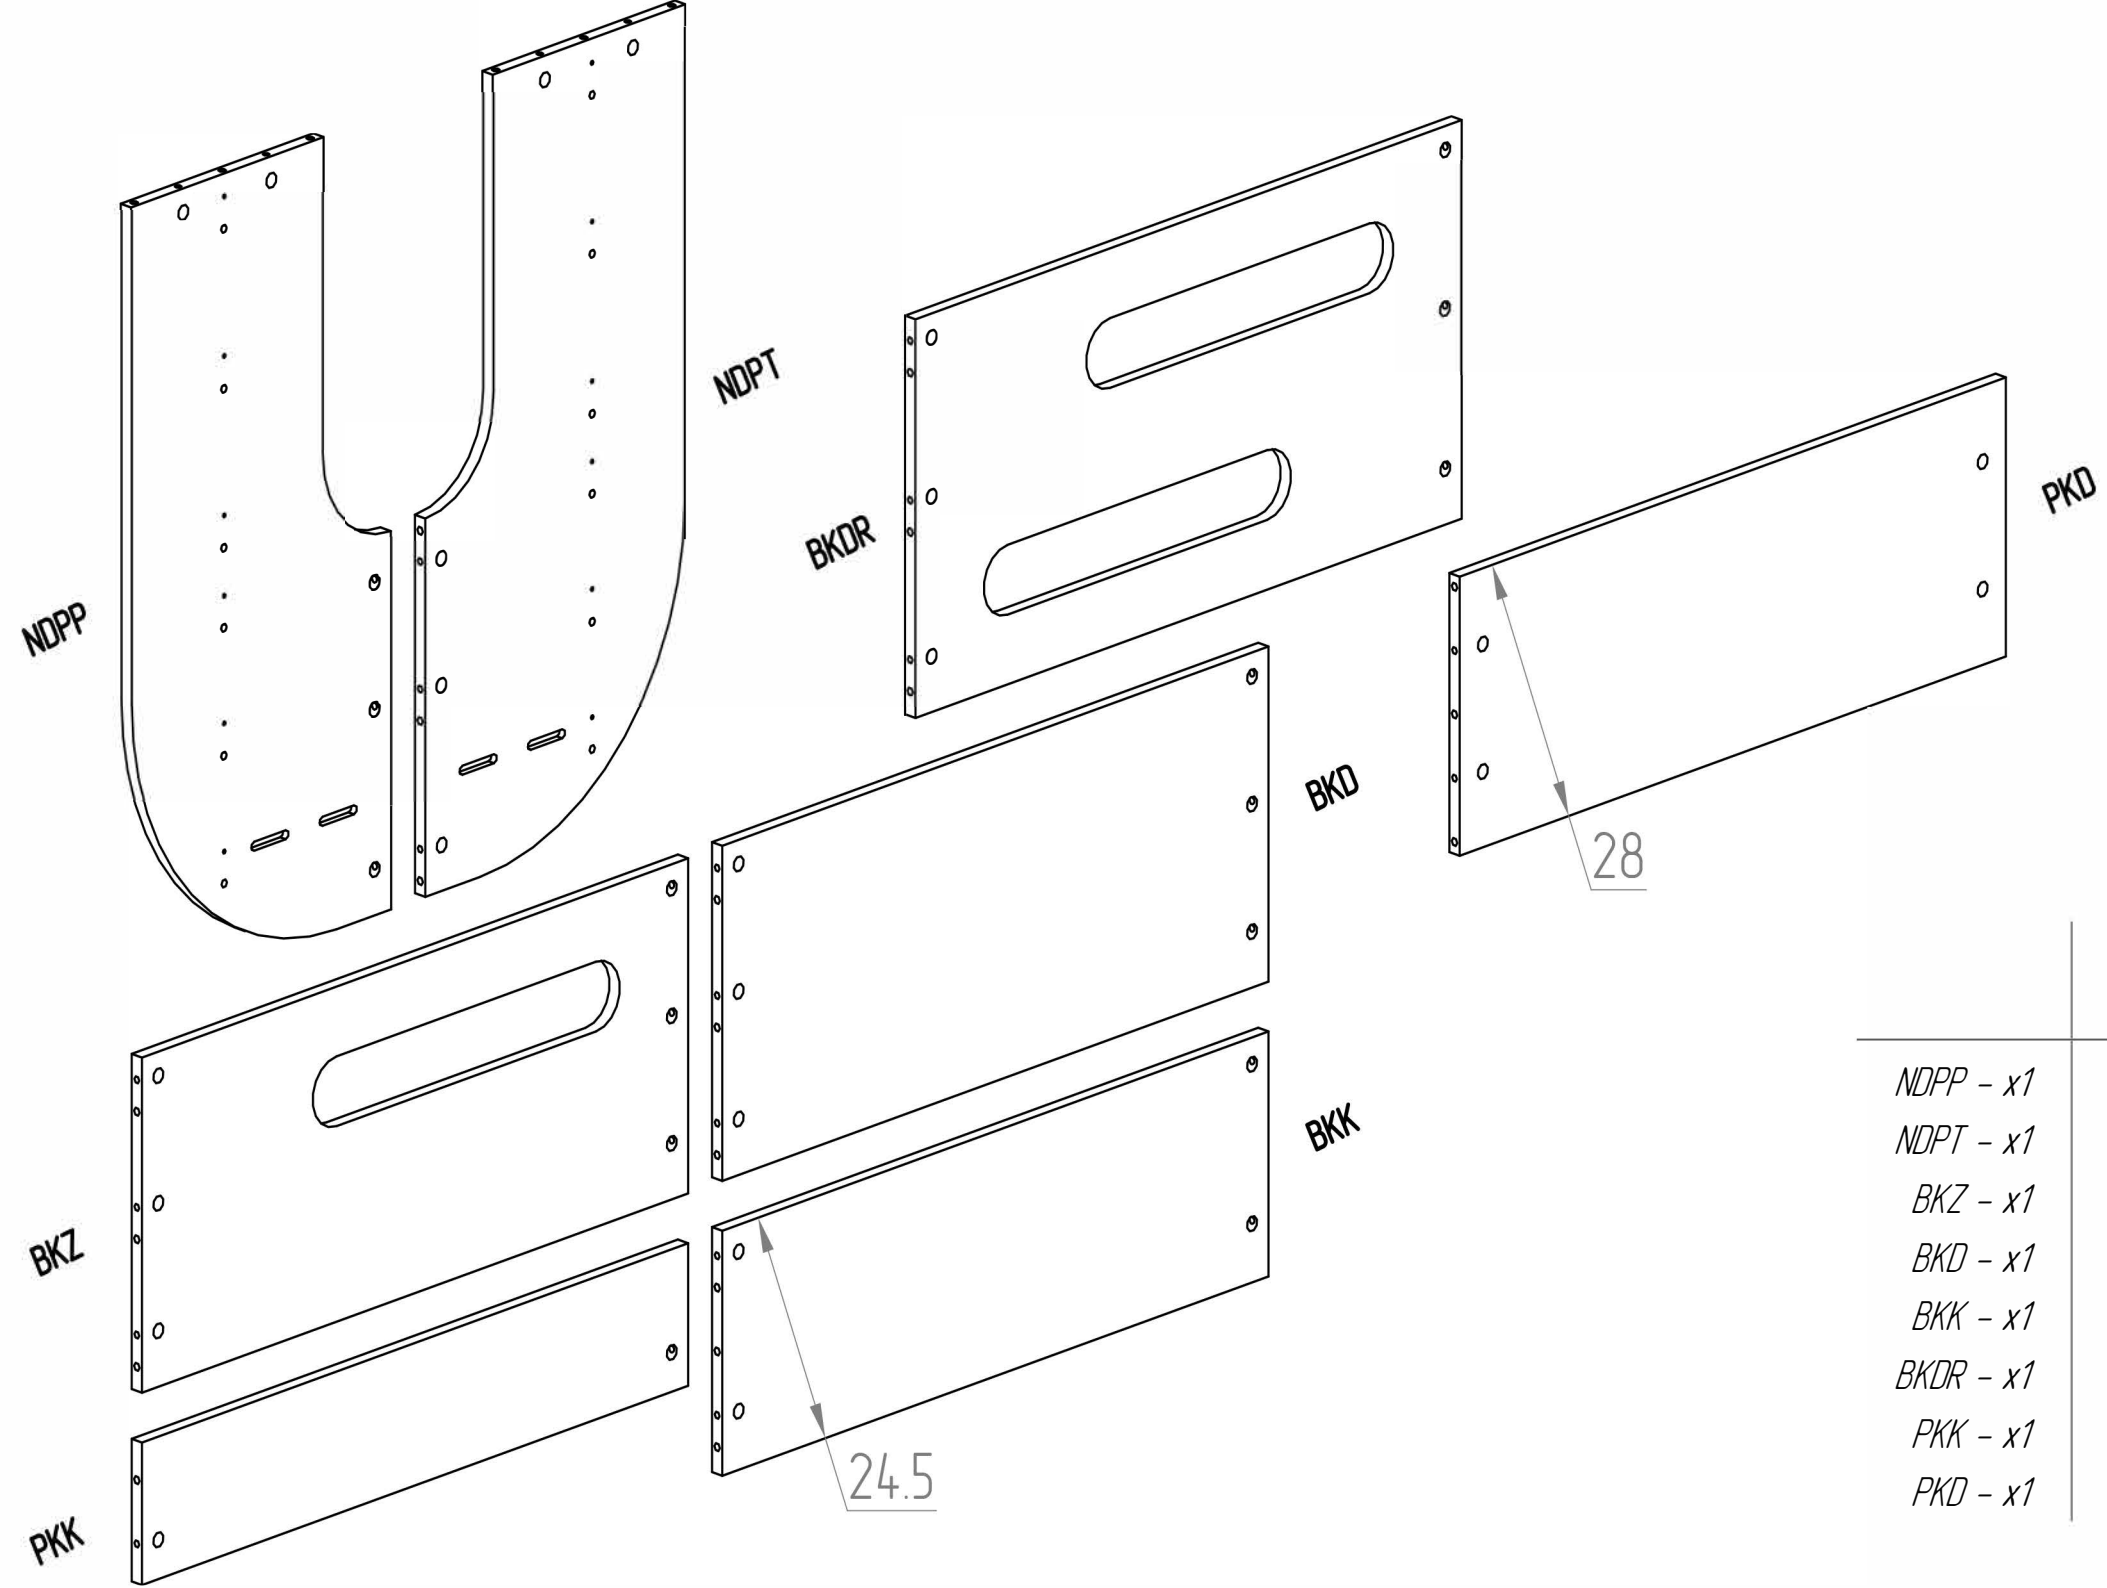

*NDPP - x1*

*NDPT - x1*

*BKZ - x1*


*BKD - x1*


*BKK - x1*

*BKDR - x1*

*PKK - x1*

*PKD - x1*

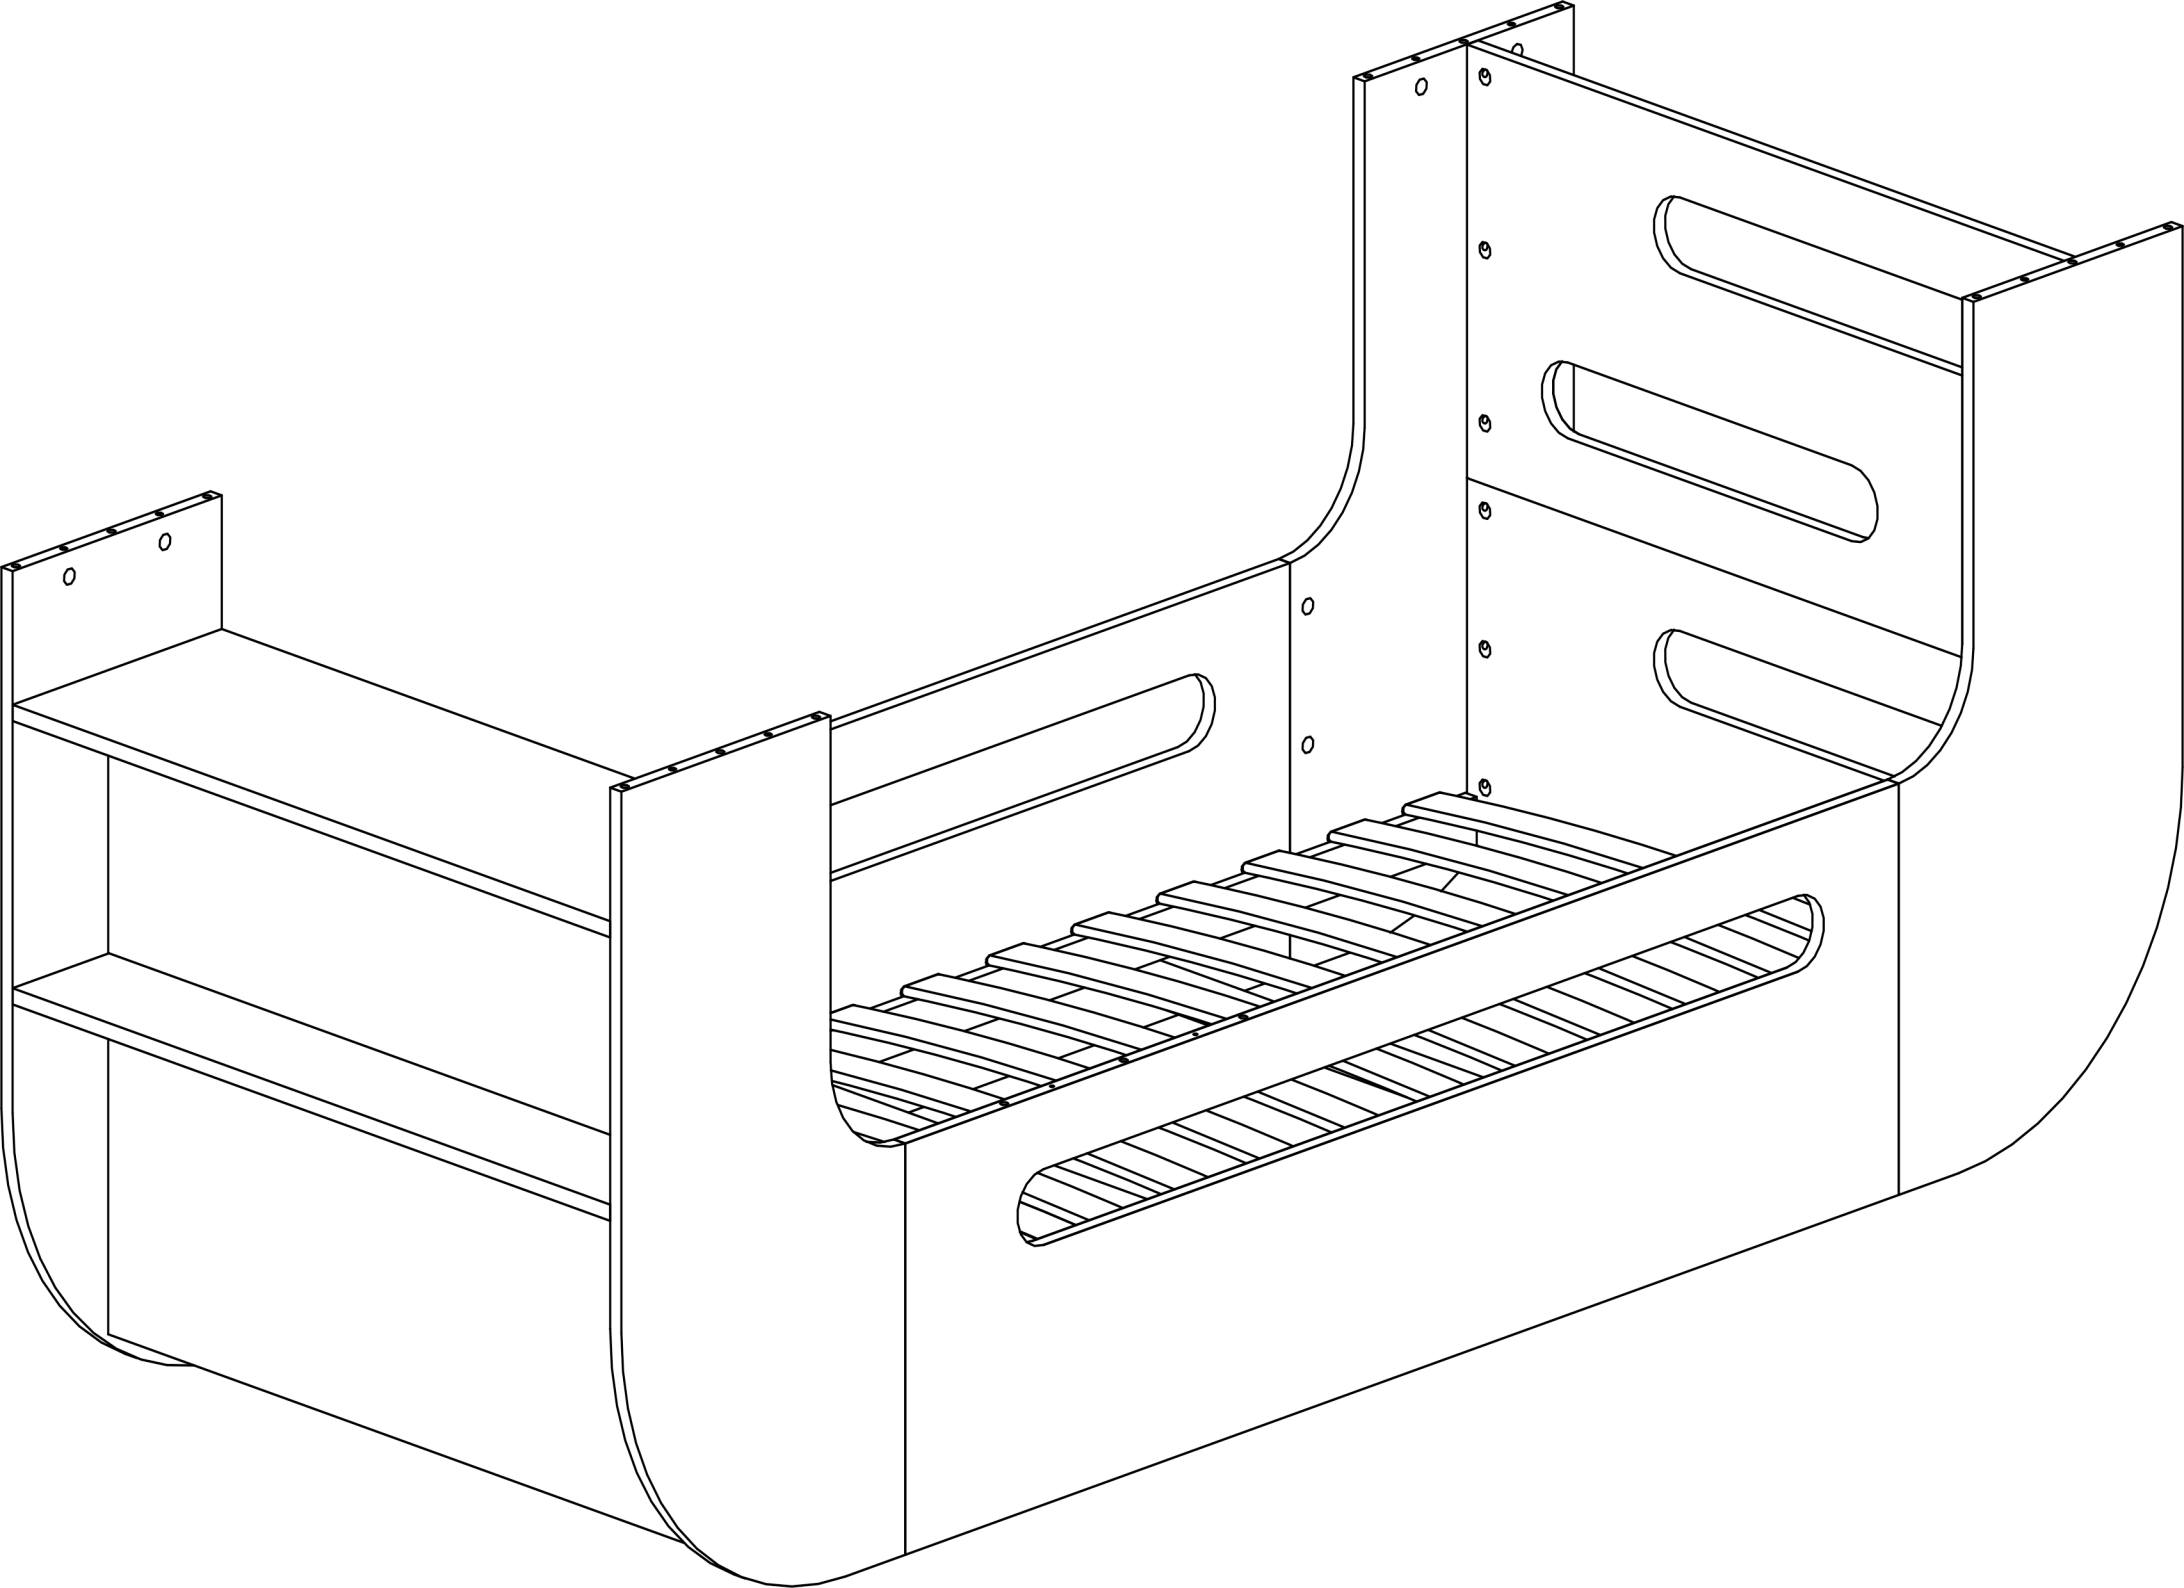

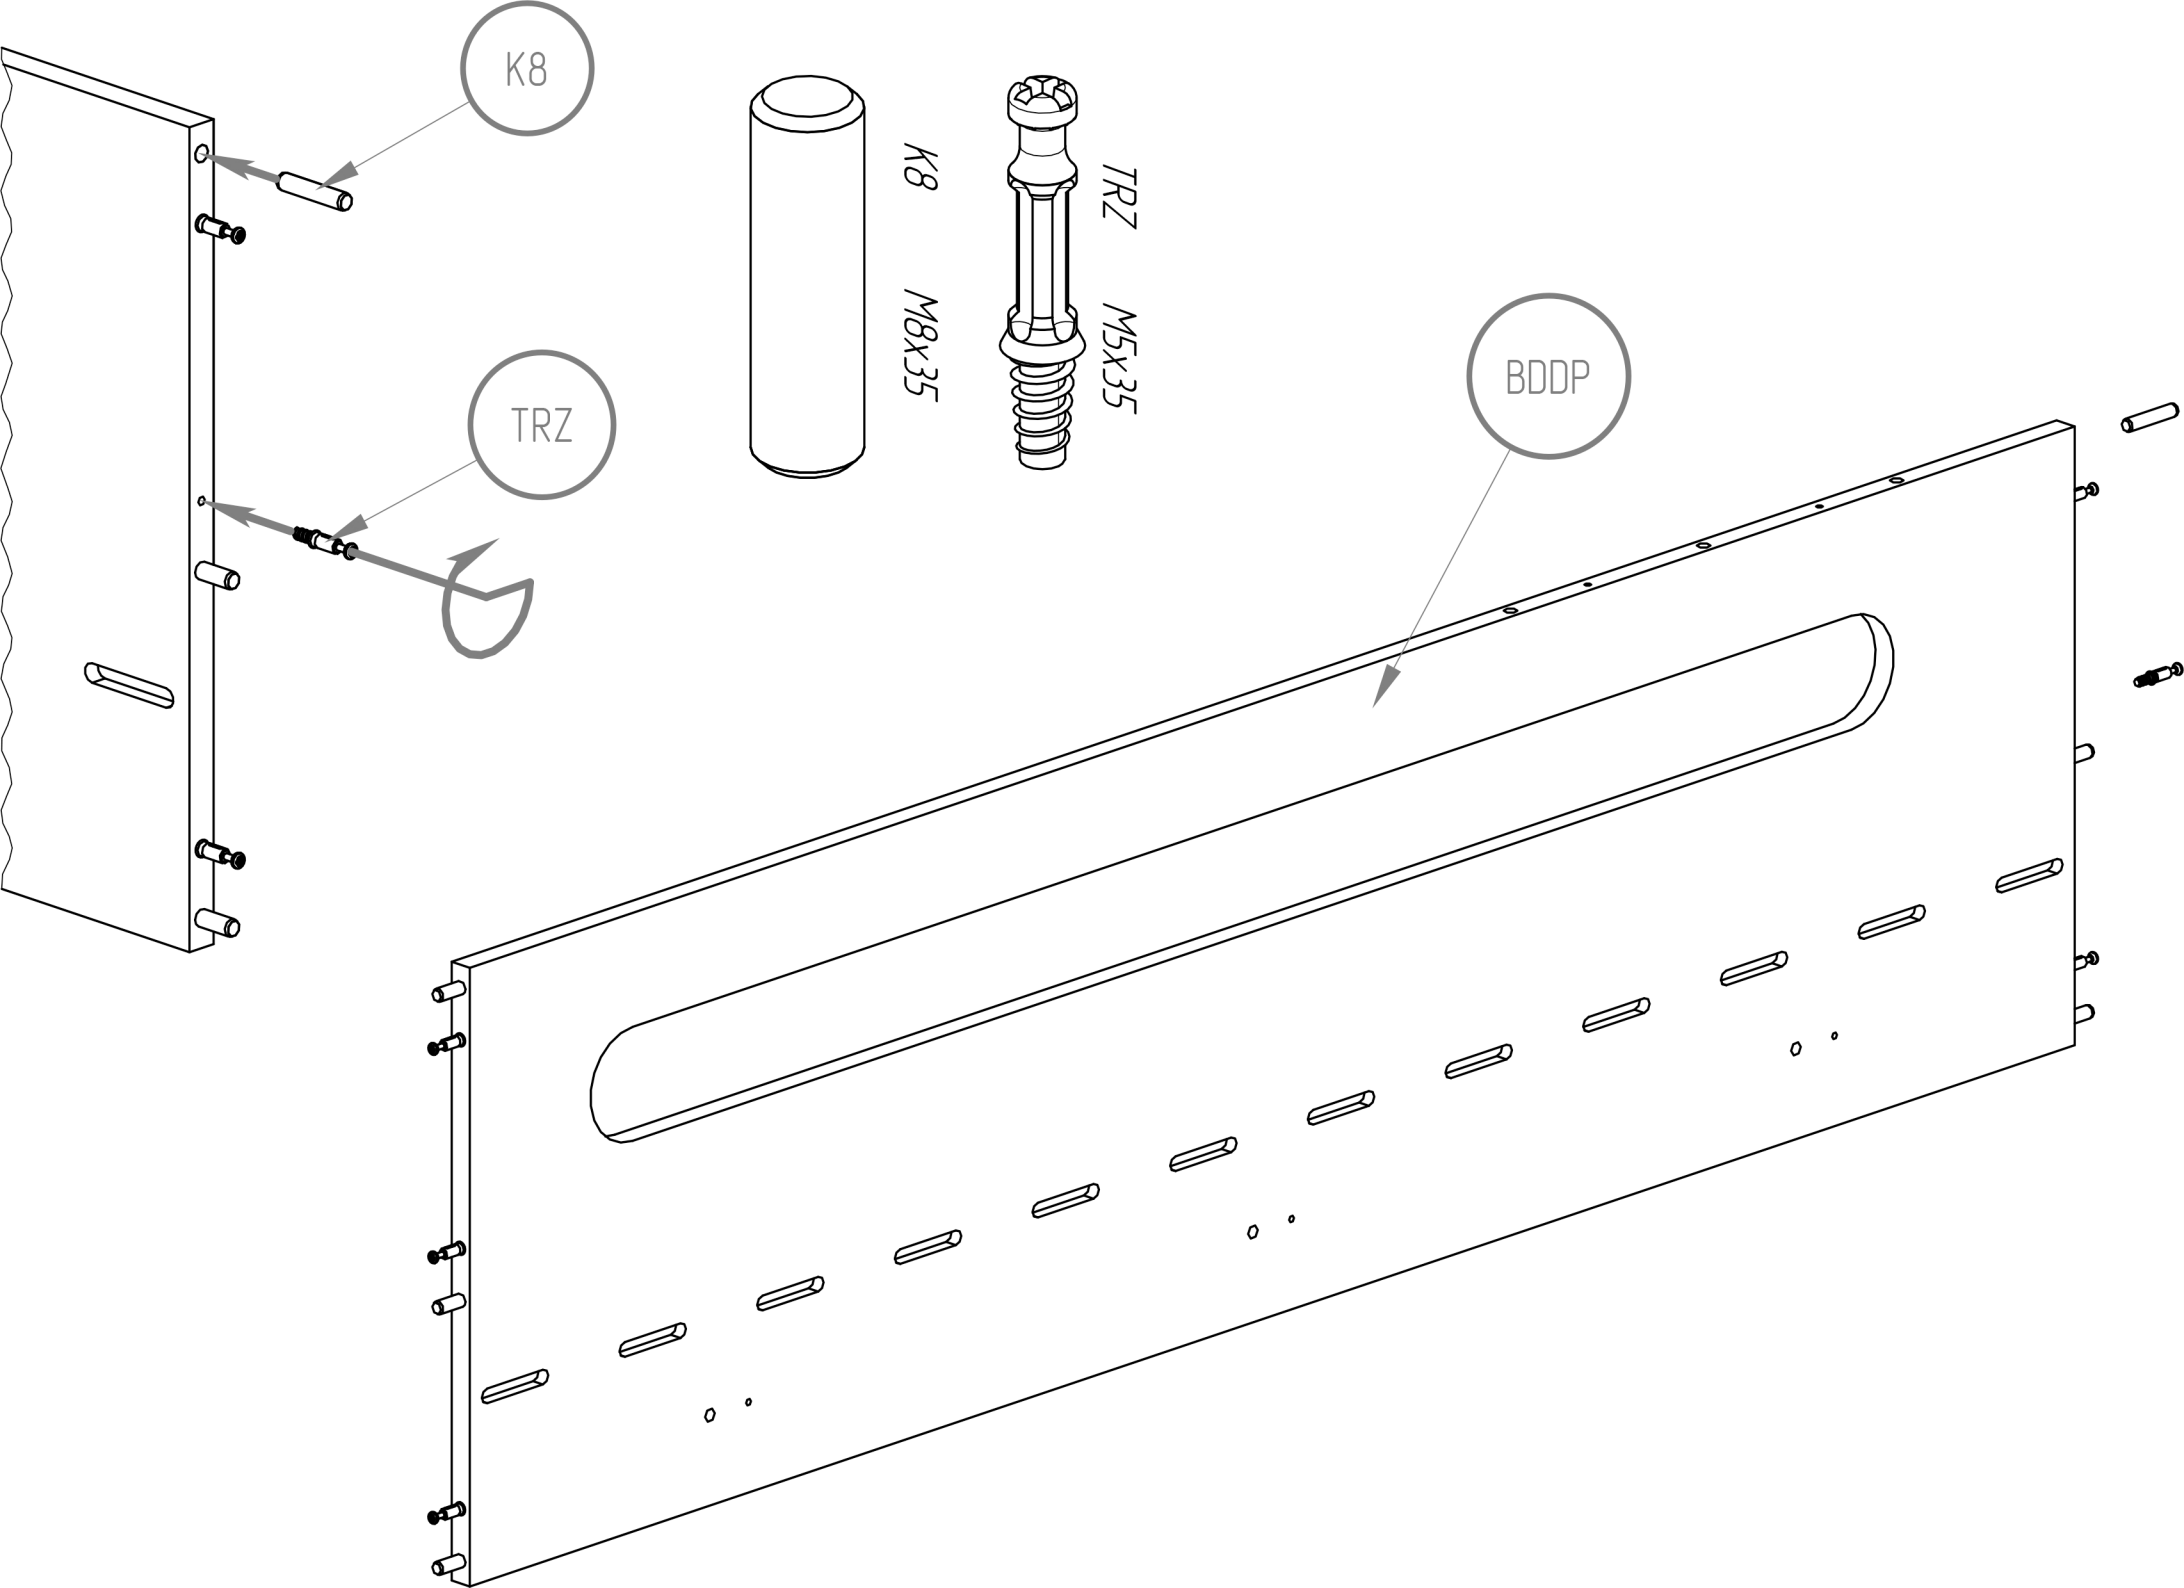


K8


TRZ


BDDP

M8x35


M5x35

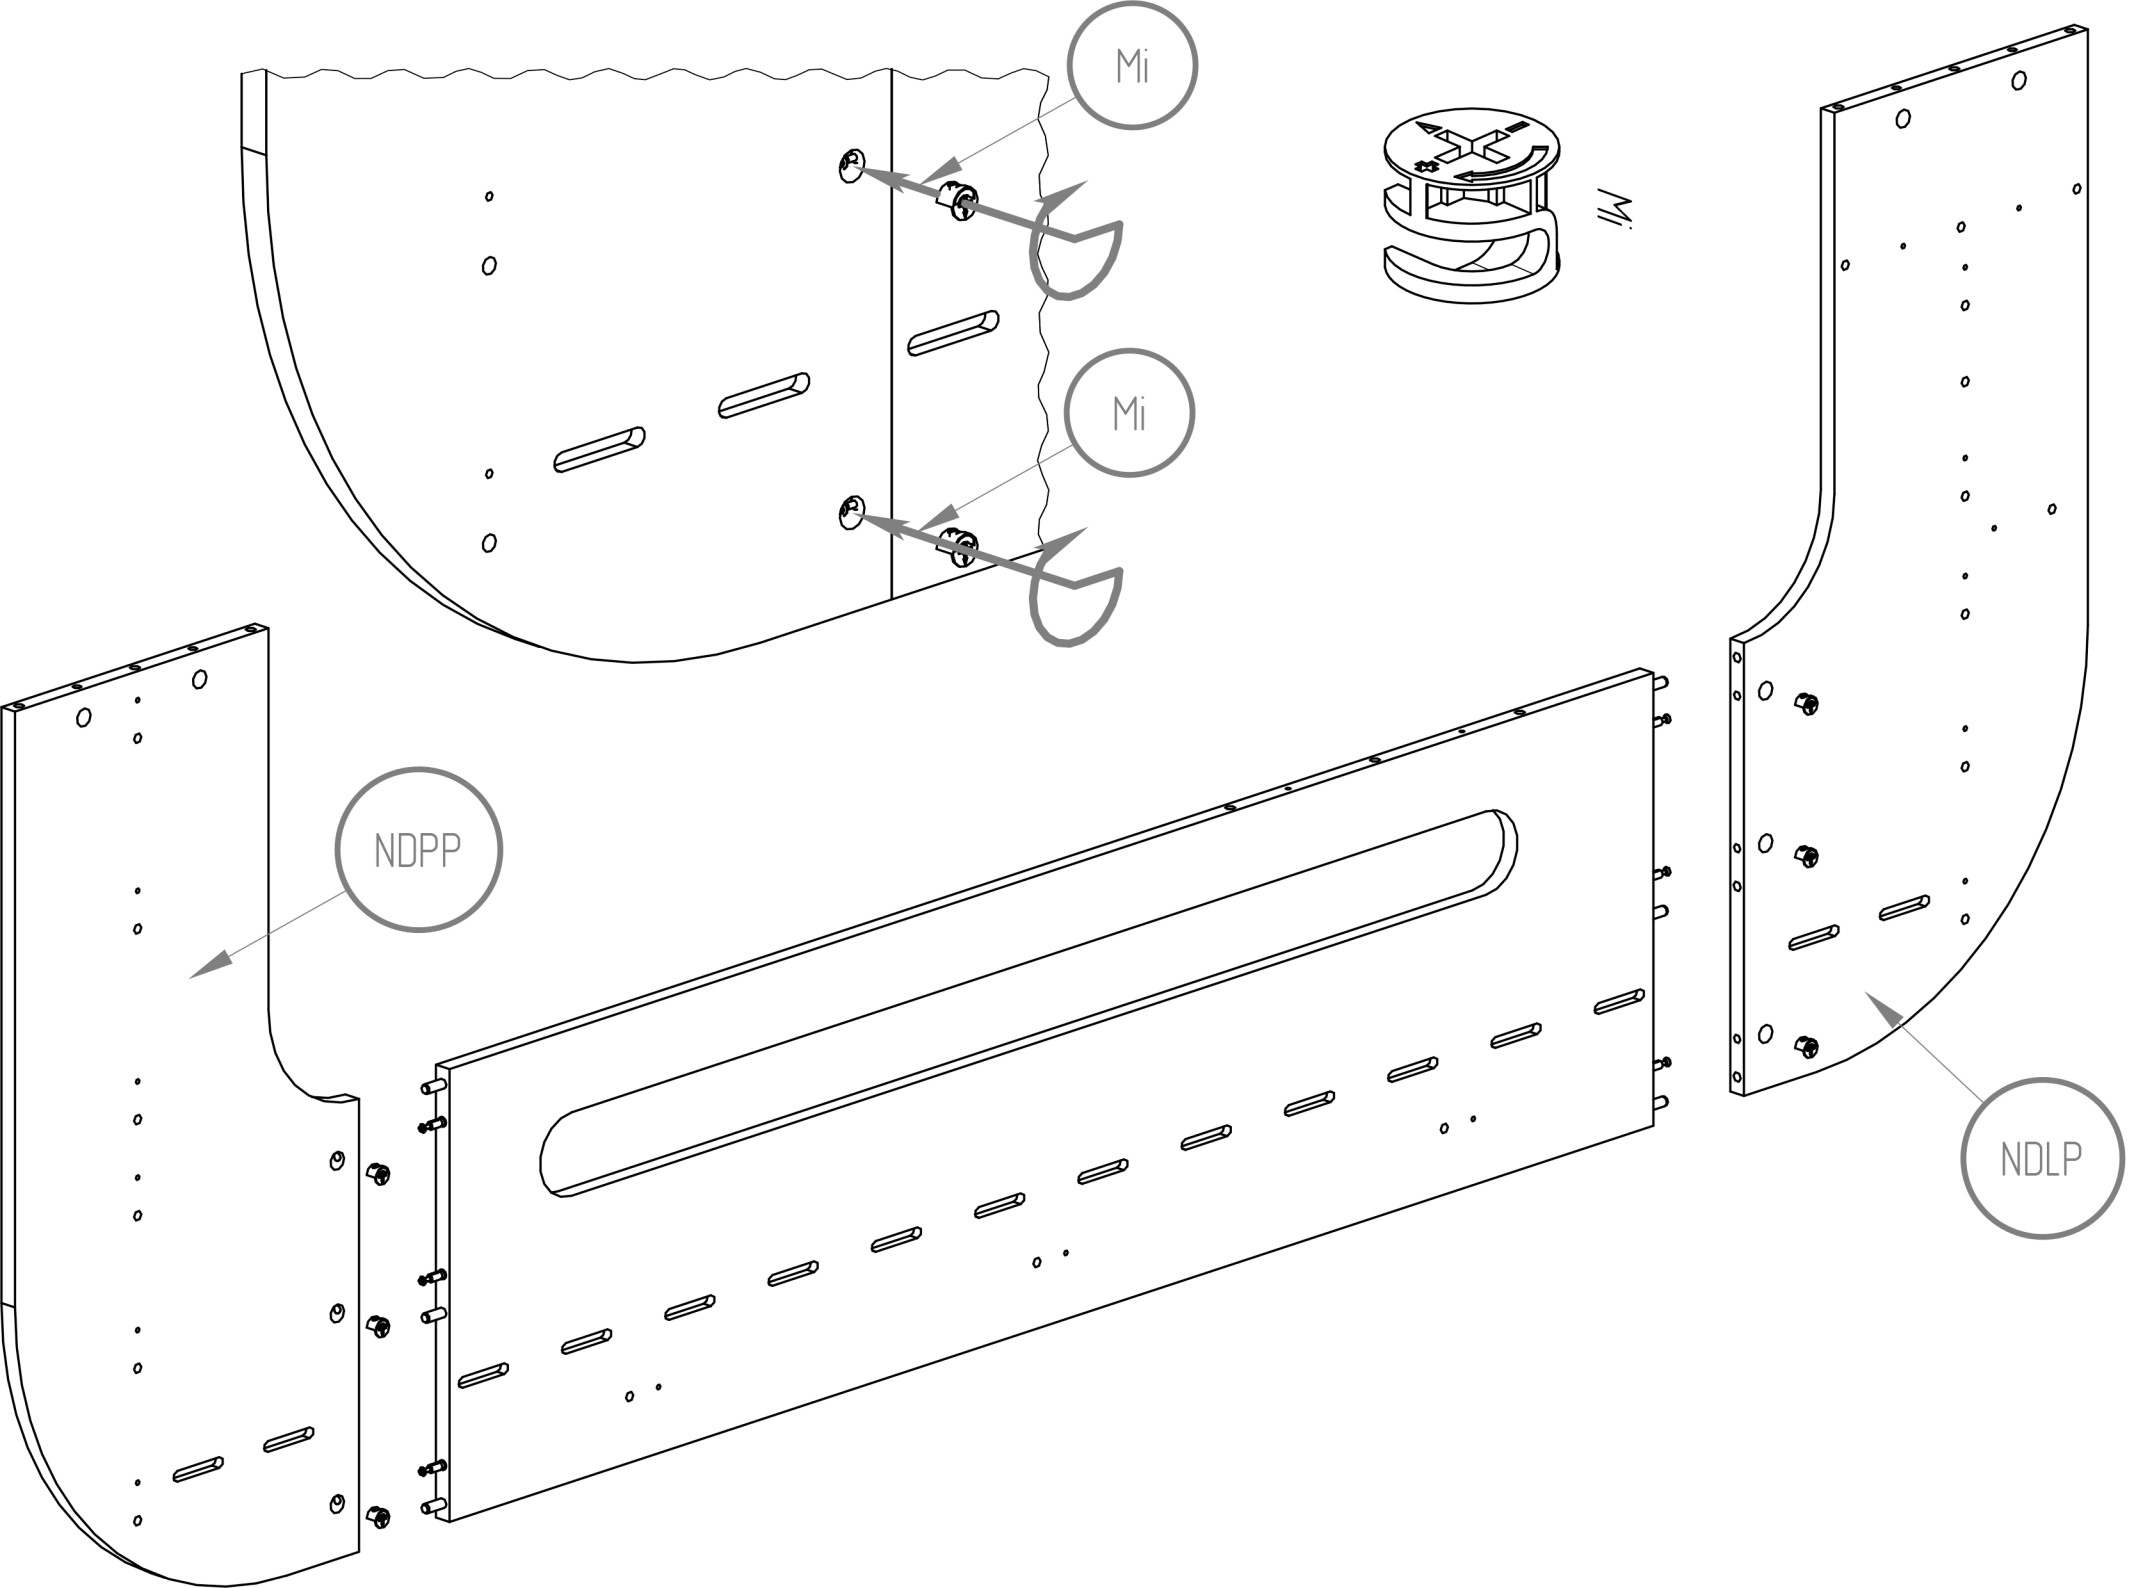


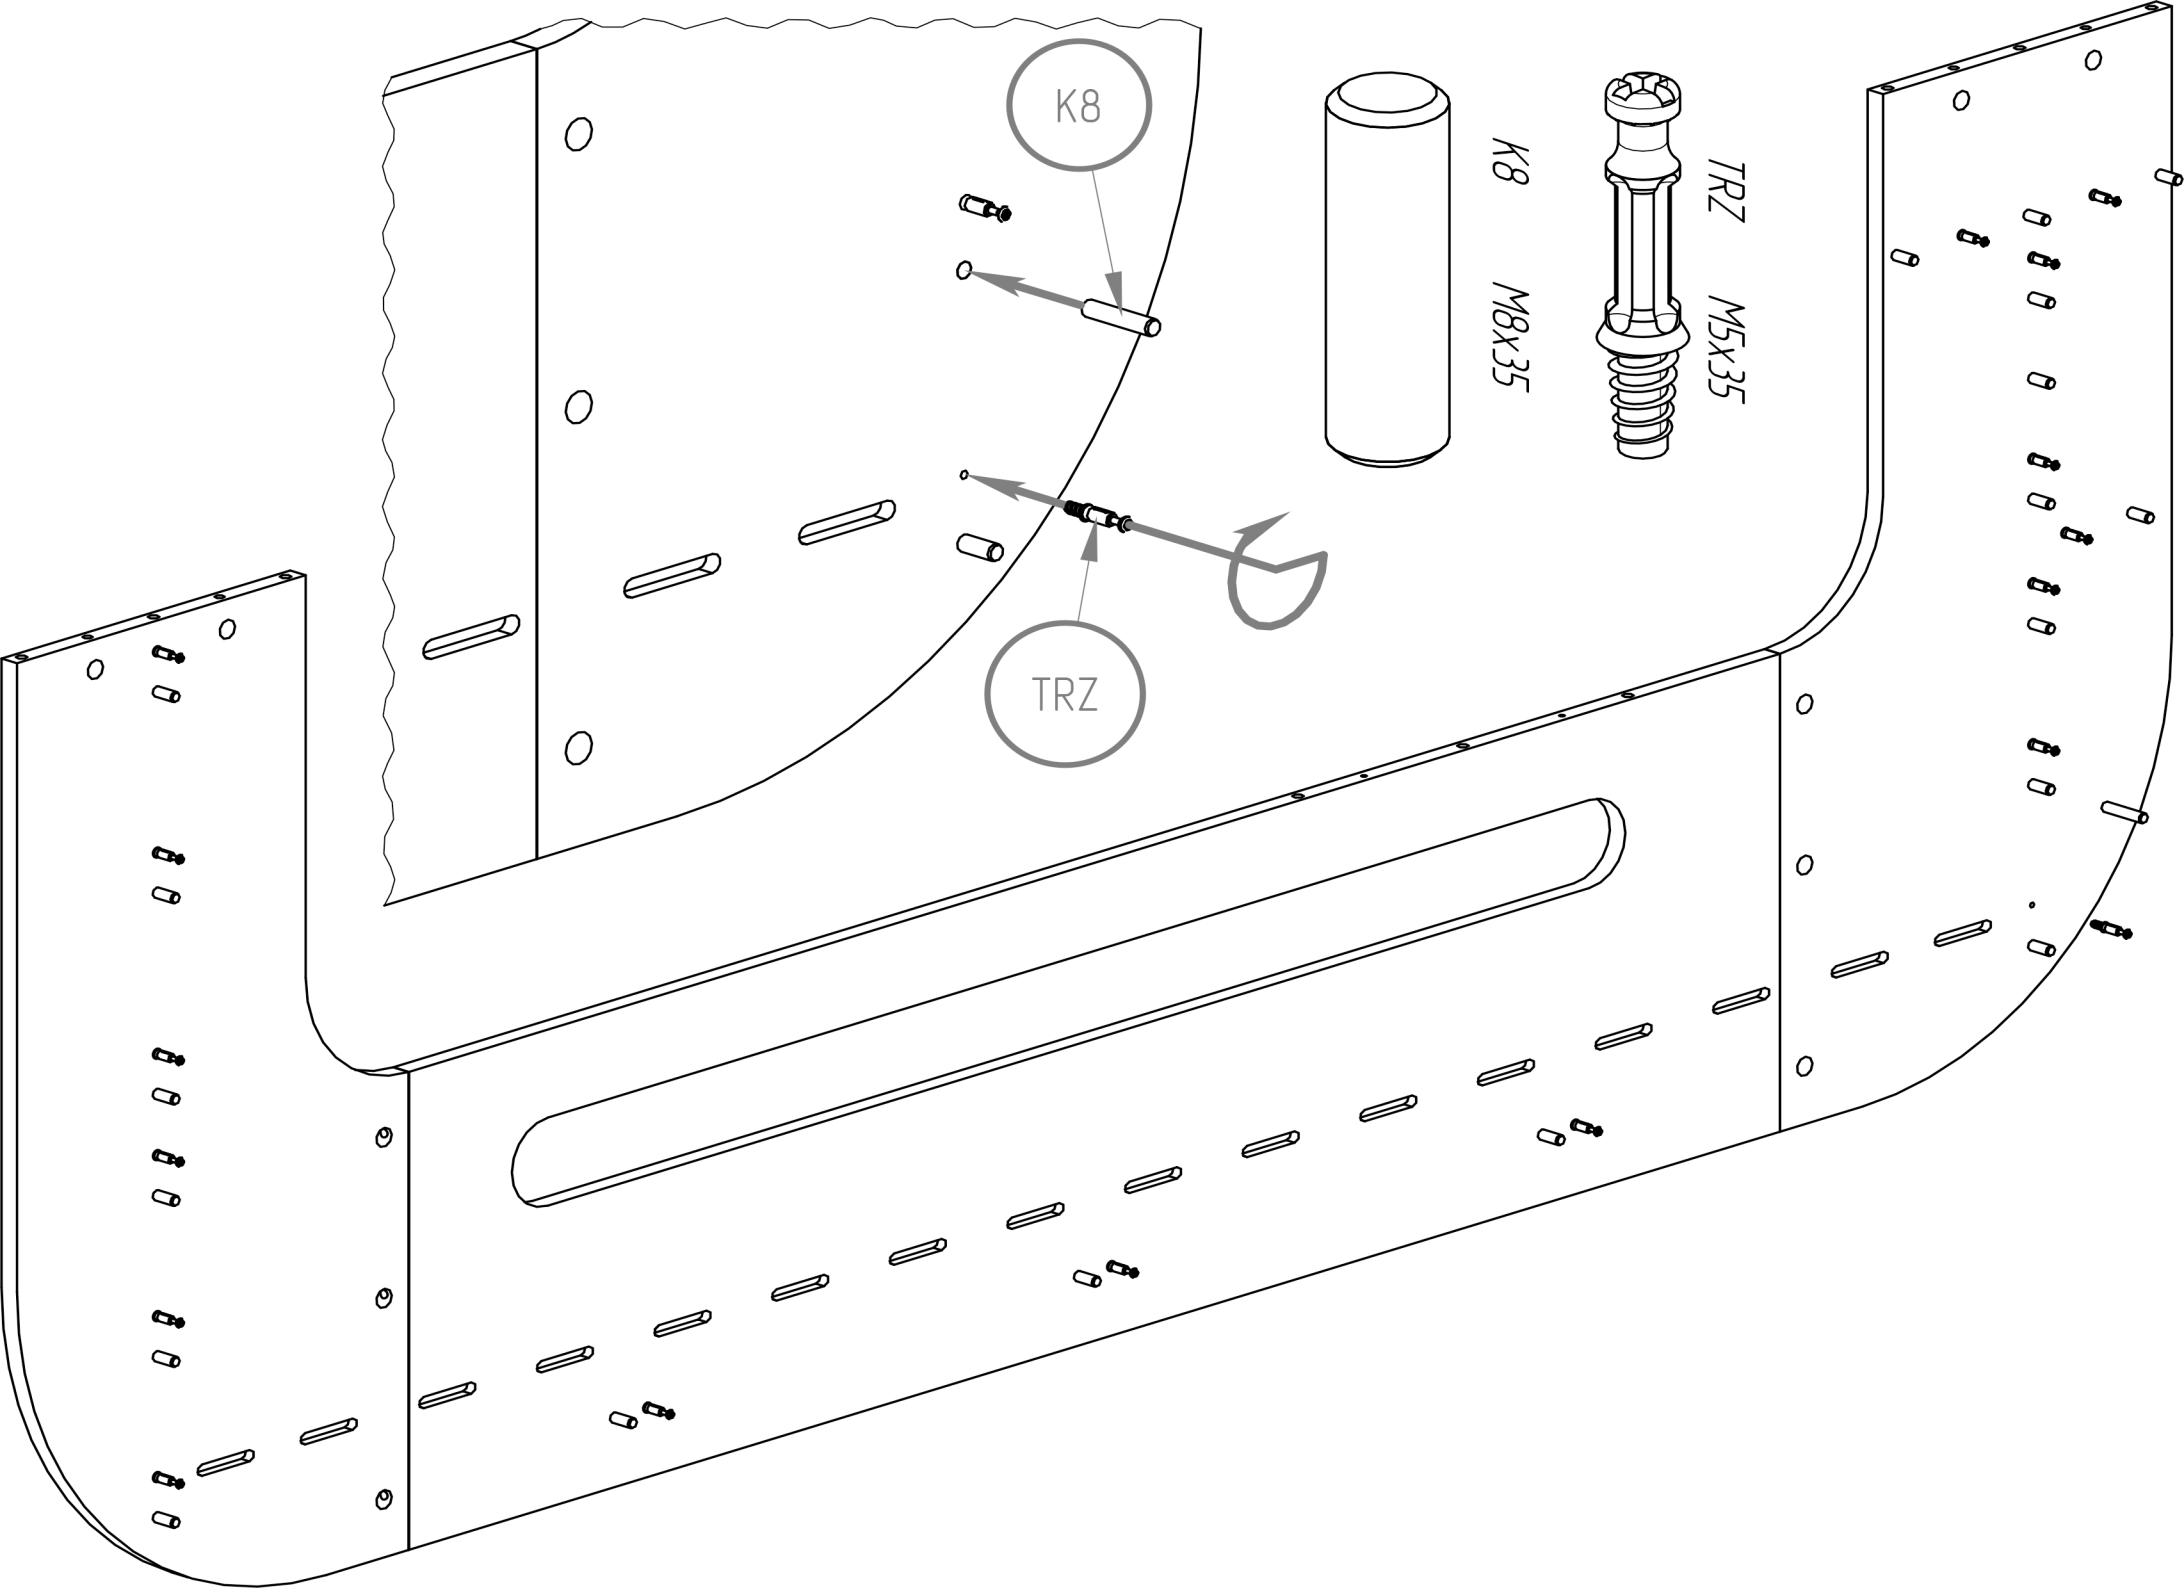


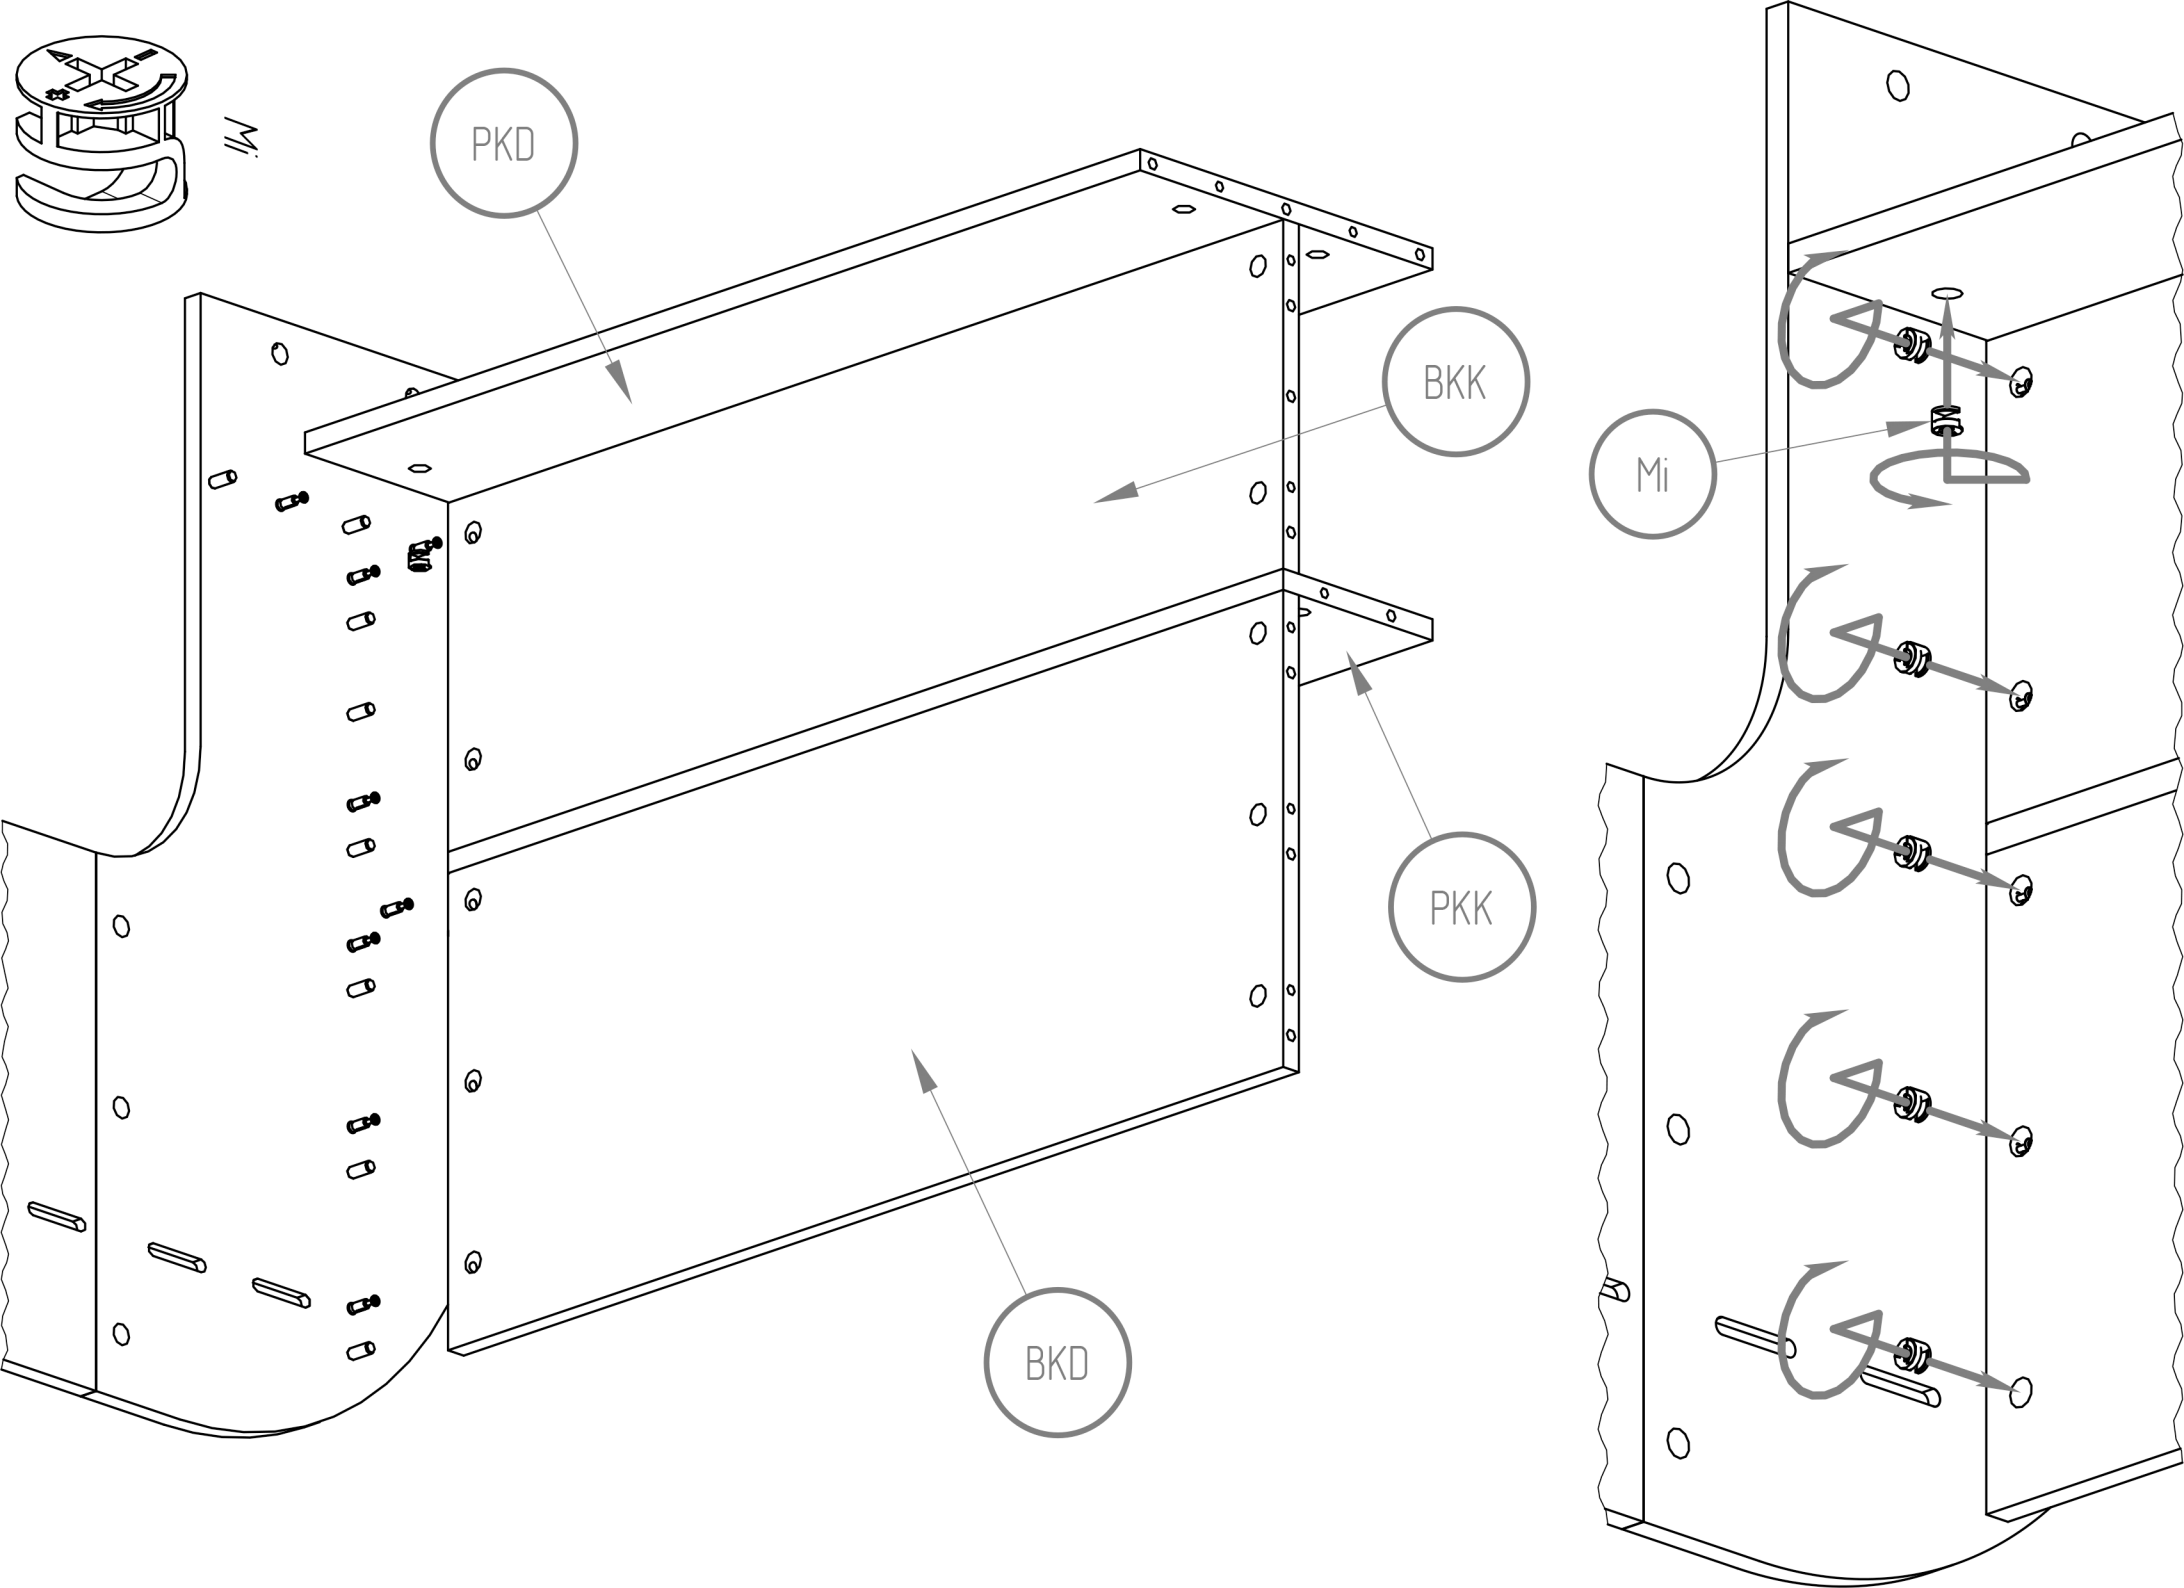




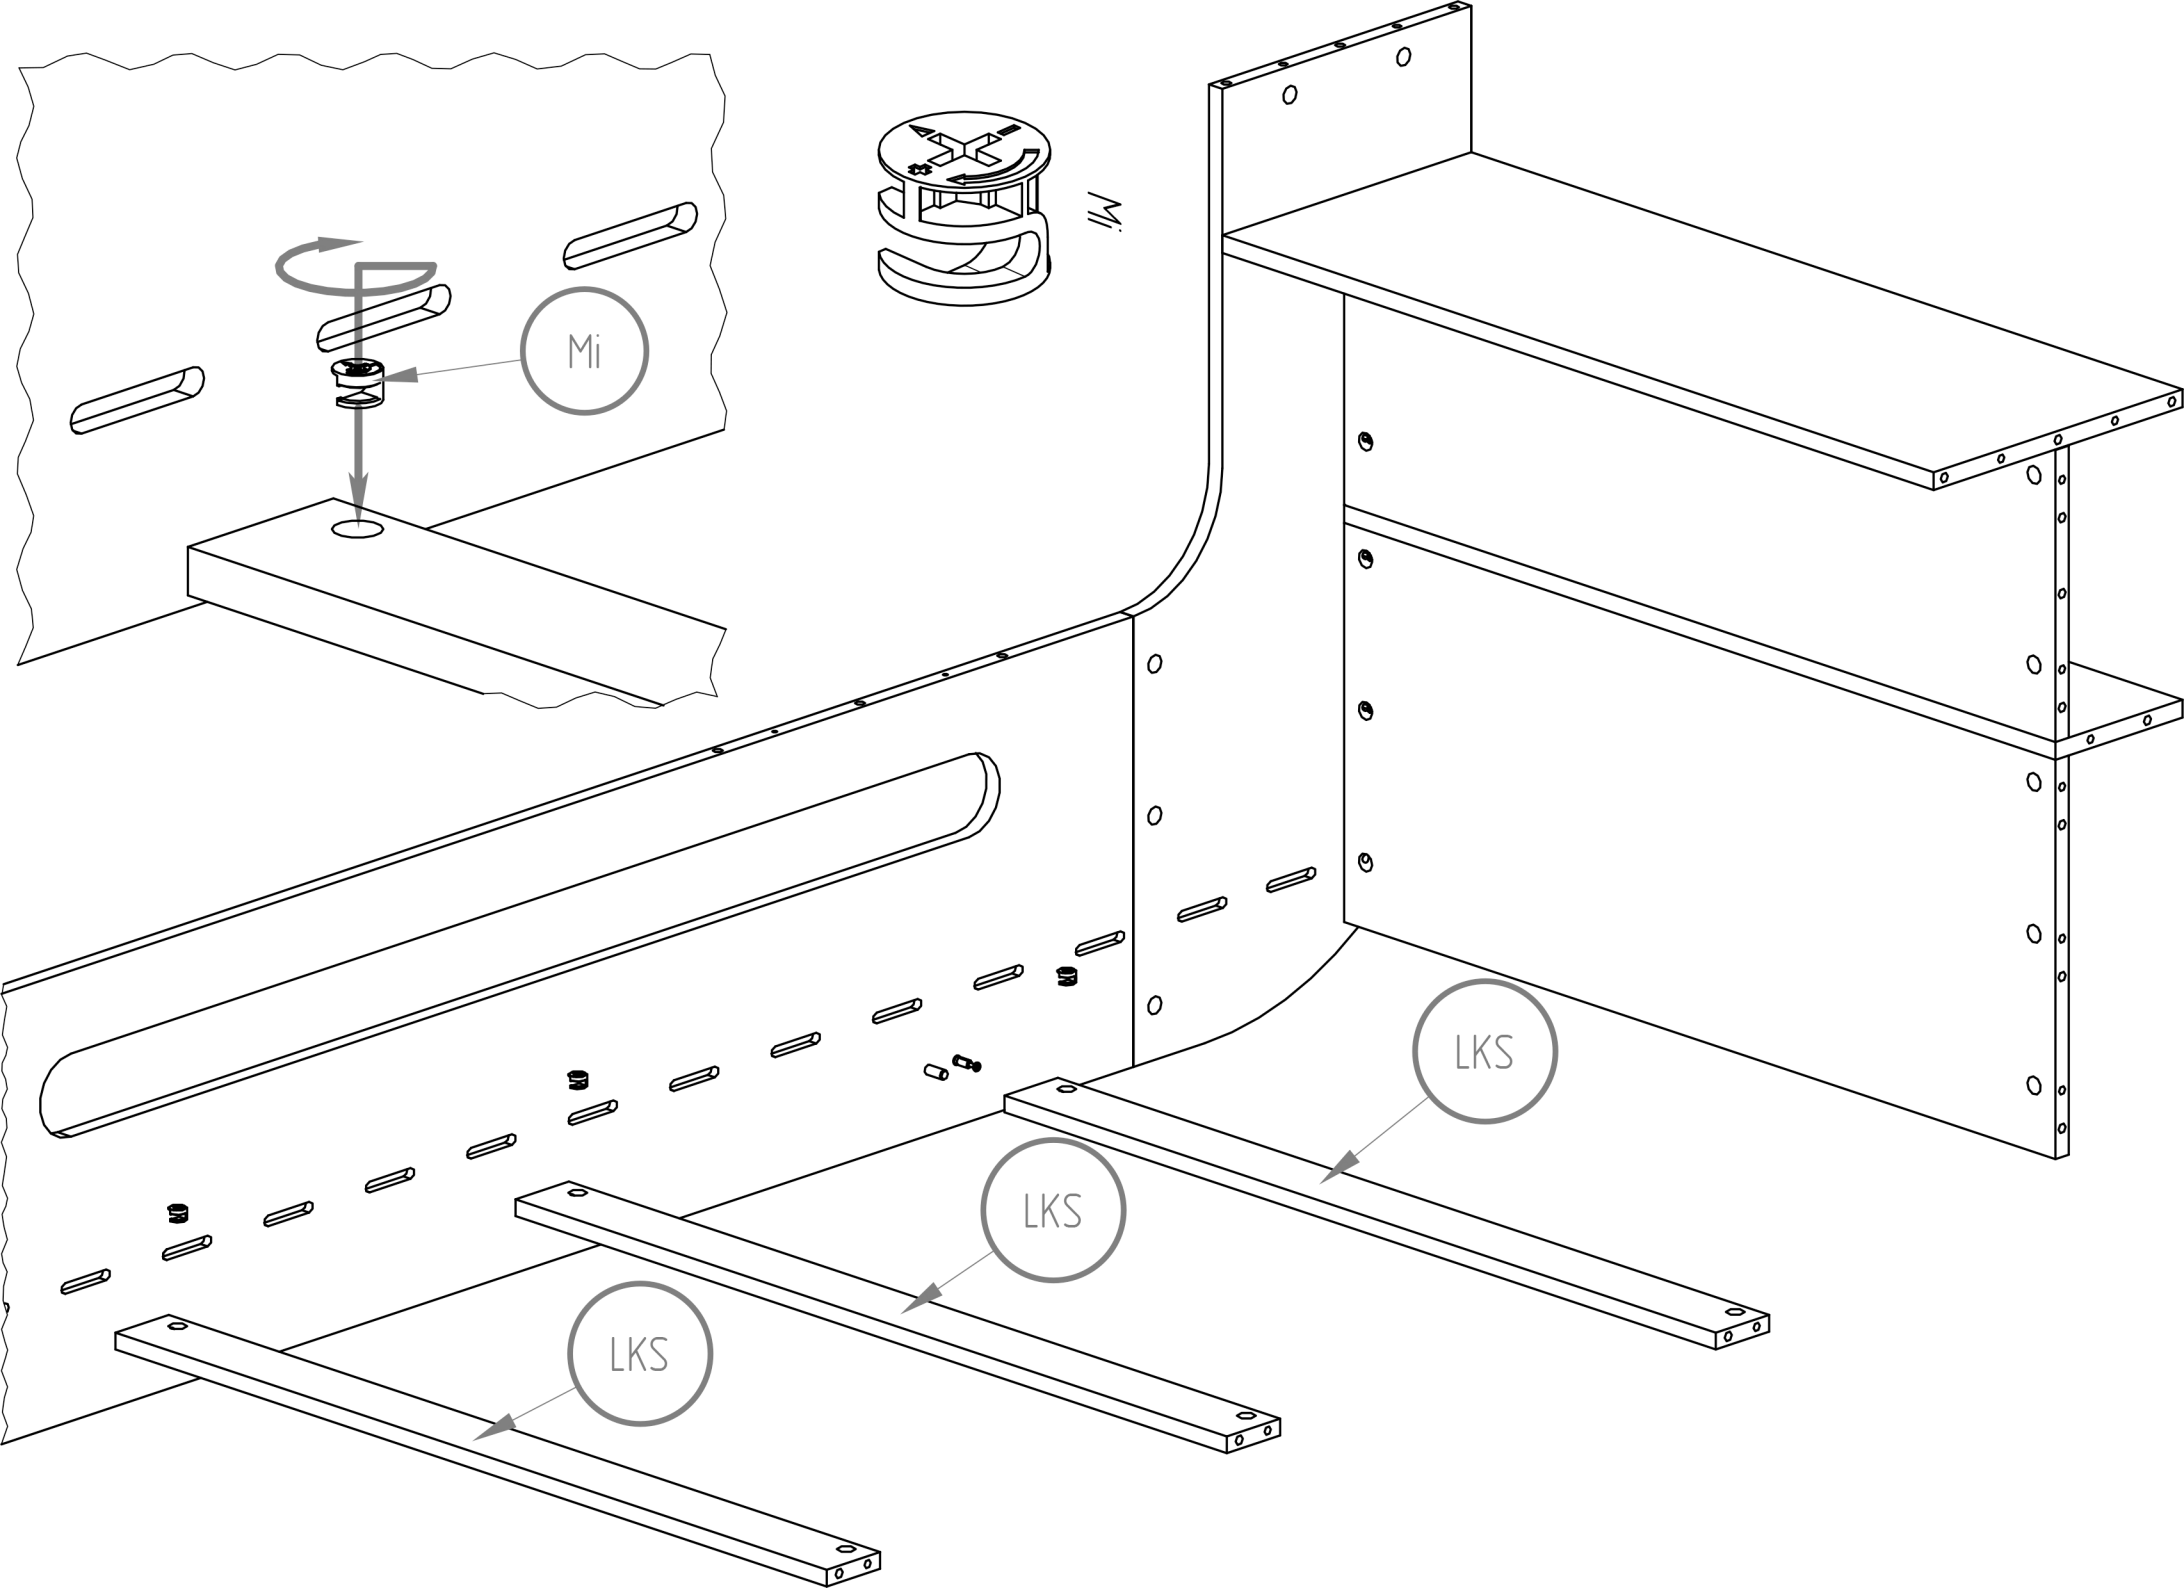

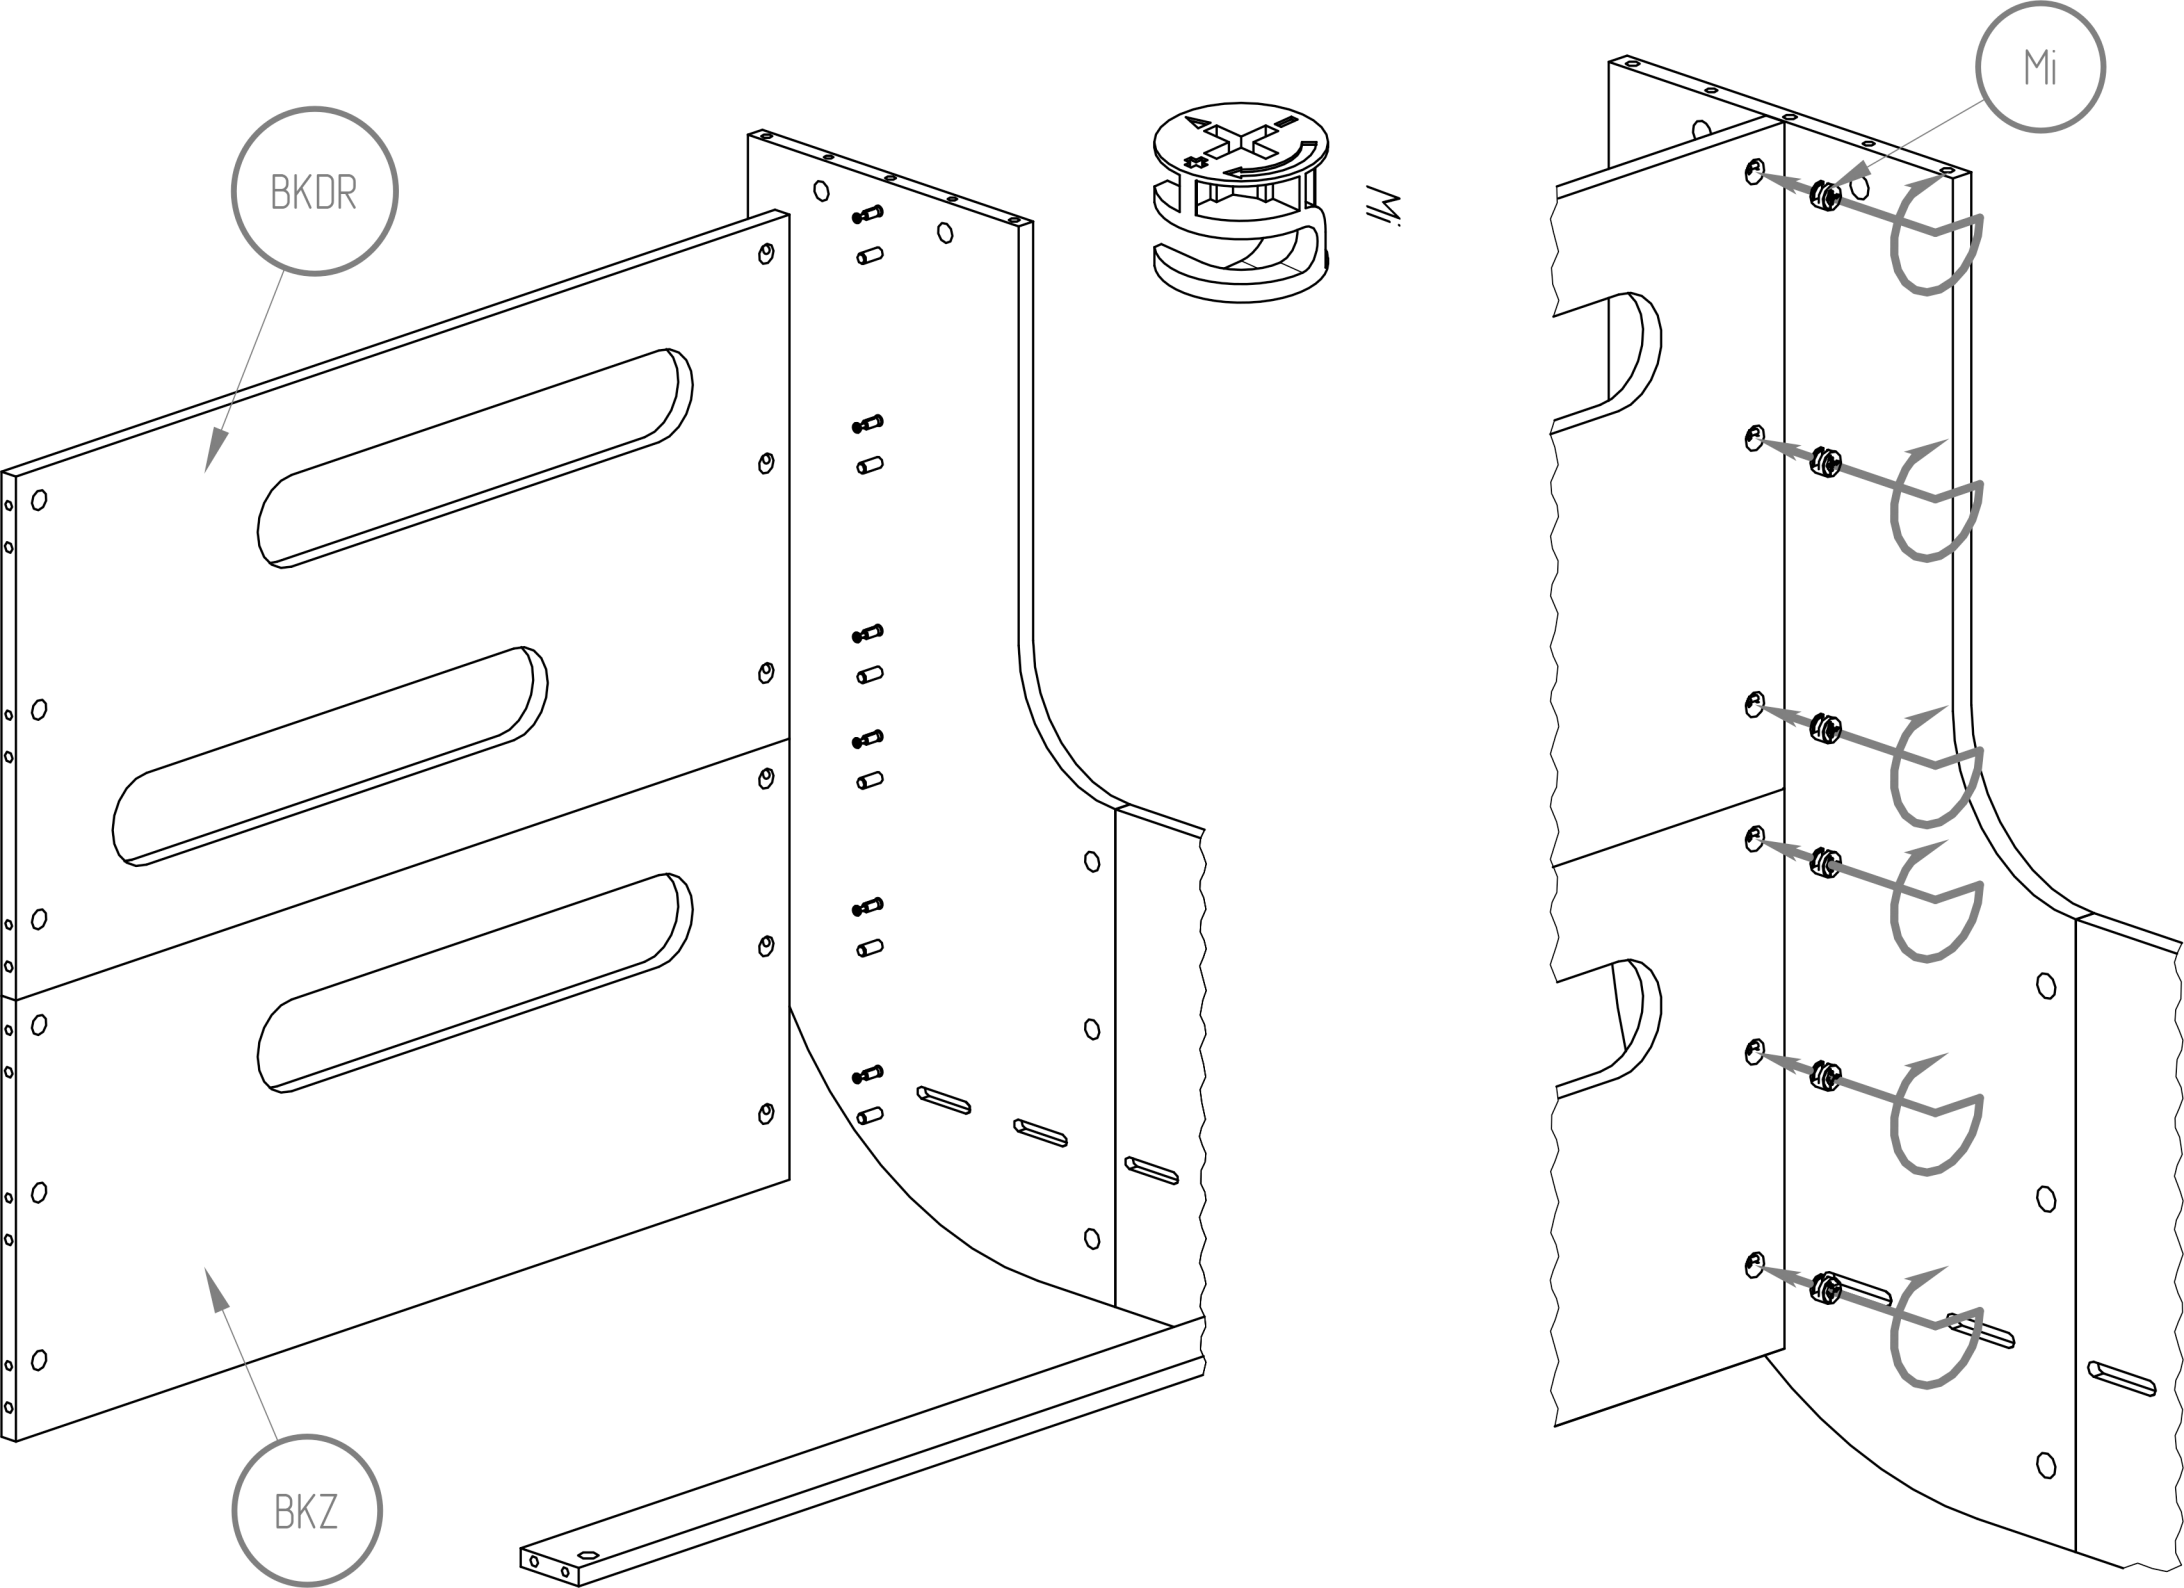


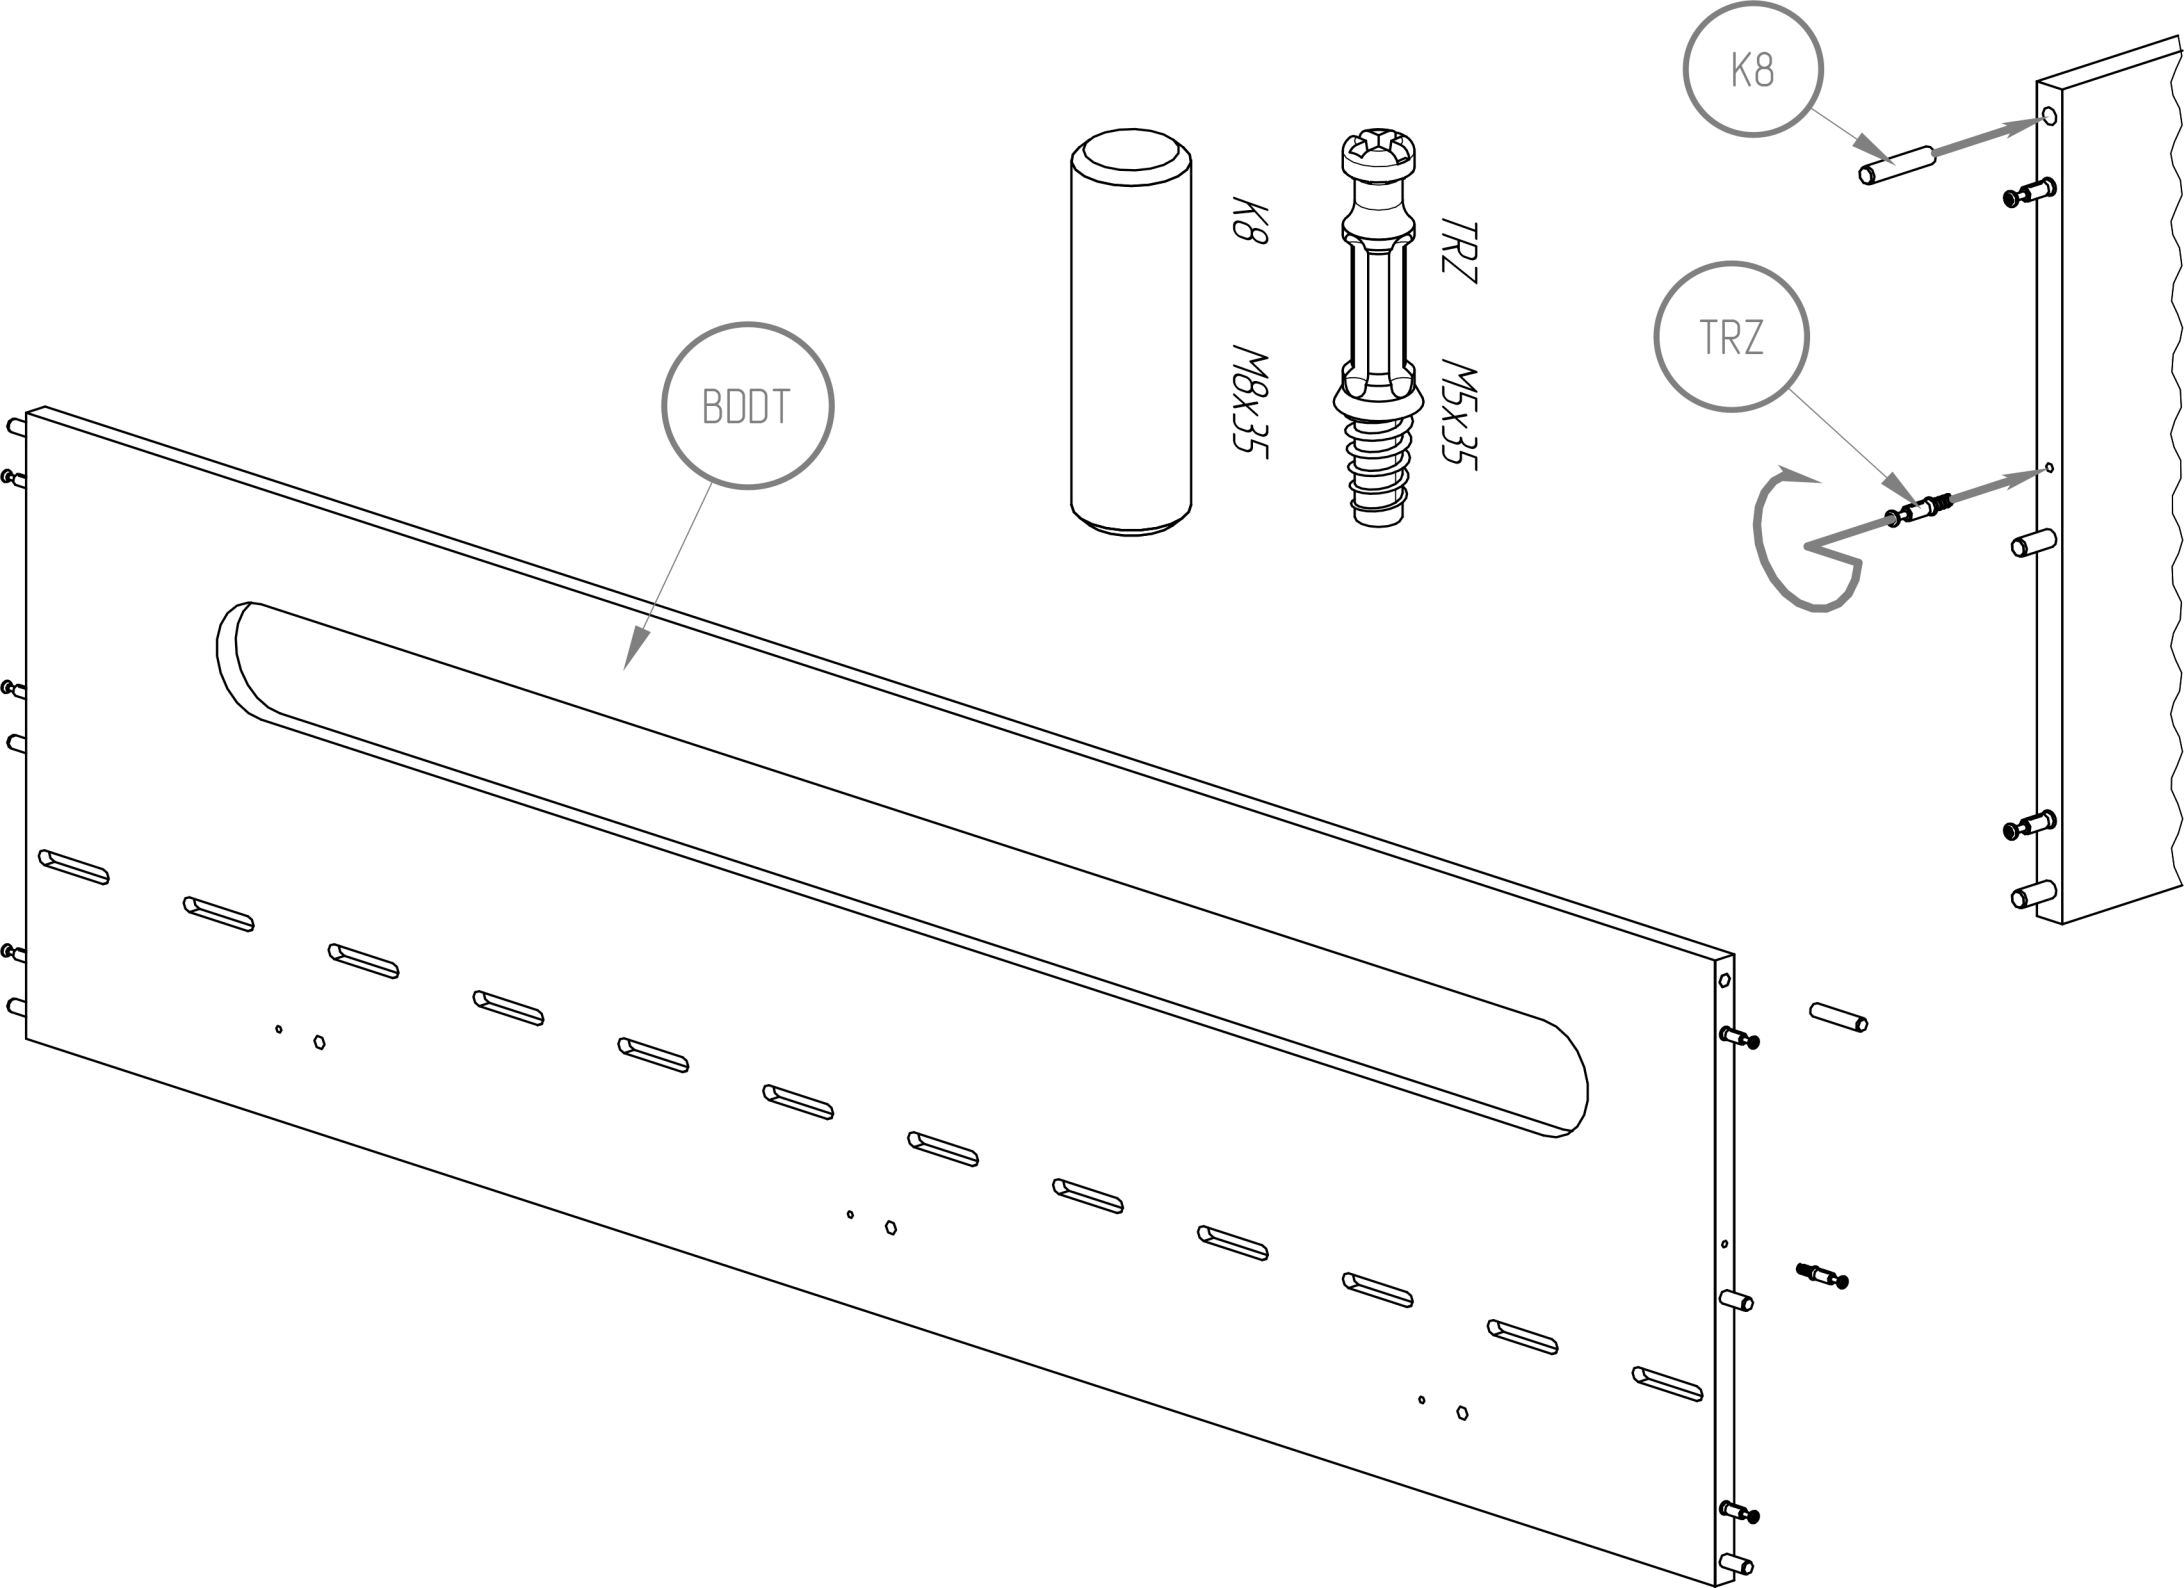

BDDT

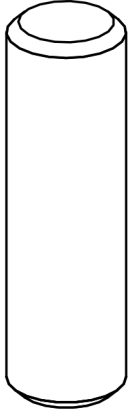


K8  
M8x35




TRZ  
M5x35

TRZ

K8


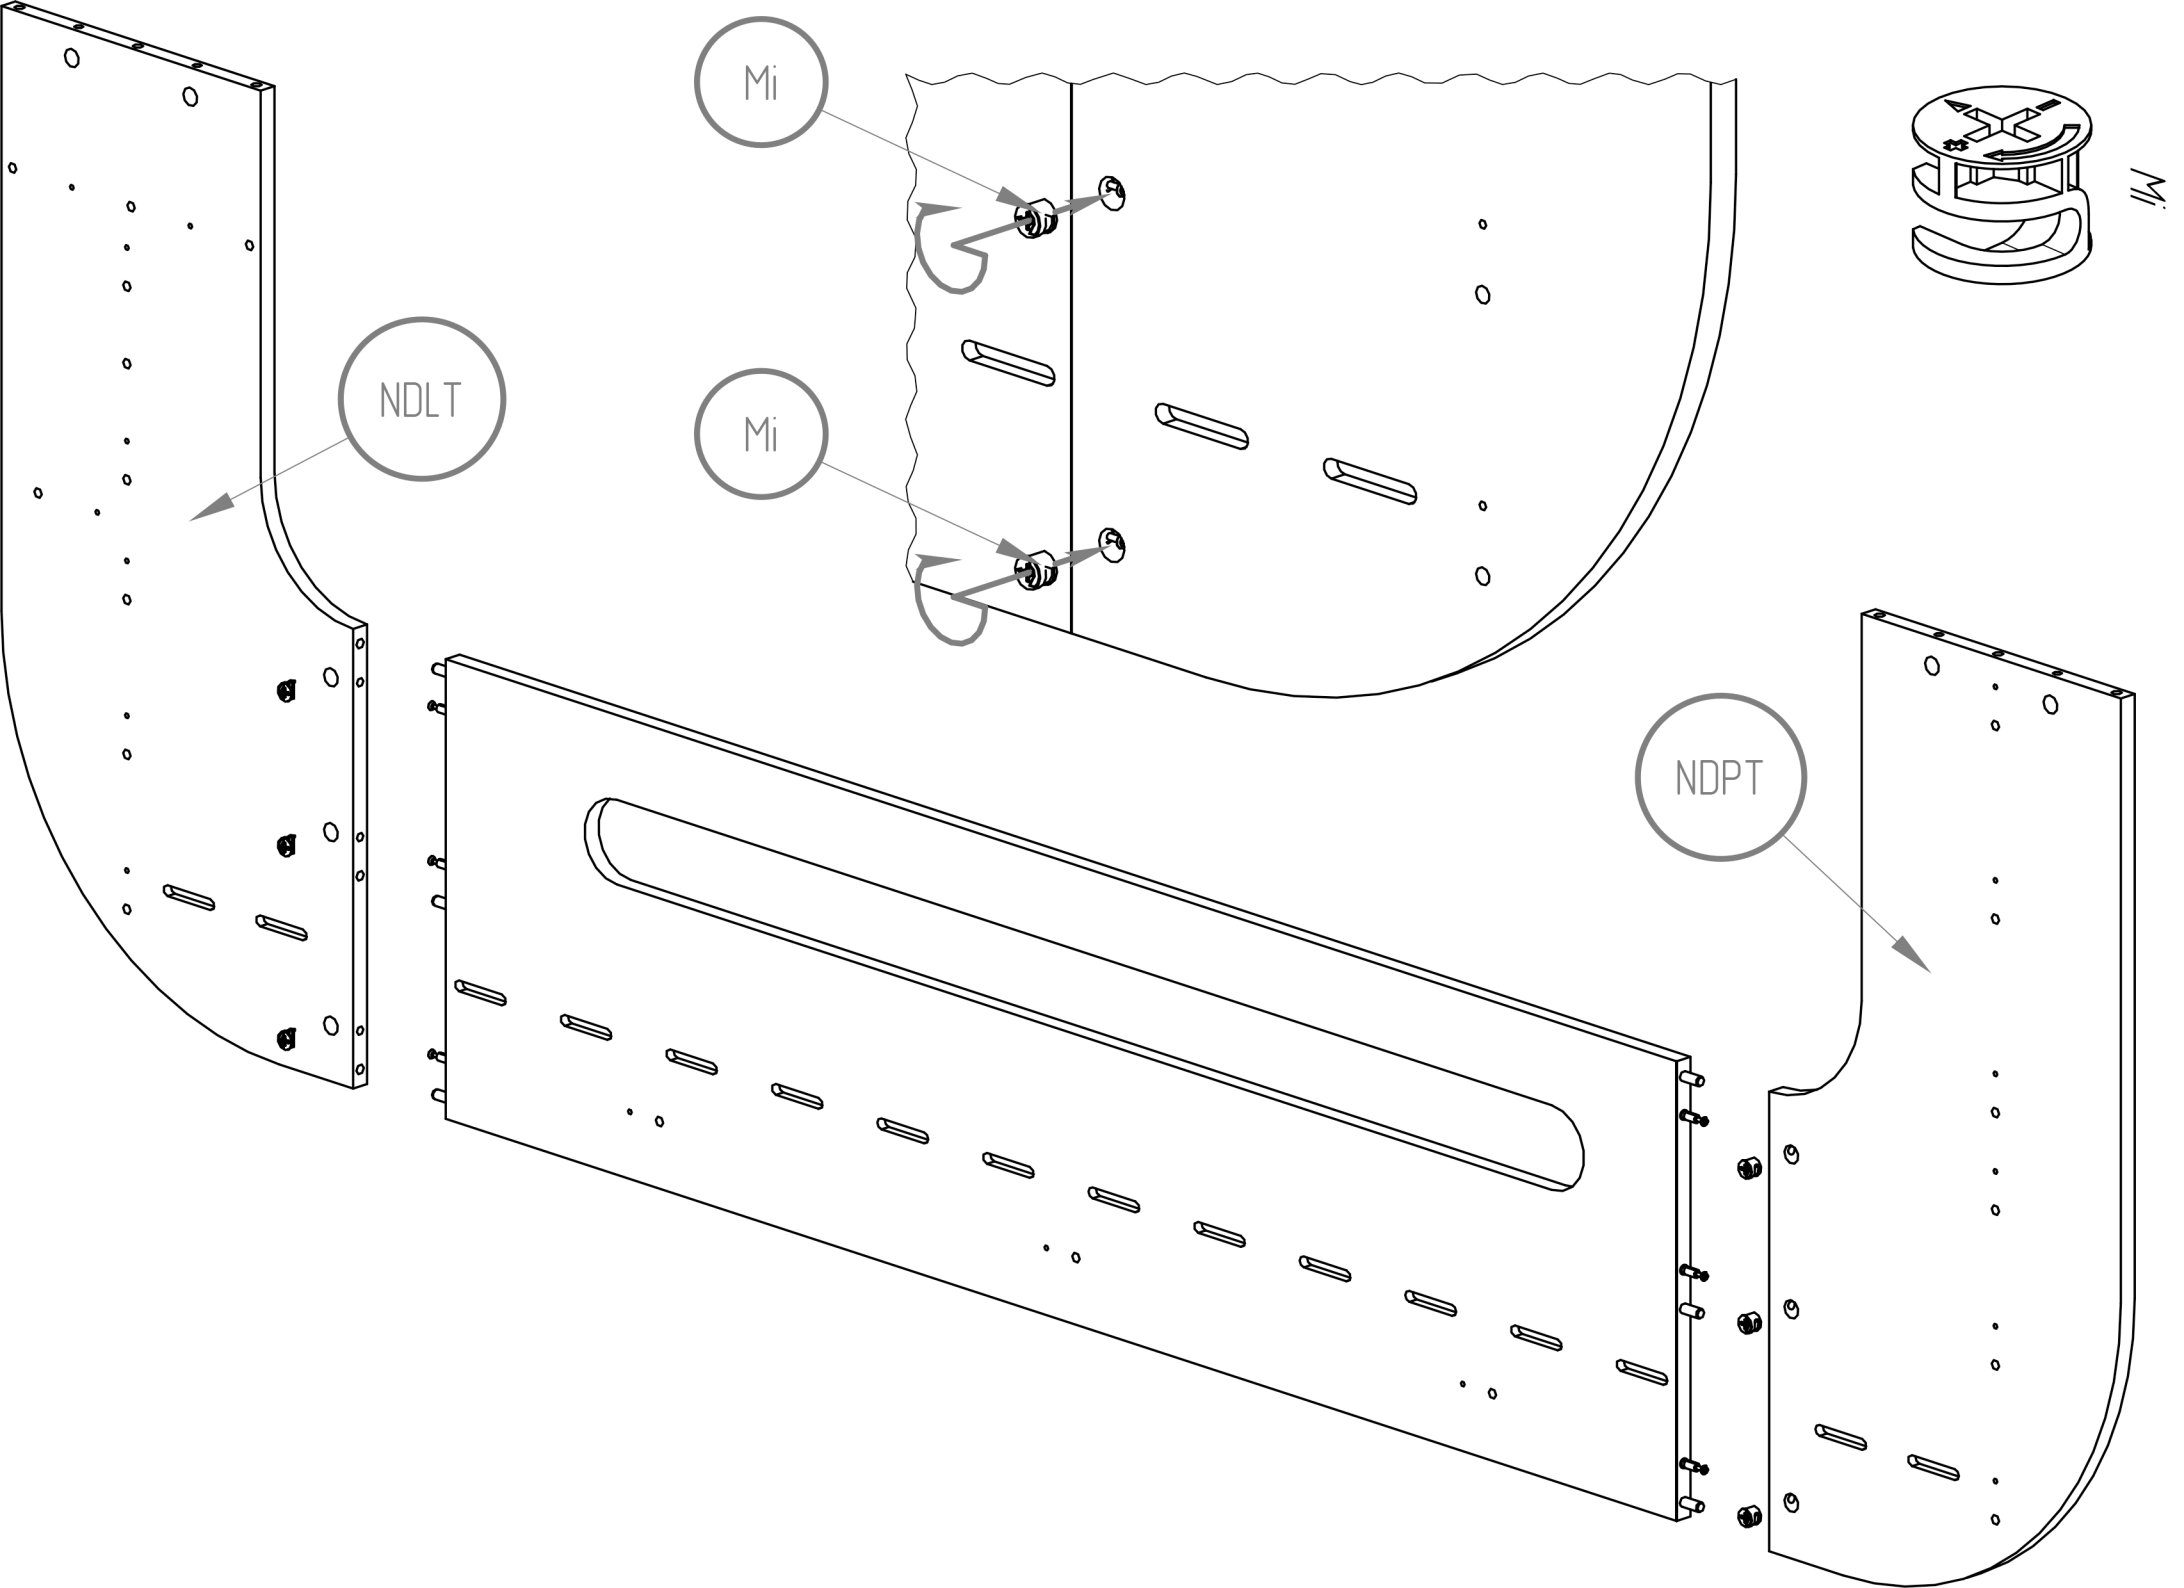


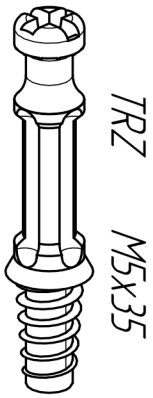



TRZ



M5x35

K8 M8x35

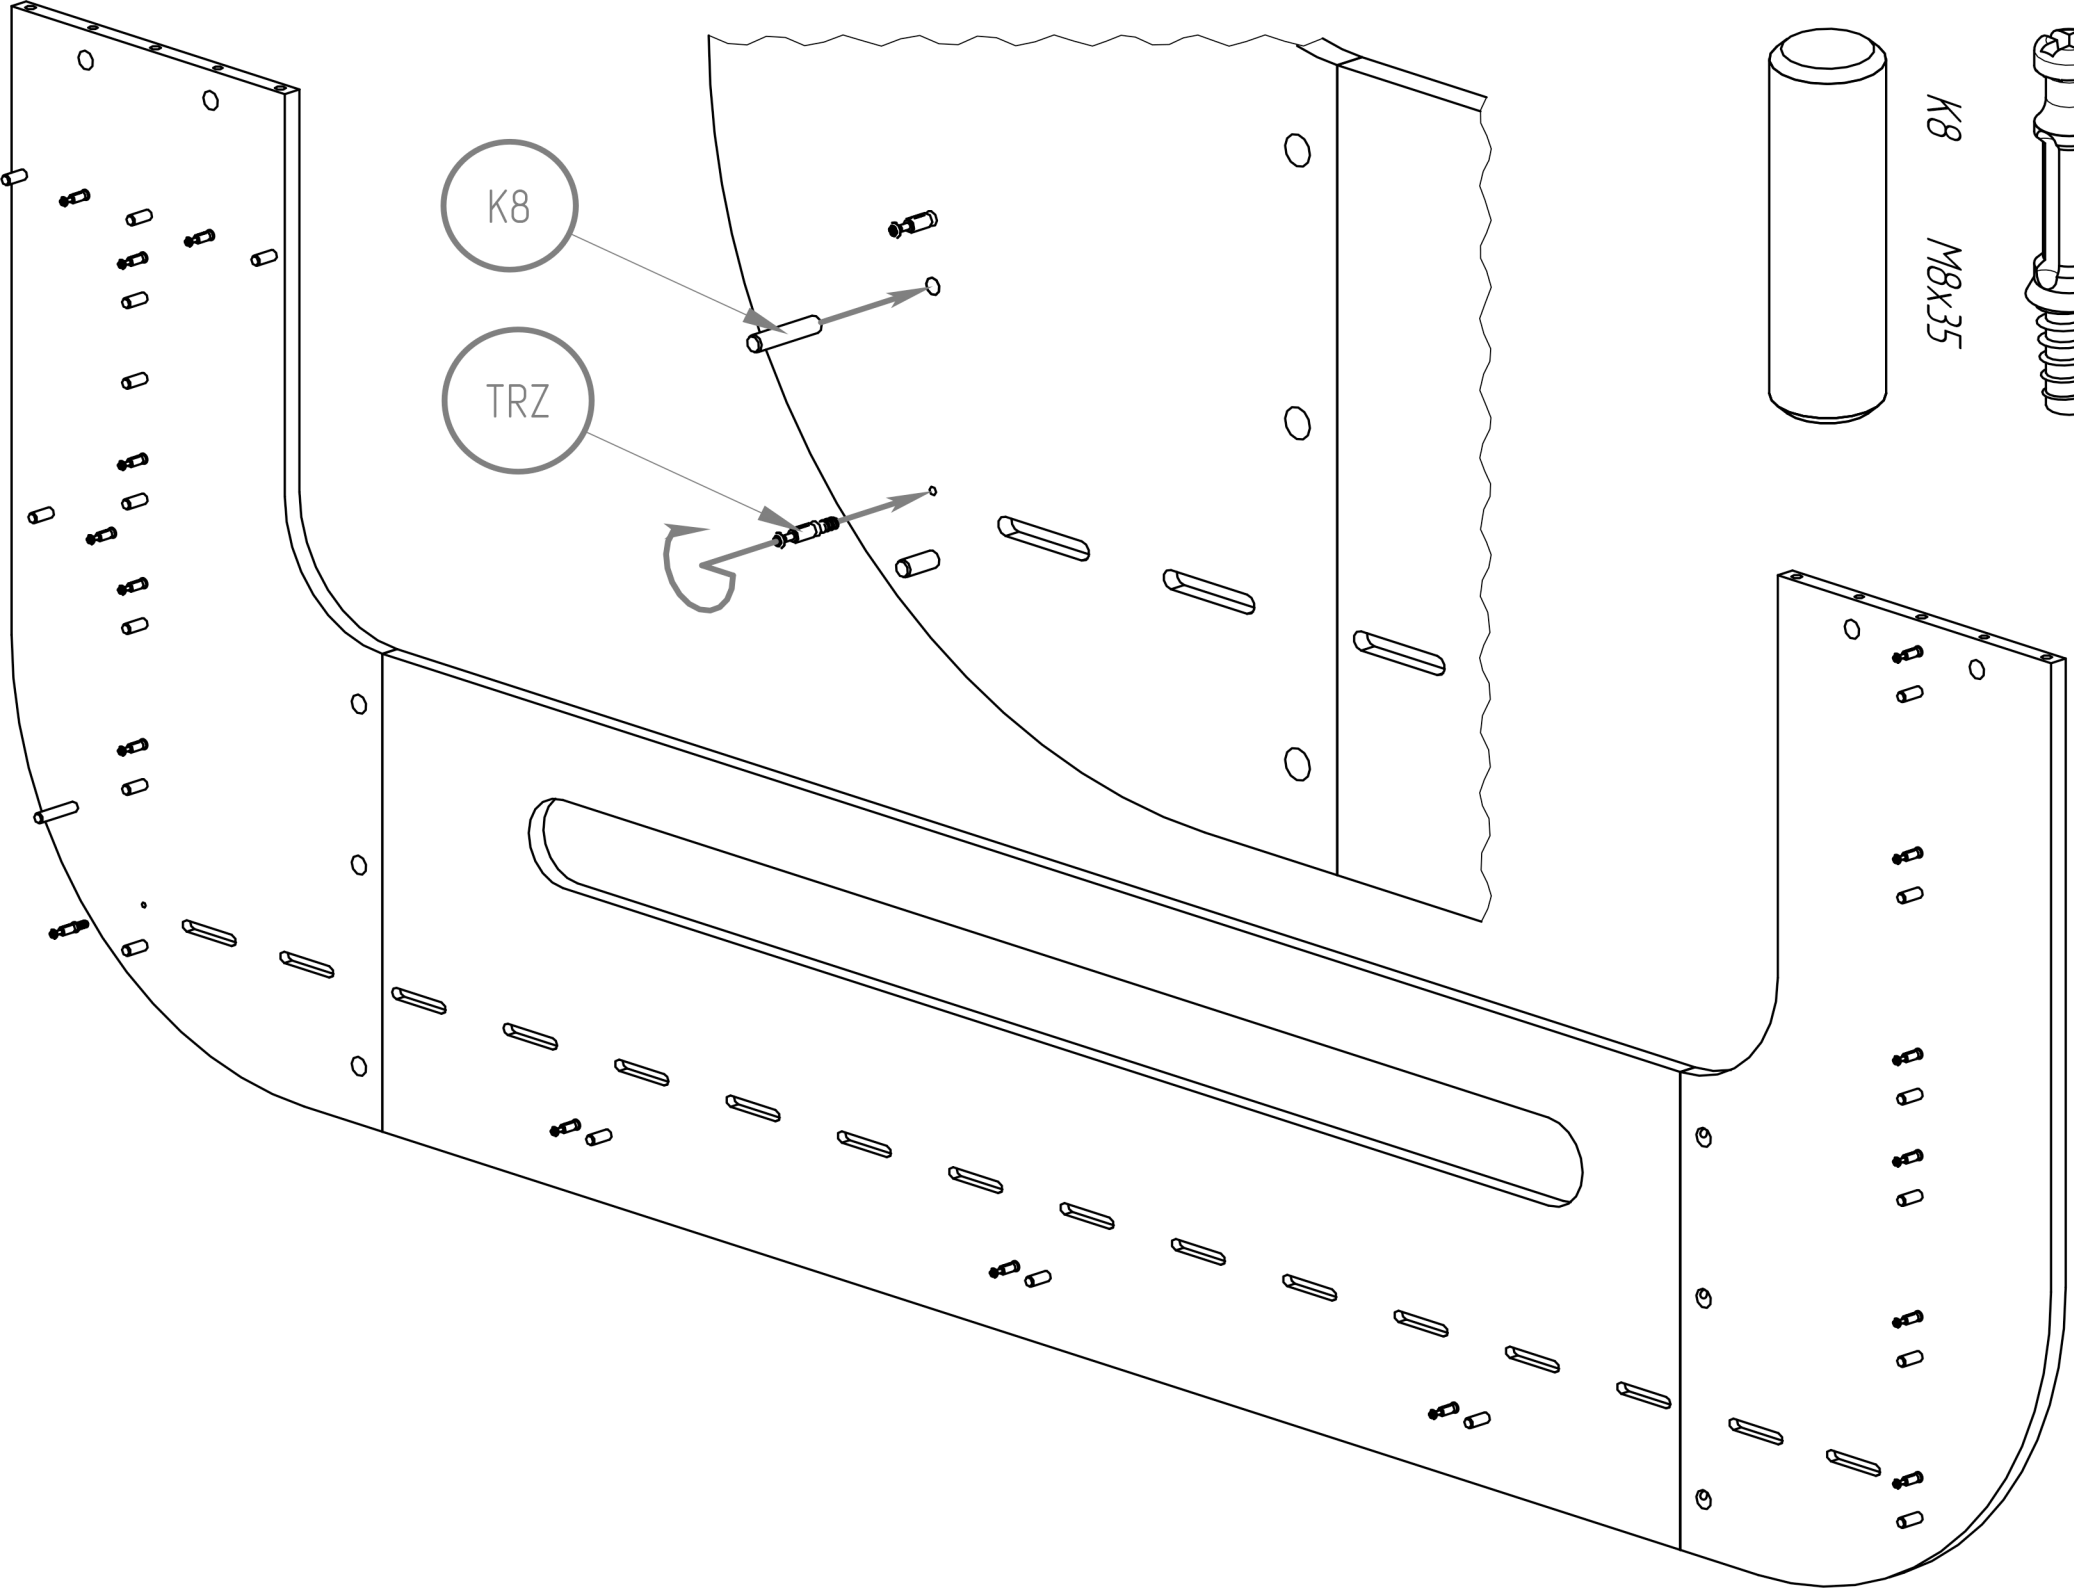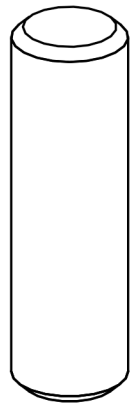

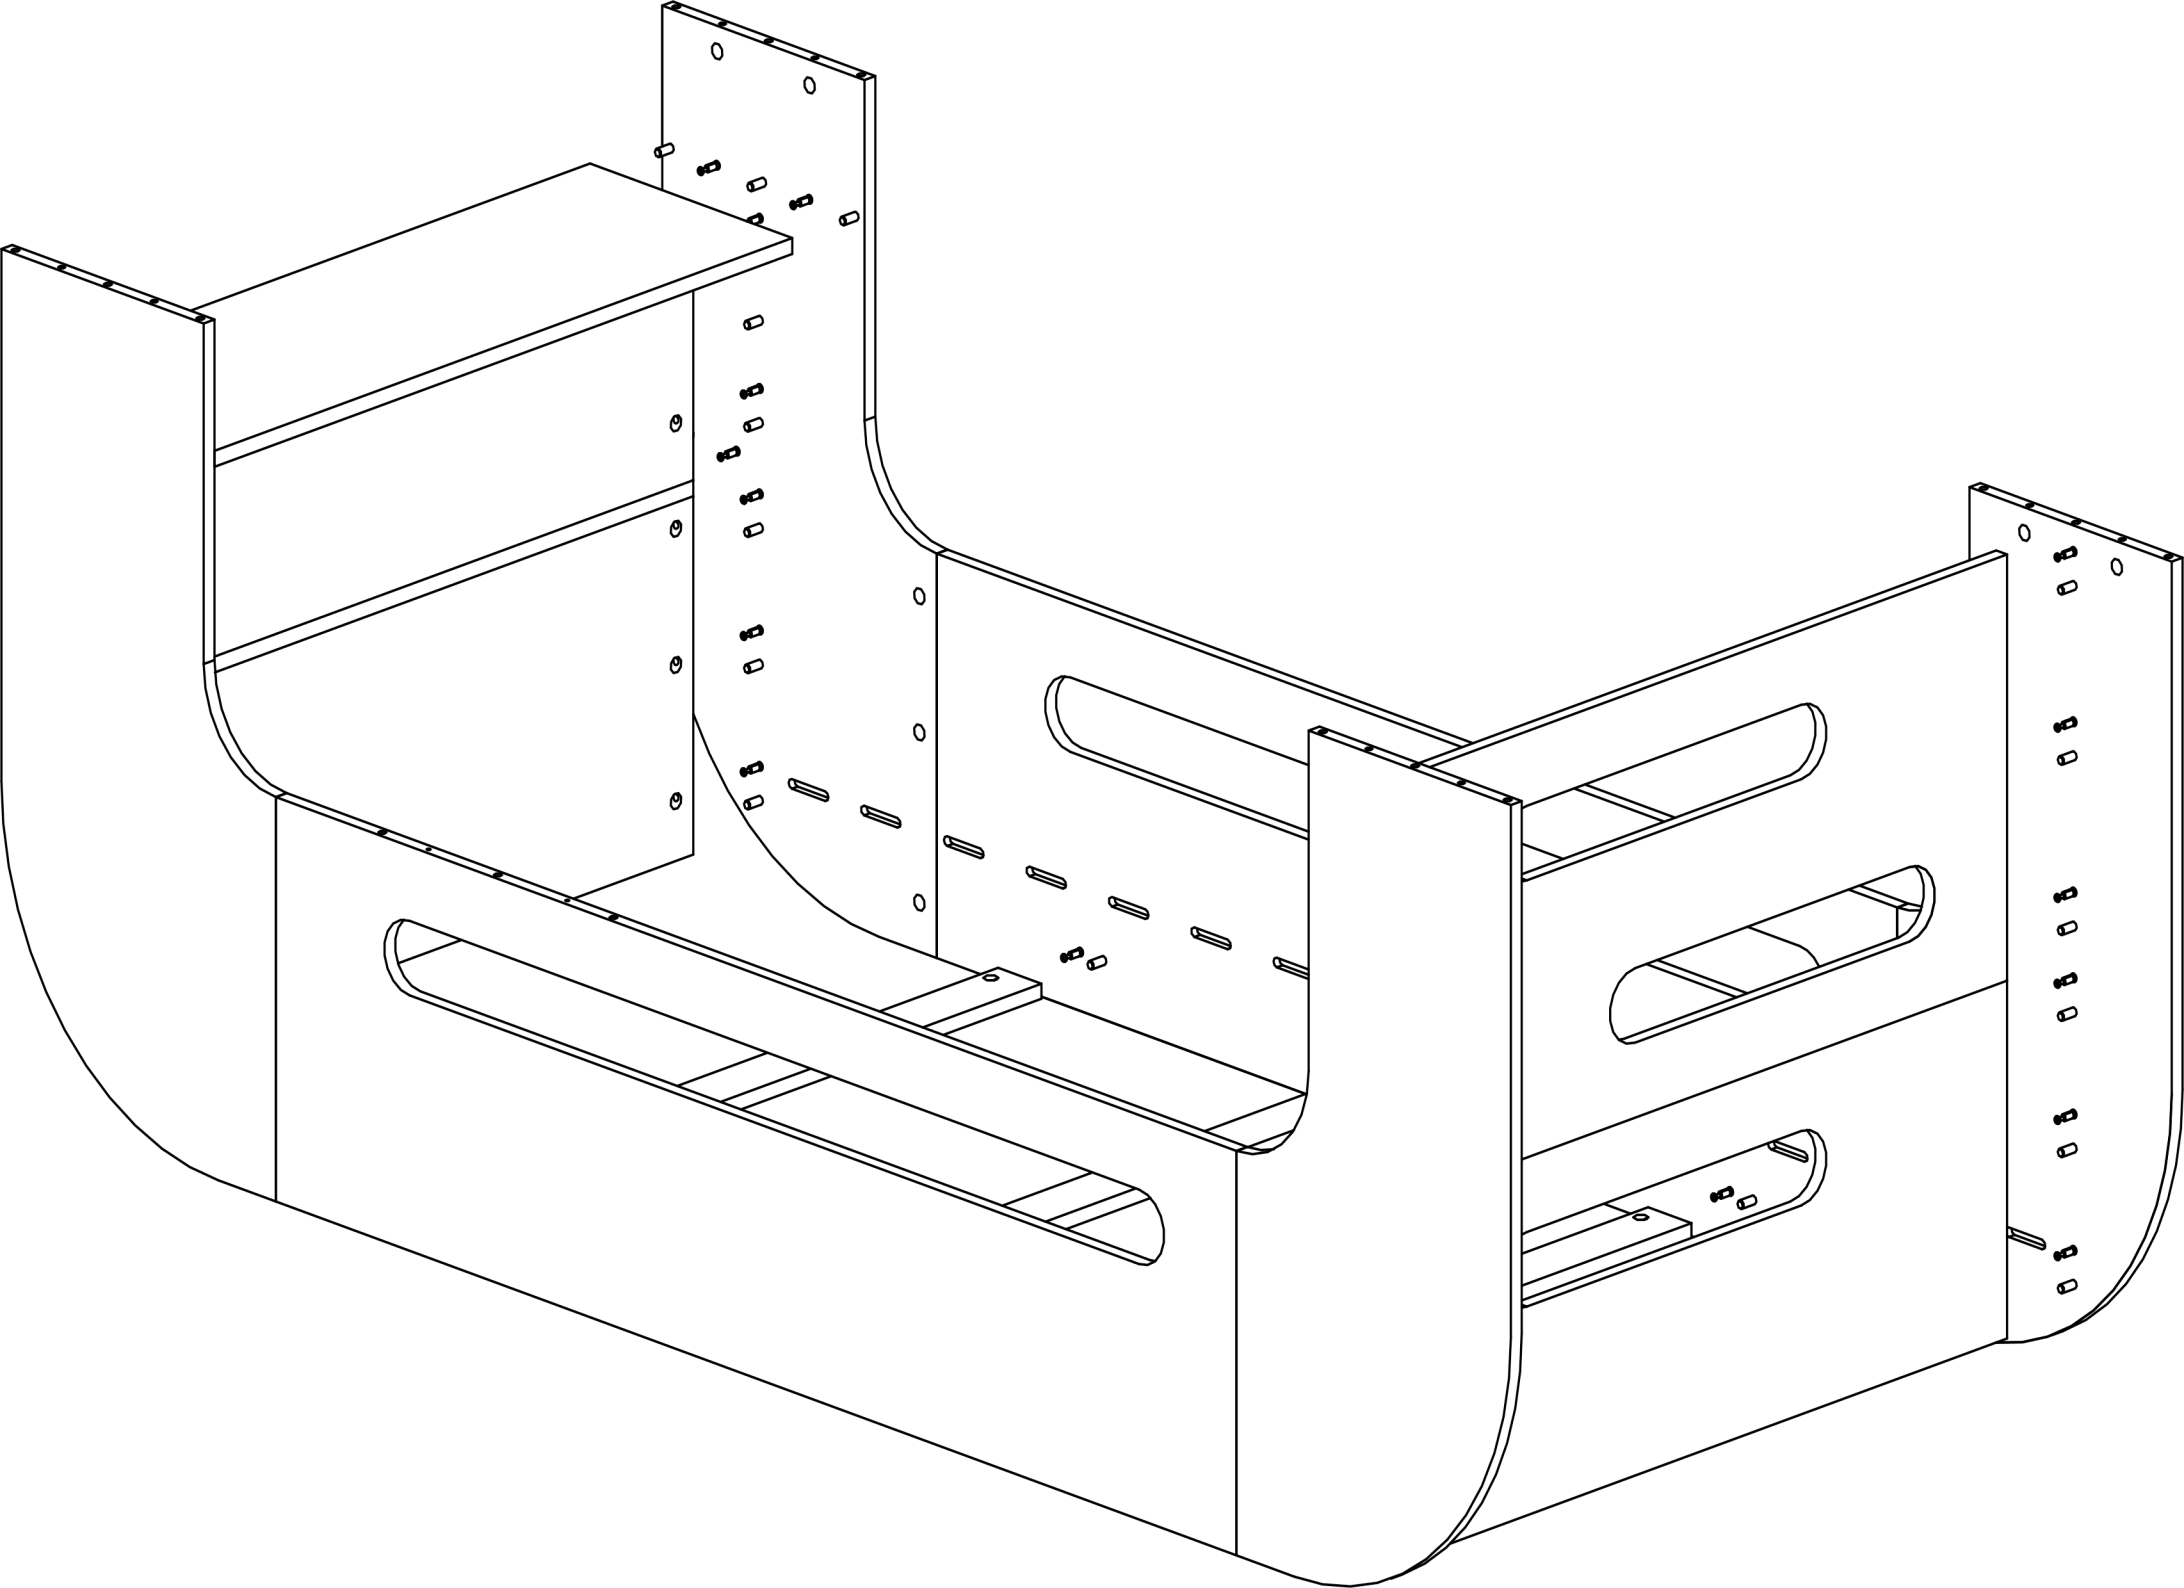

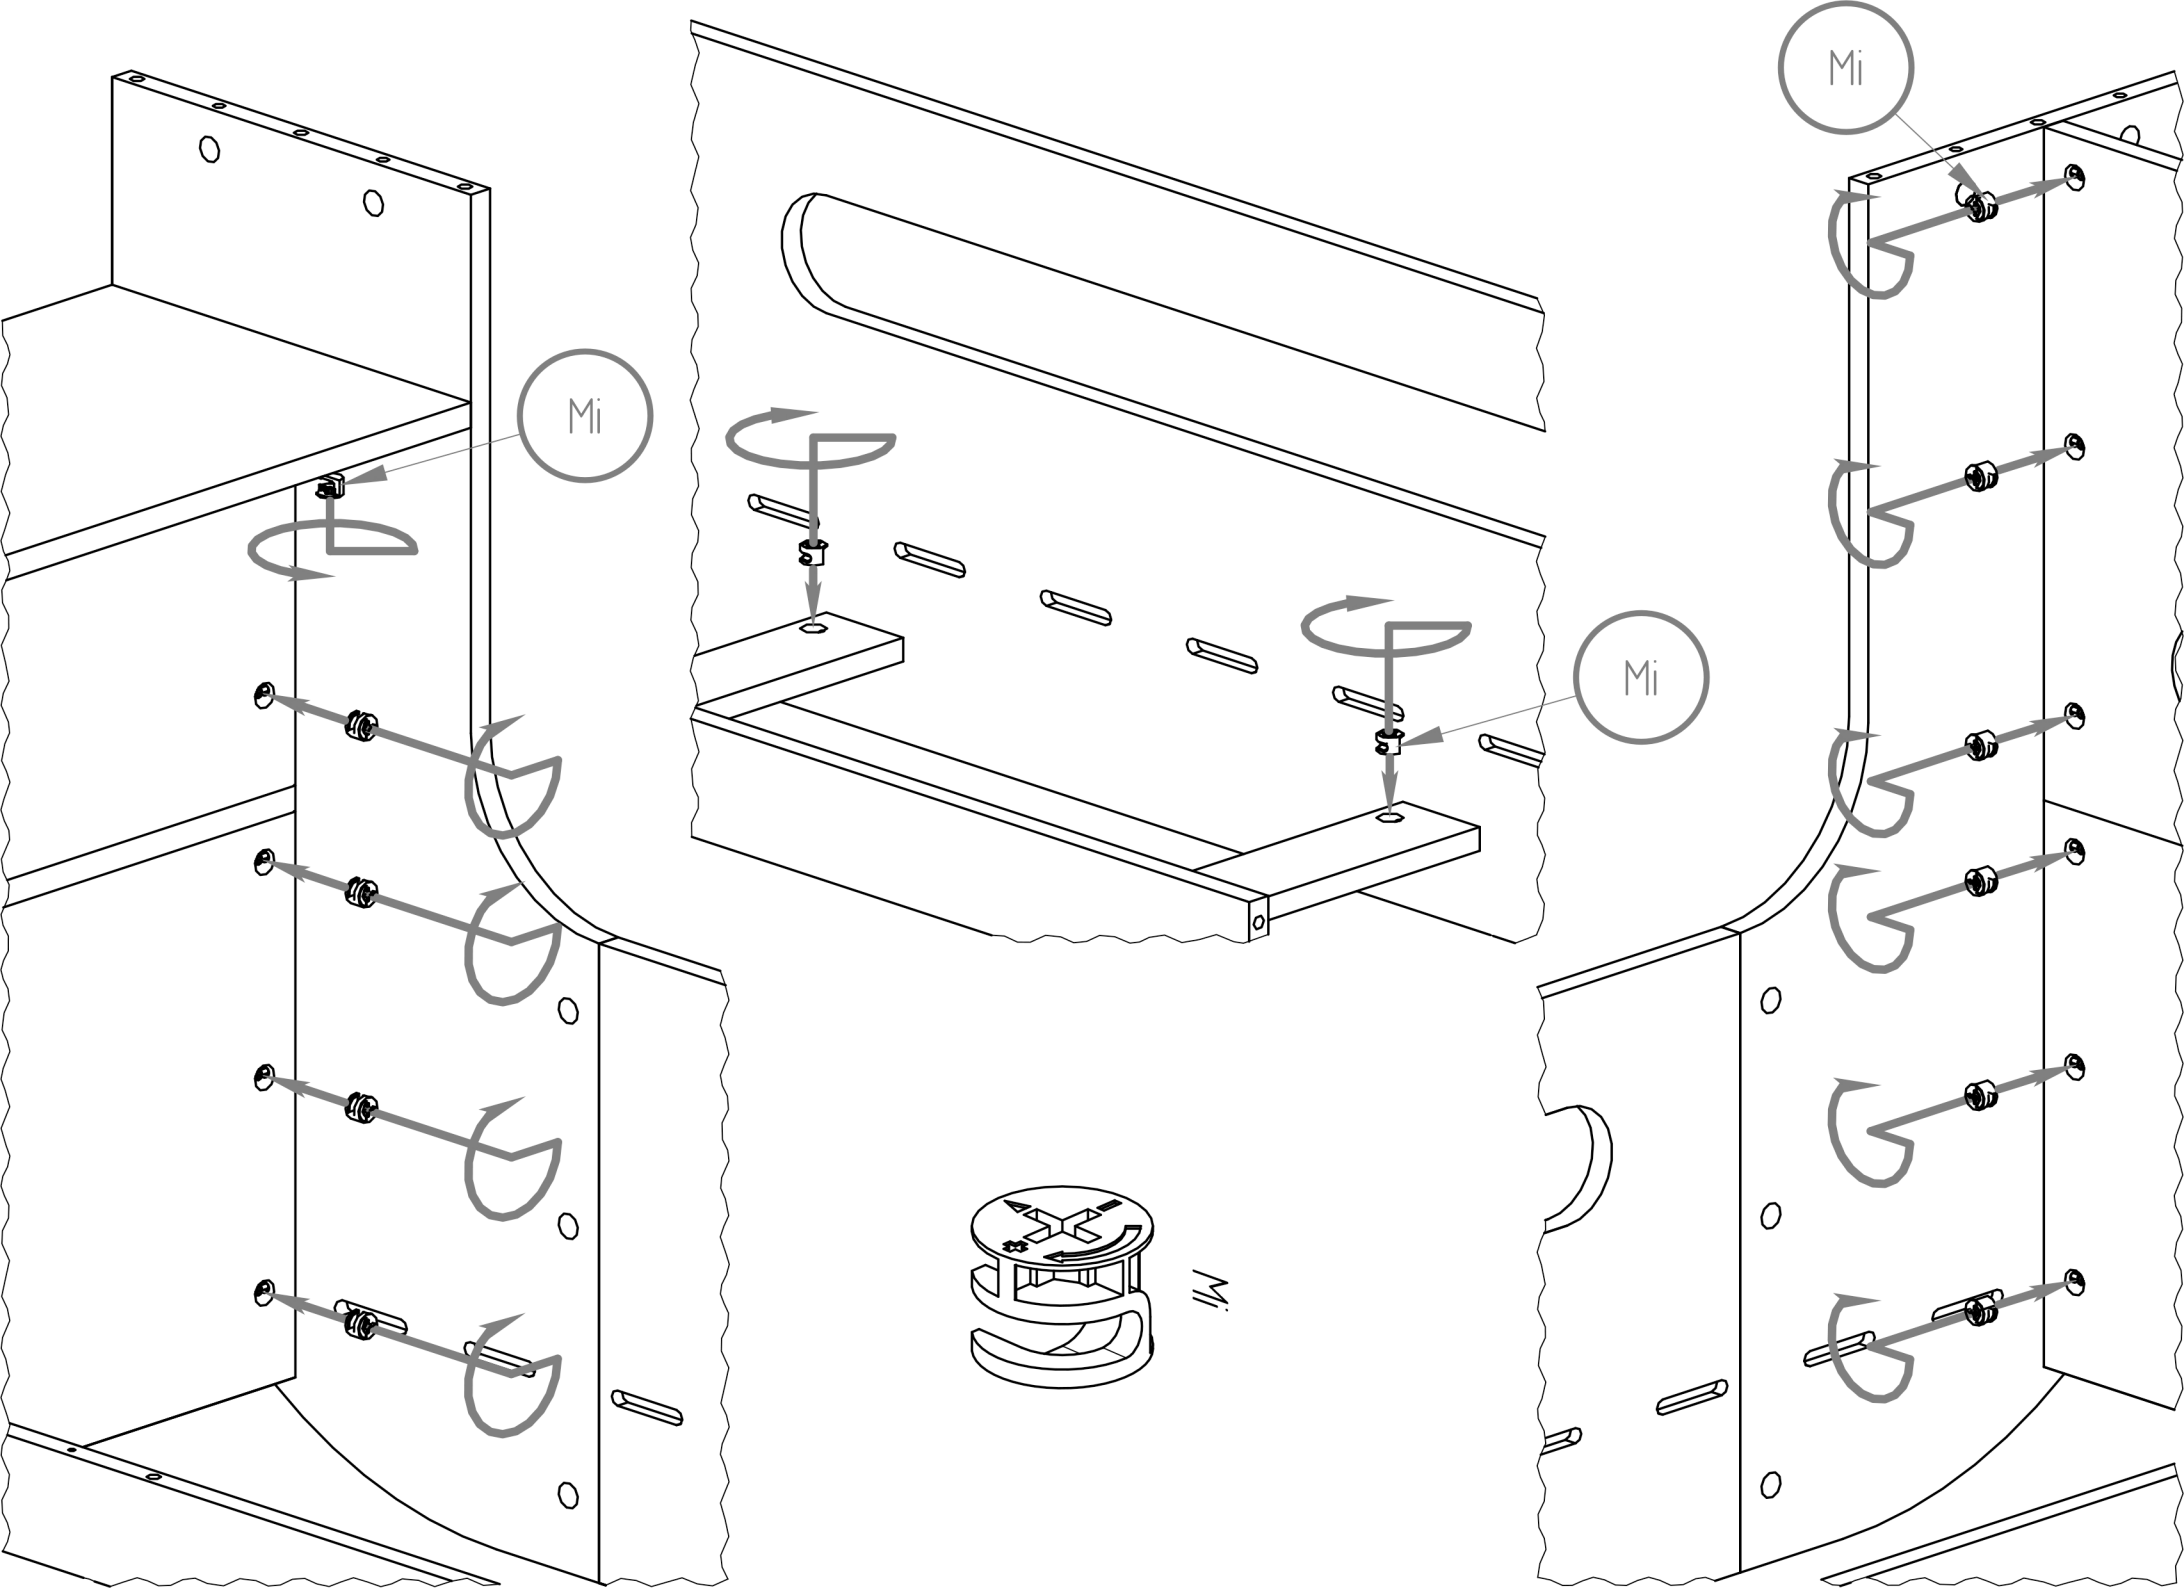

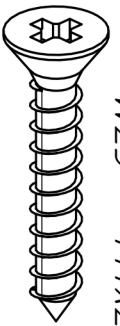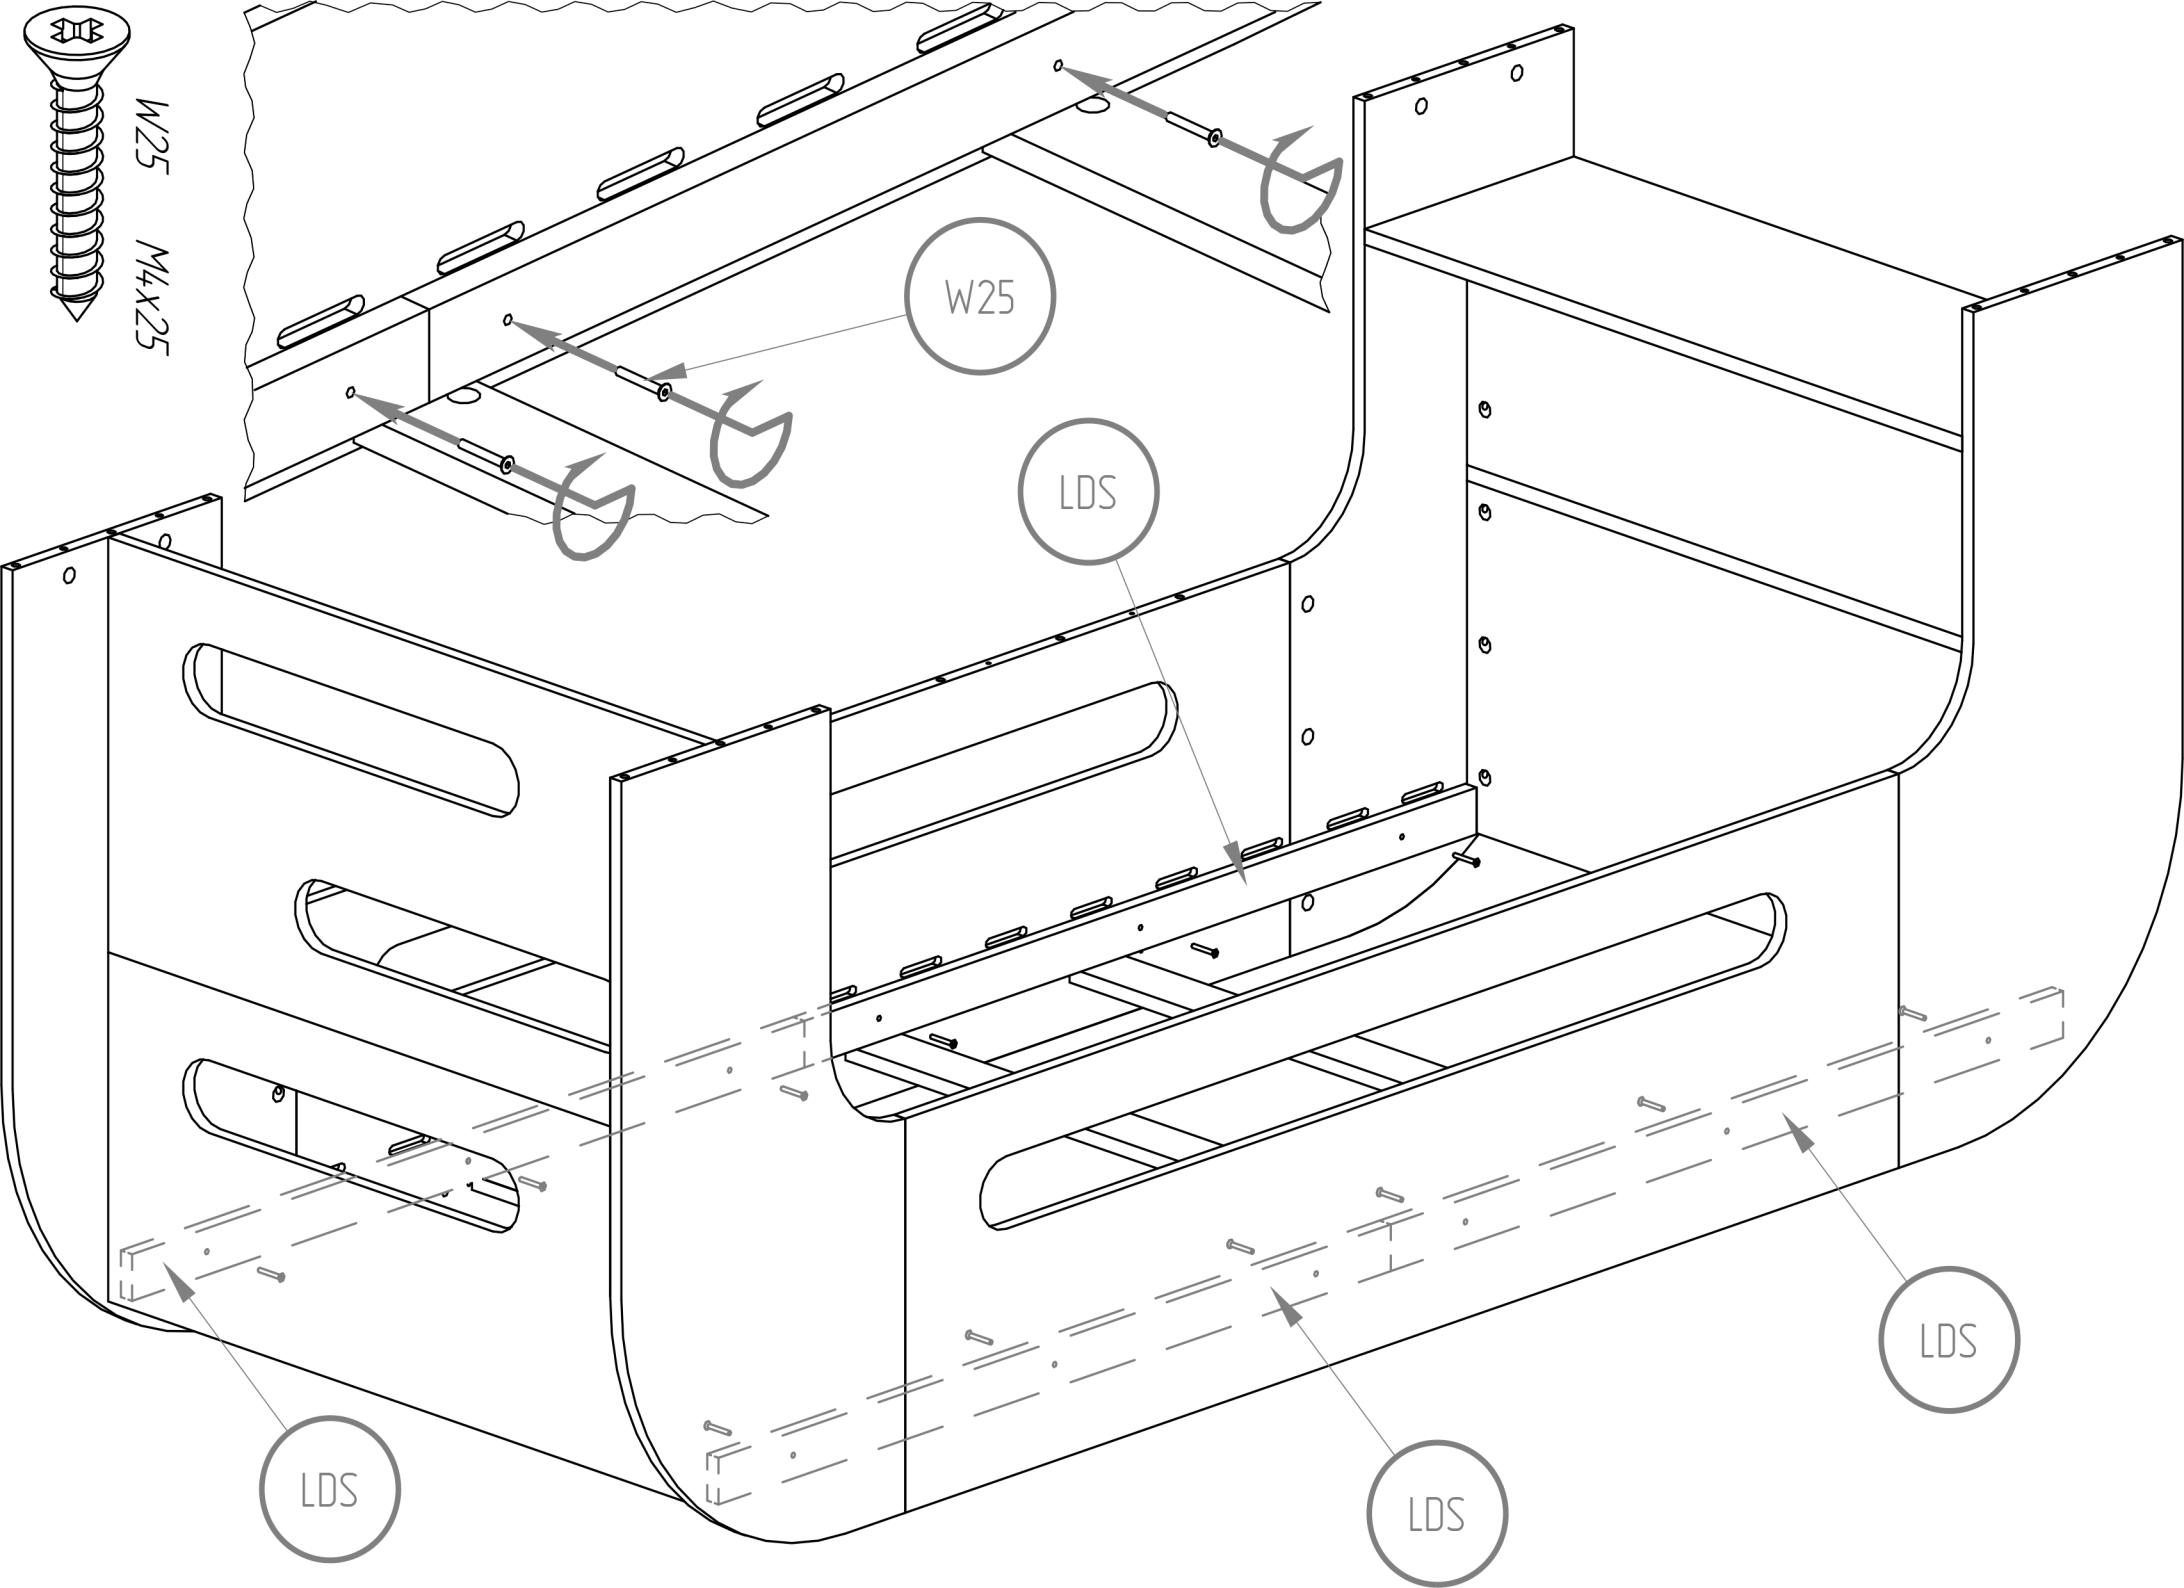

W25  
M4x25

W25


LDS

LDS

LDS


LDS




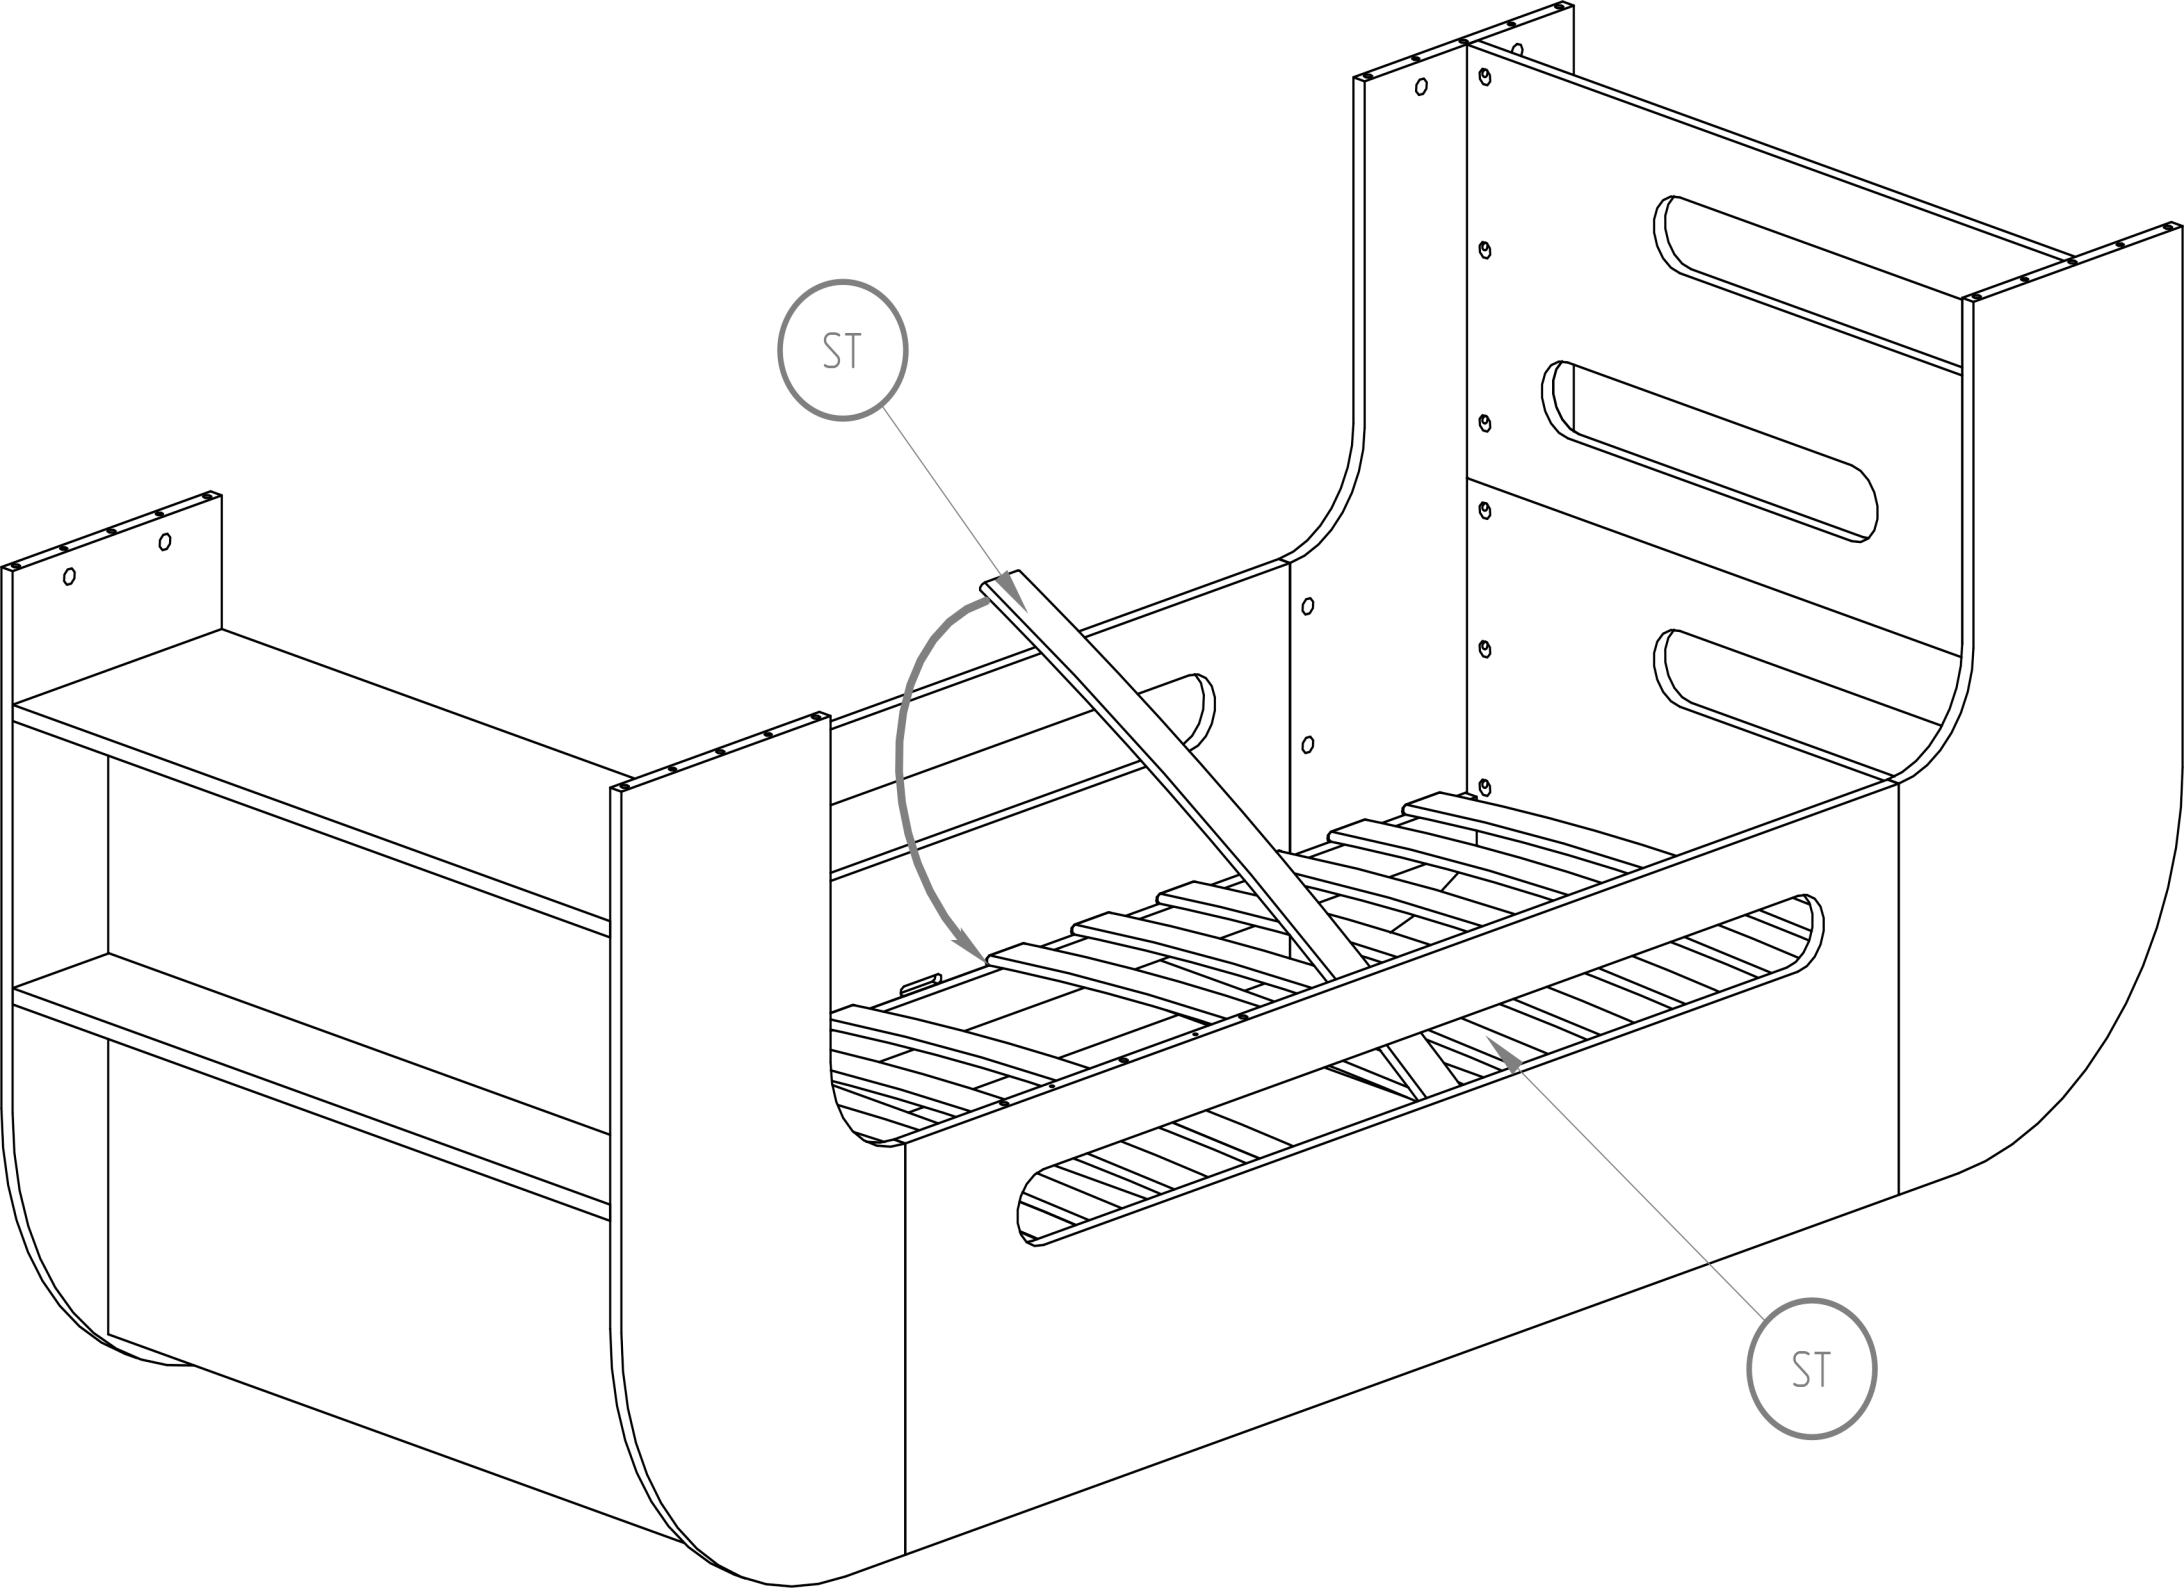


ST

ST

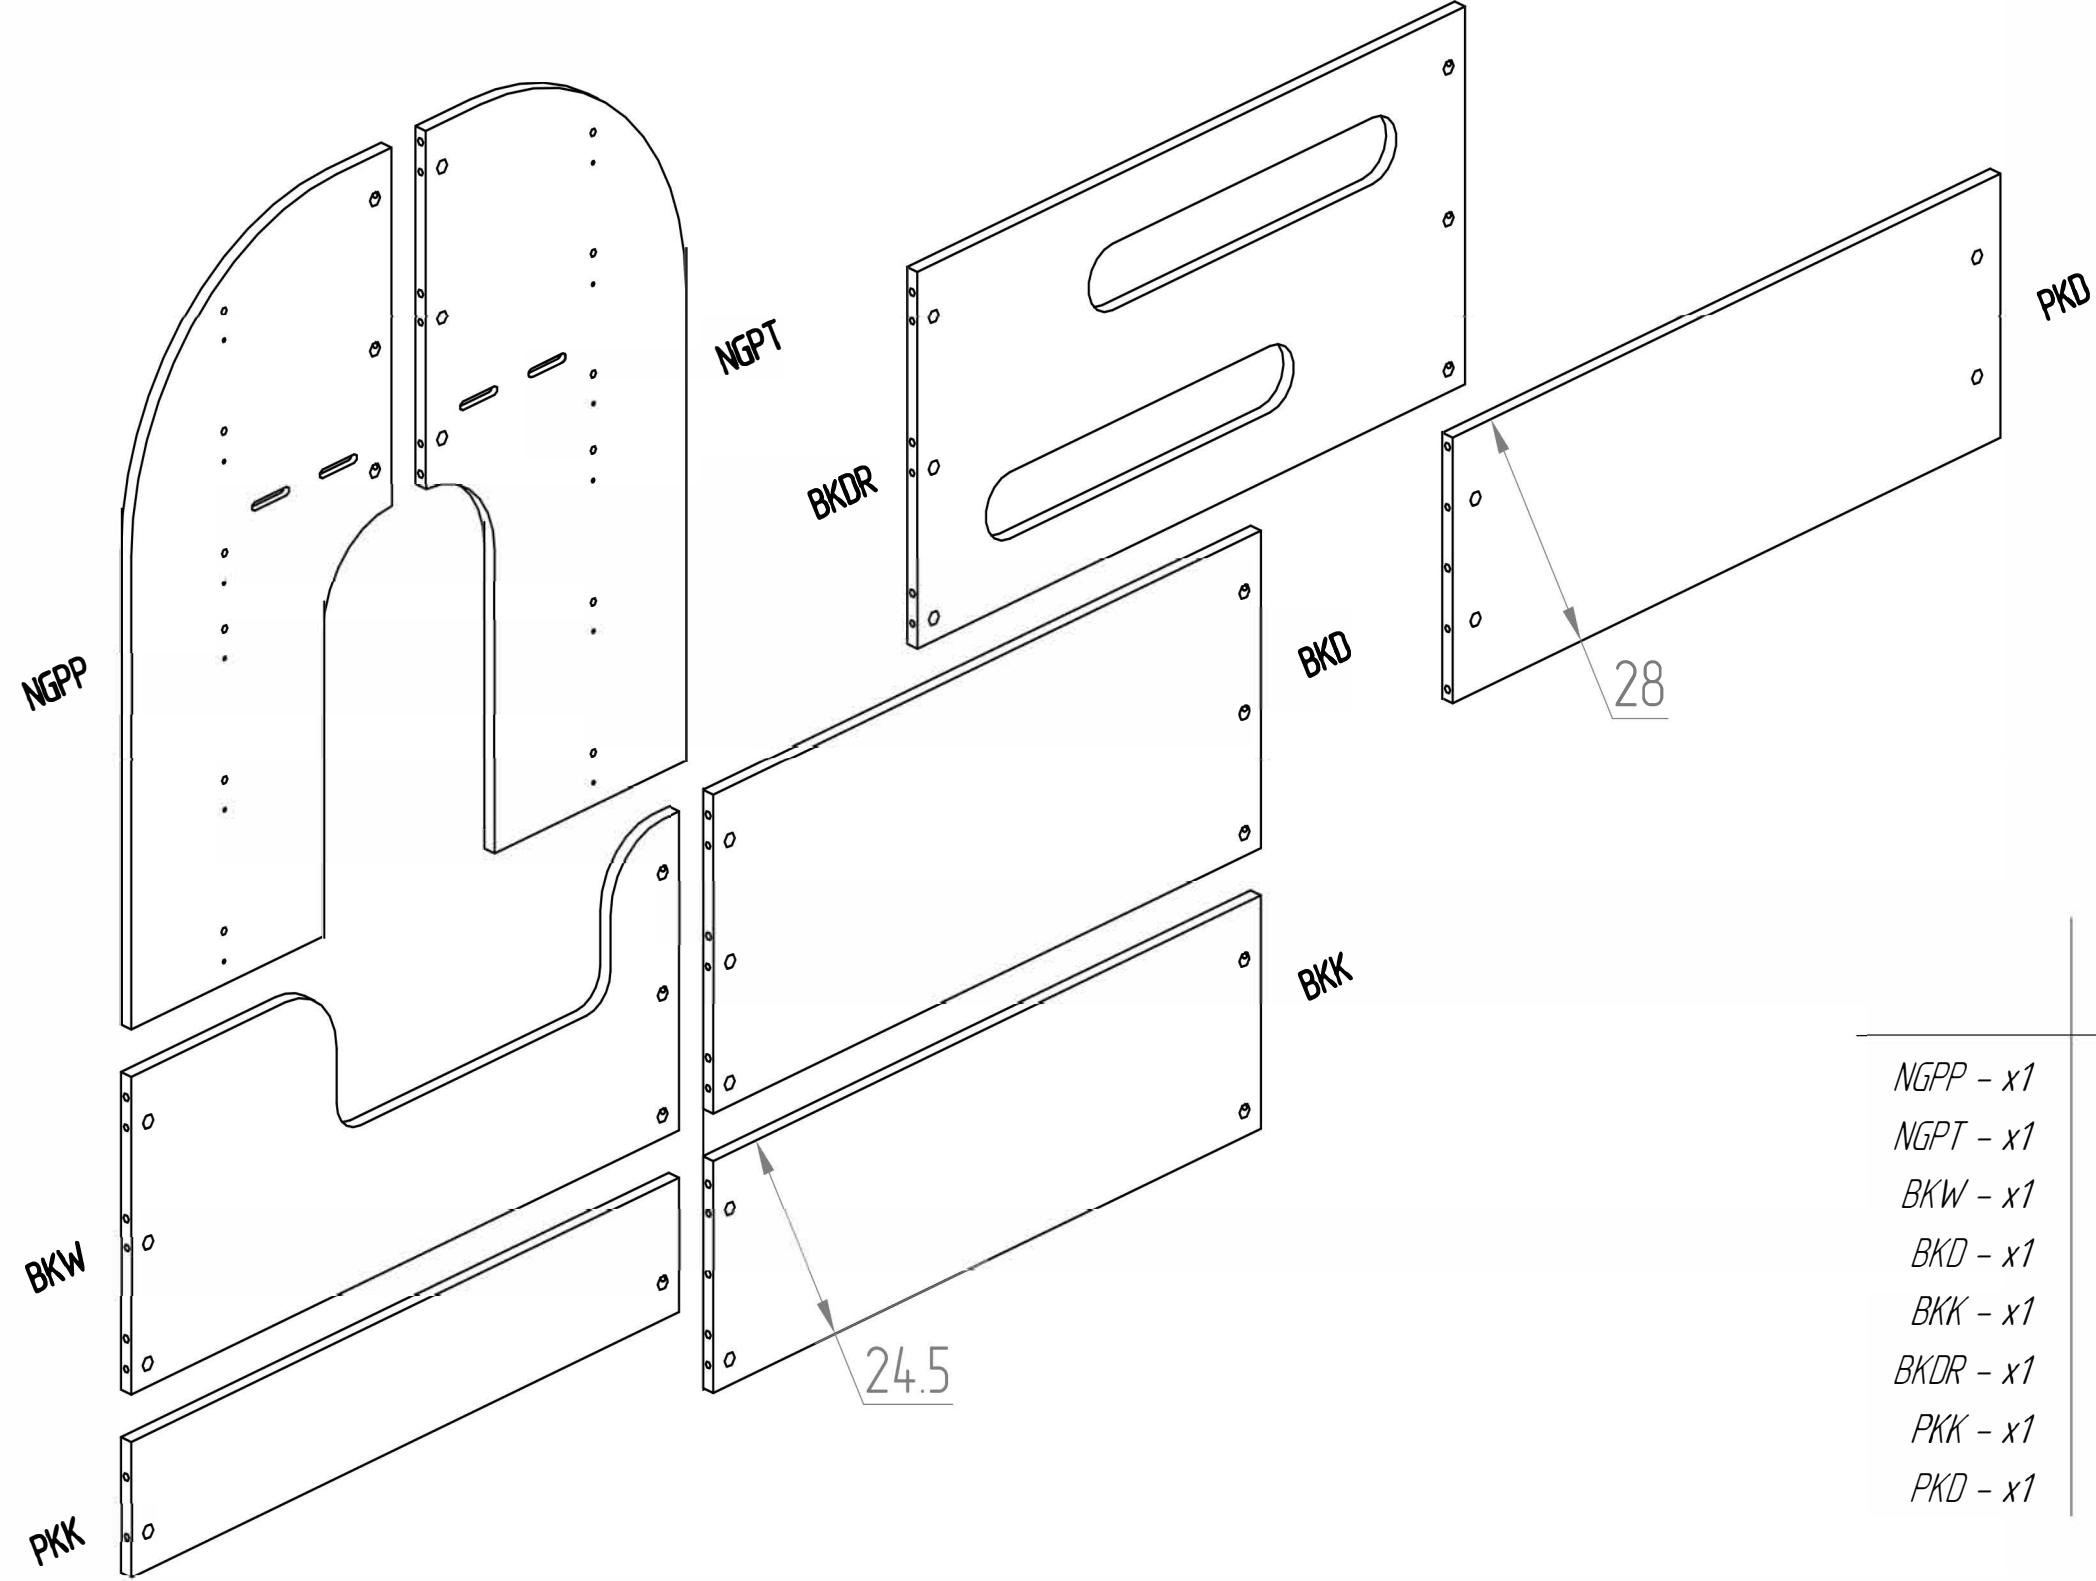

- 
- NGPP - x1*
  - NGPT - x1*
  - BKW - x1*
  - BKD - x1*
  - BKK - x1*
  - BKDR - x1*
  - PKK - x1*
  - PKD - x1*

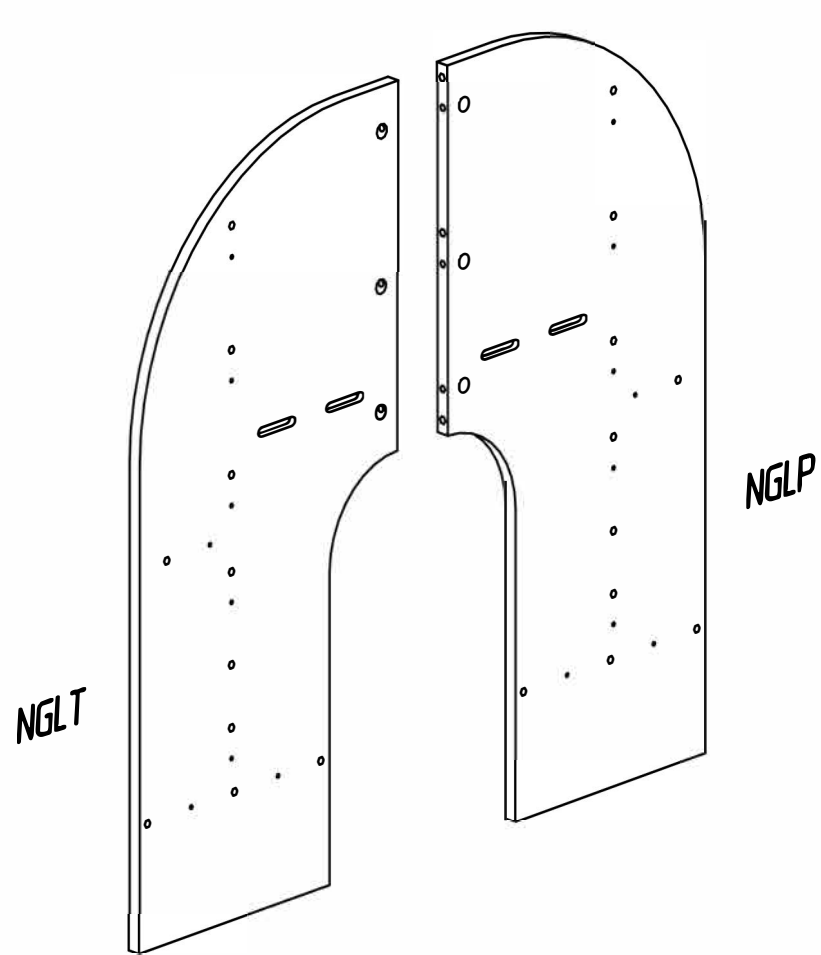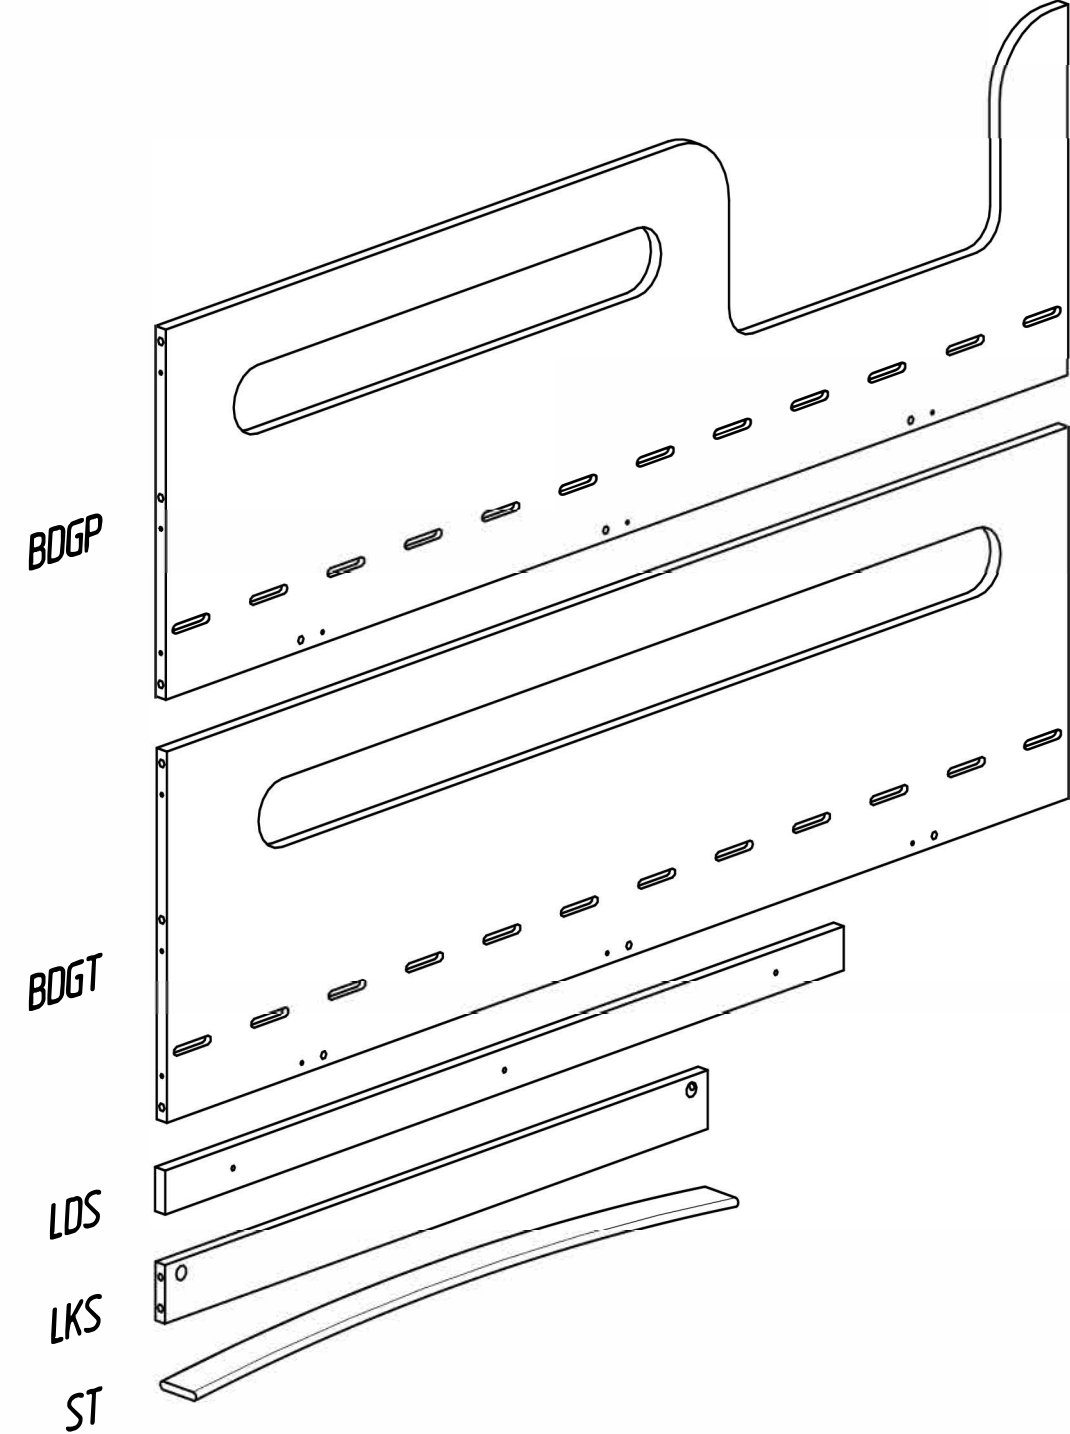

*B0GP - x1*

*B0GT - x1*


*NGLT - x1*


*NGLP - x1*



*LDS - x4*


*LKS - x3*

*ST - x12-16*

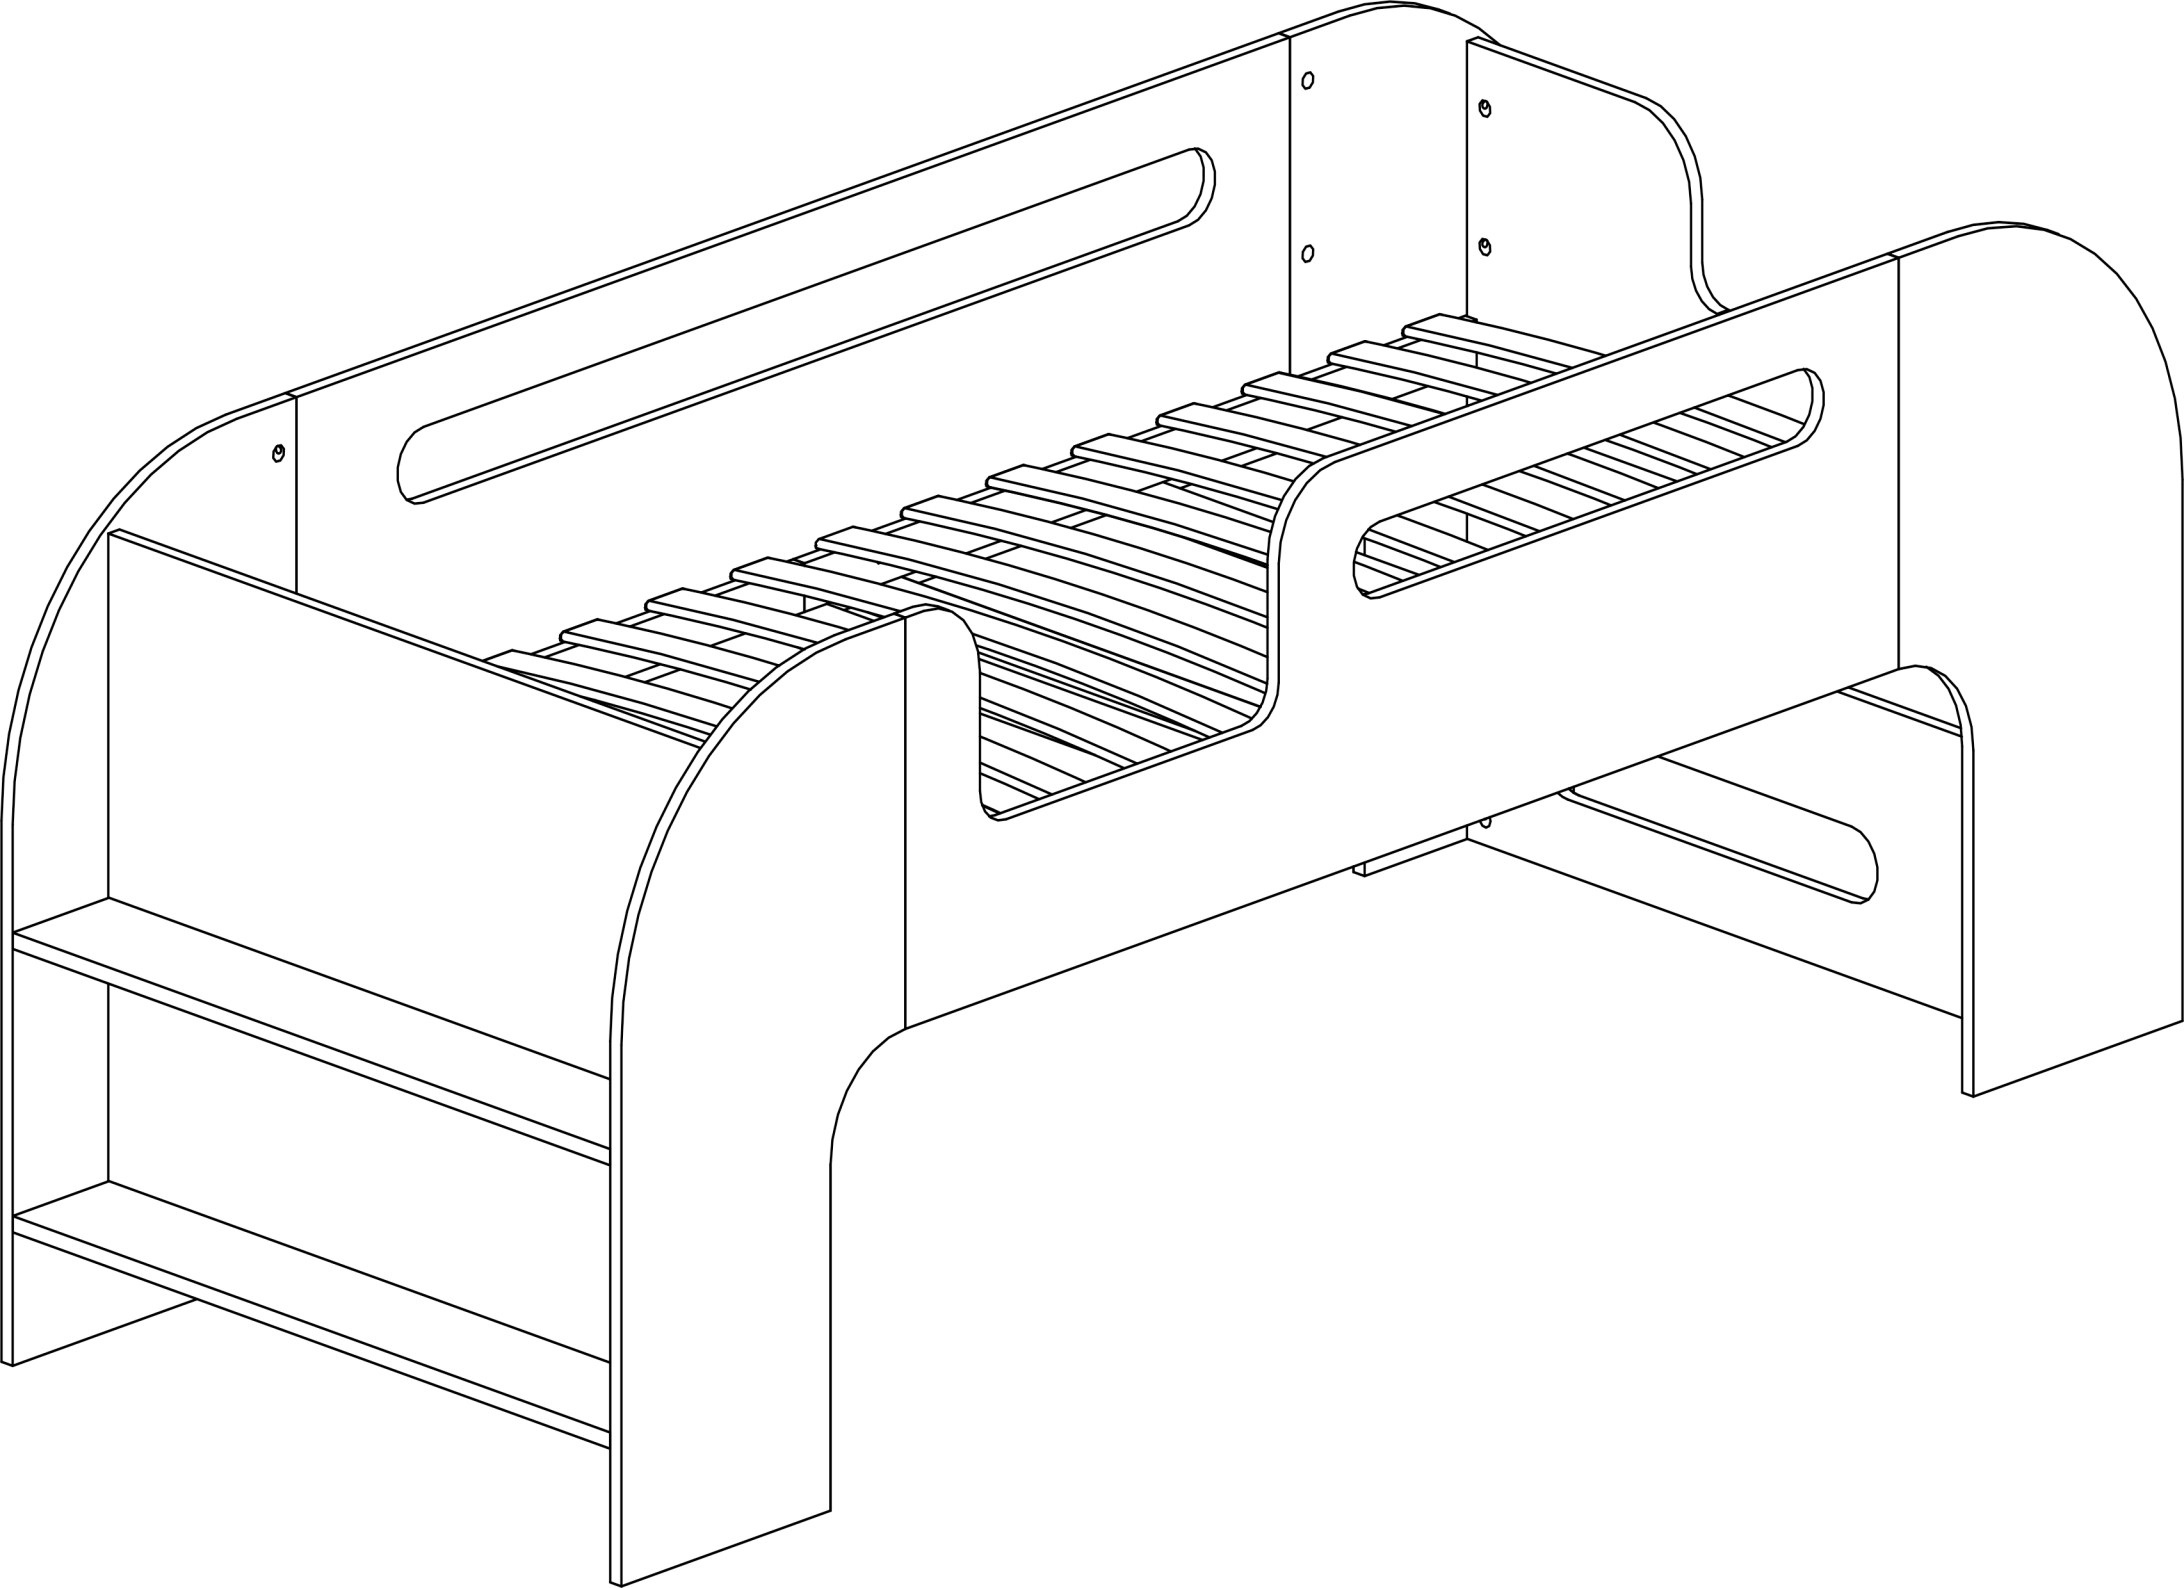

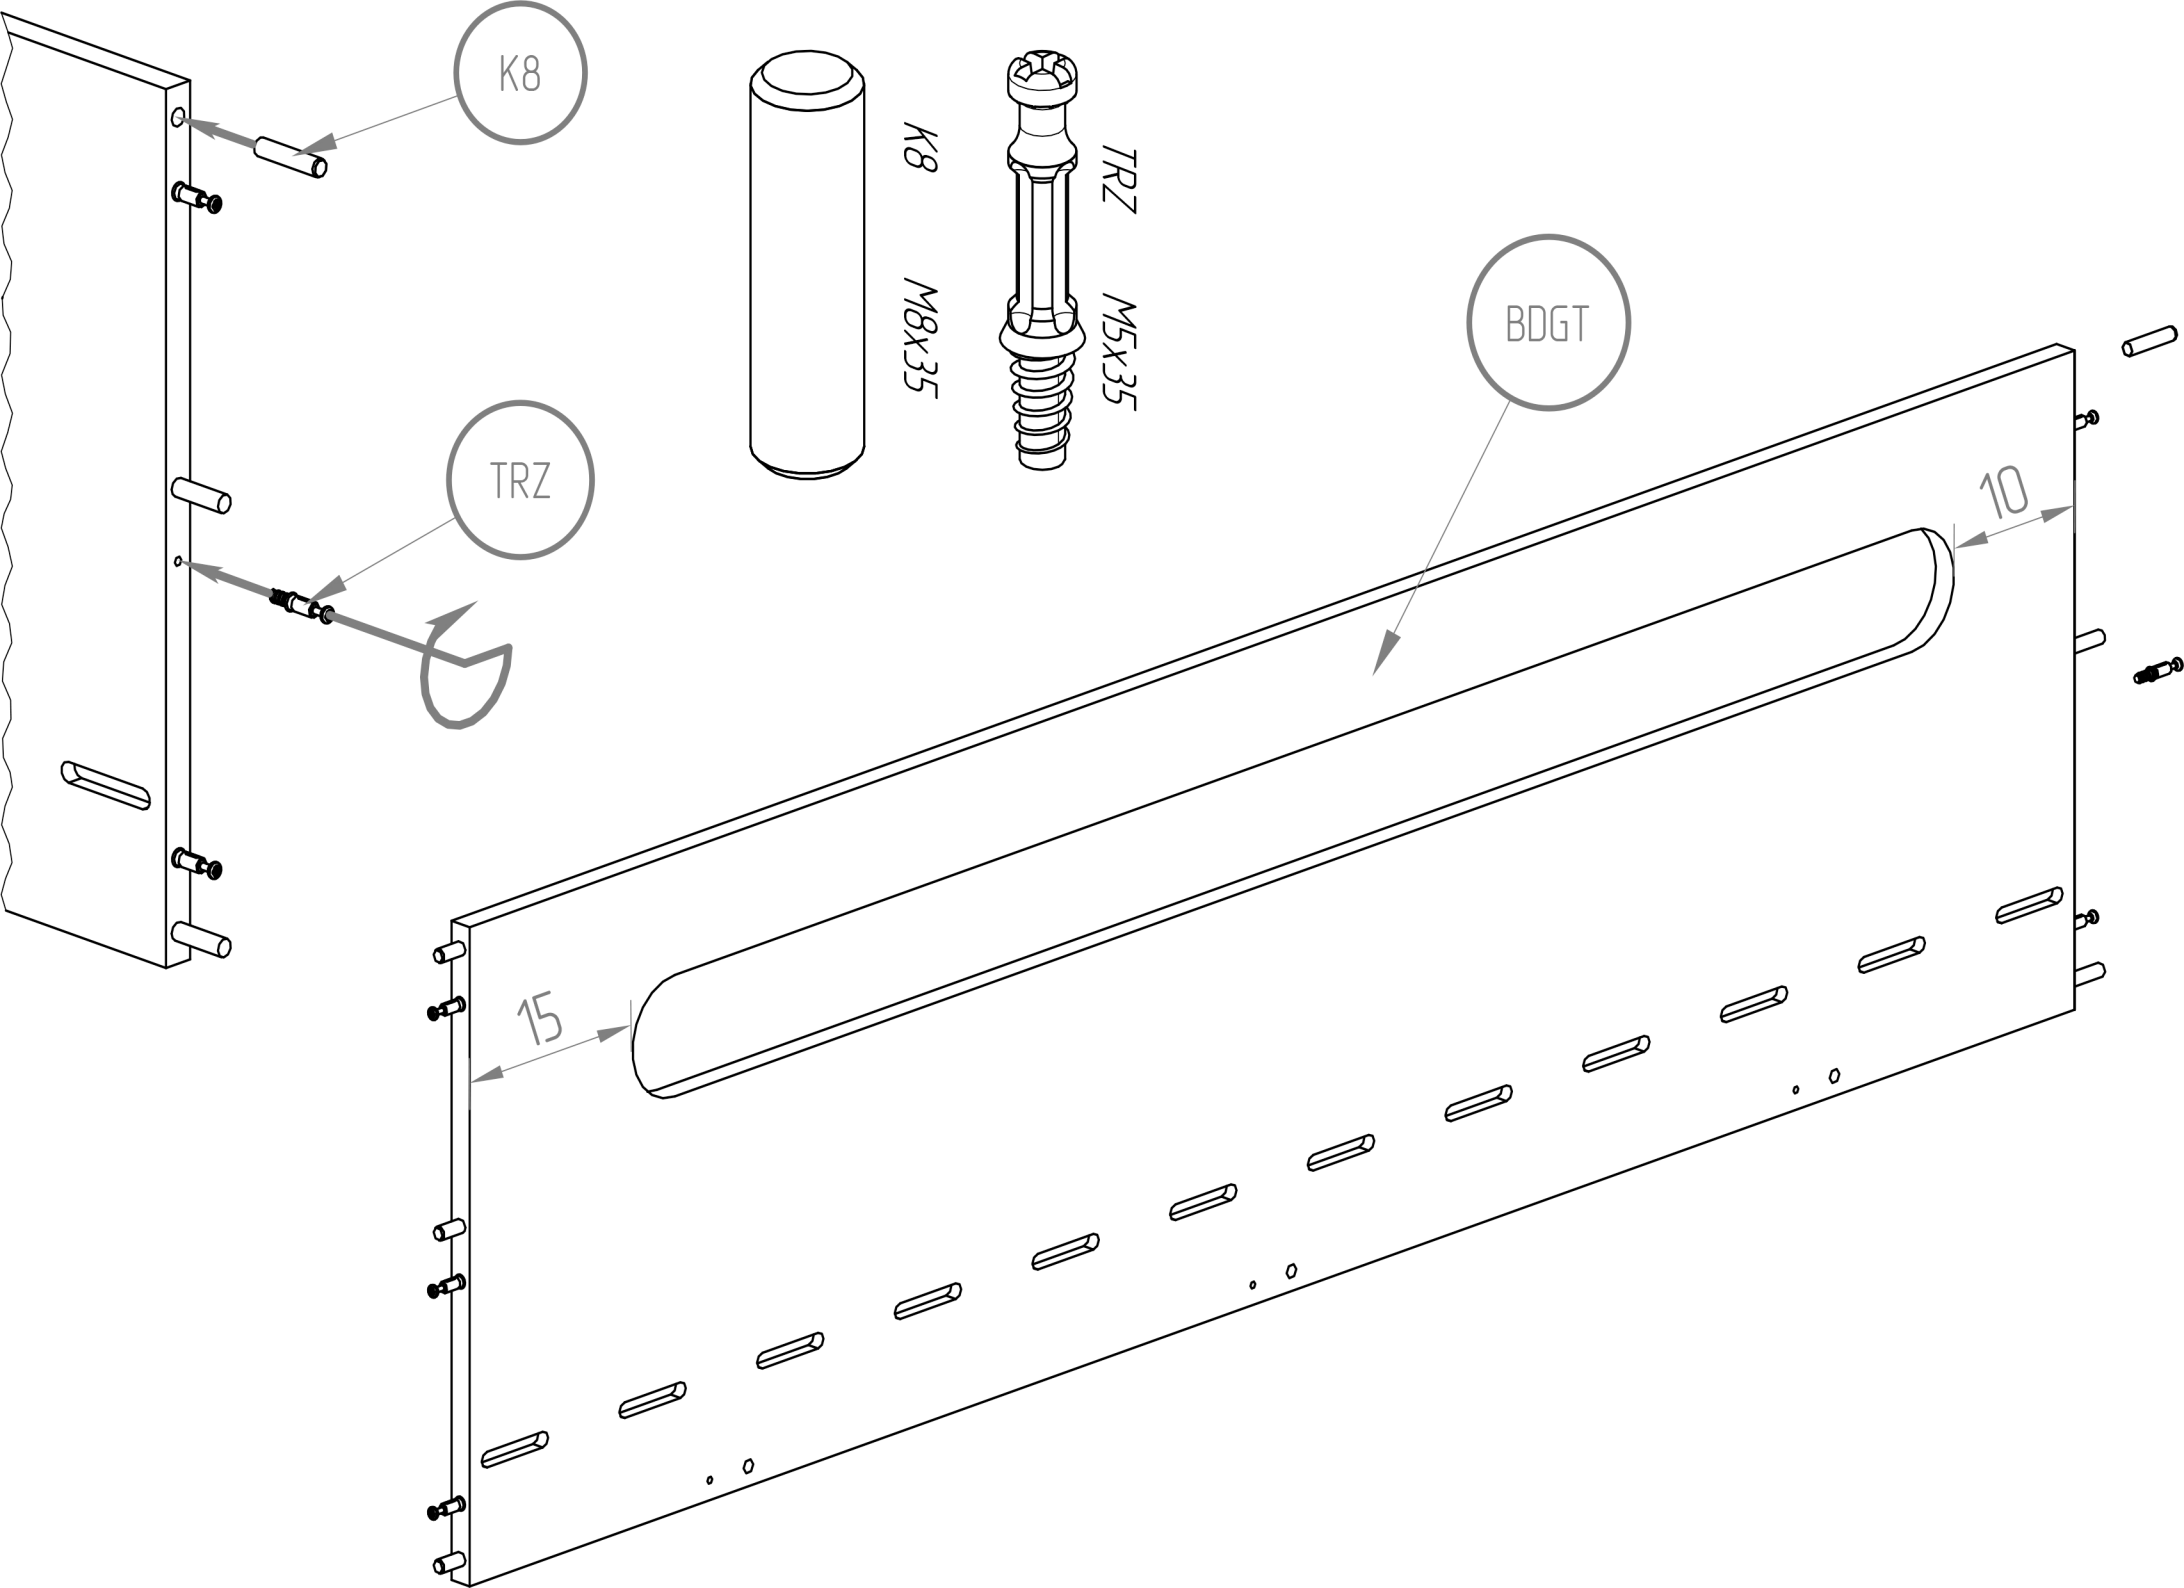

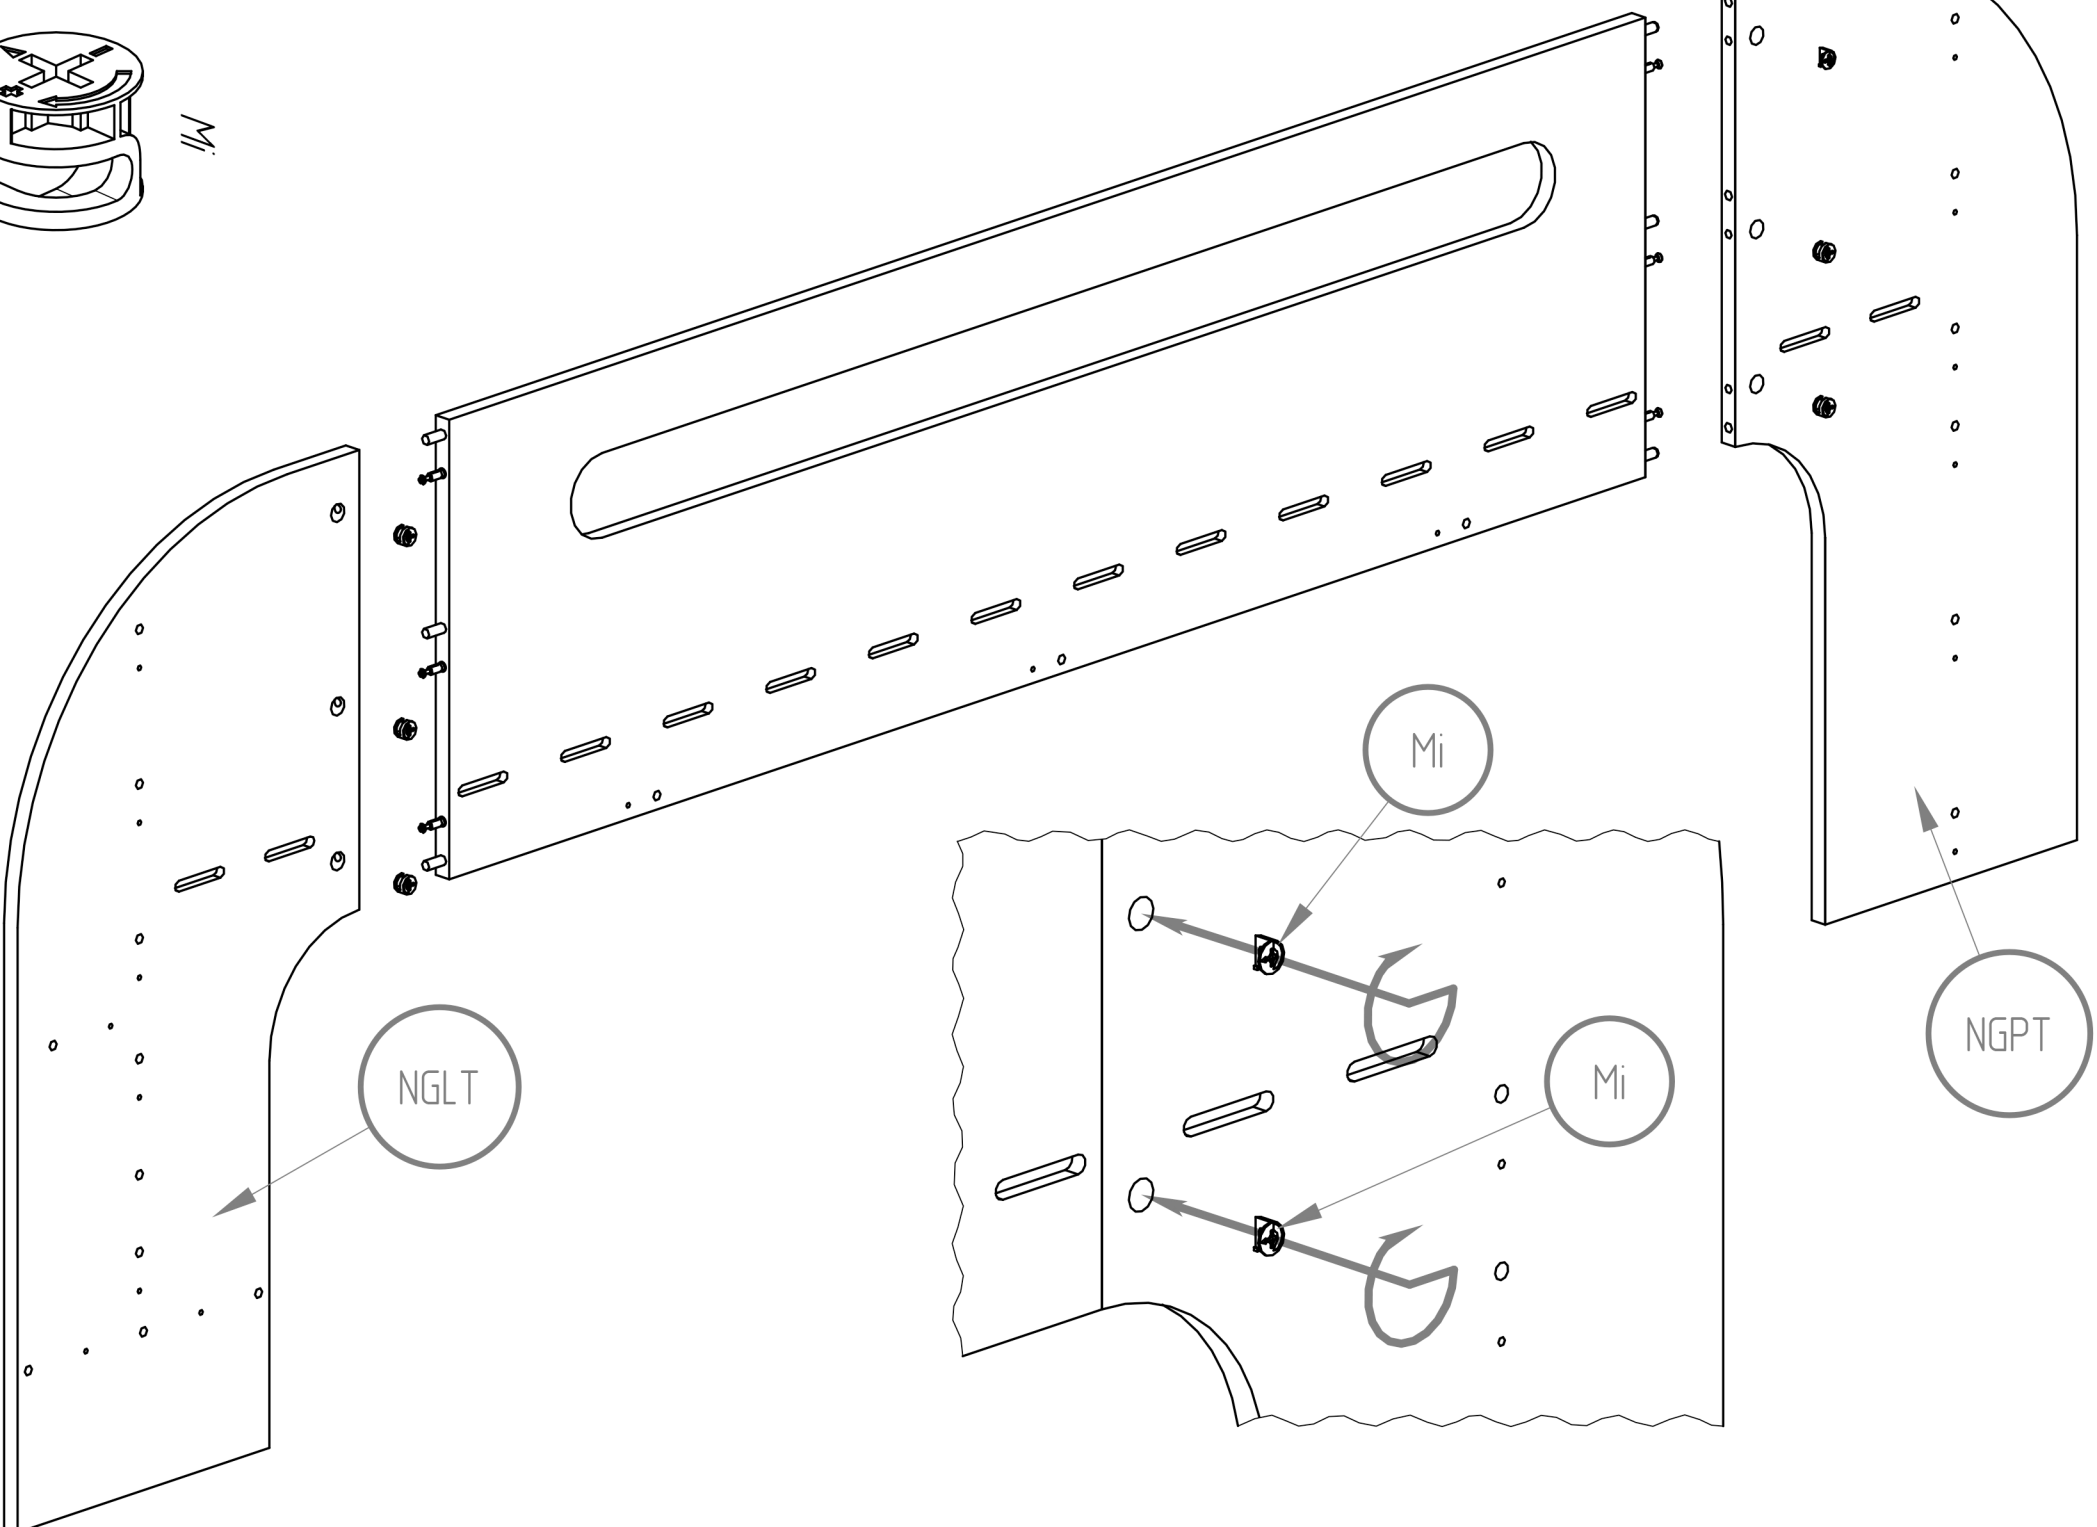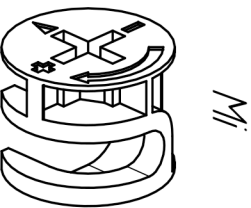

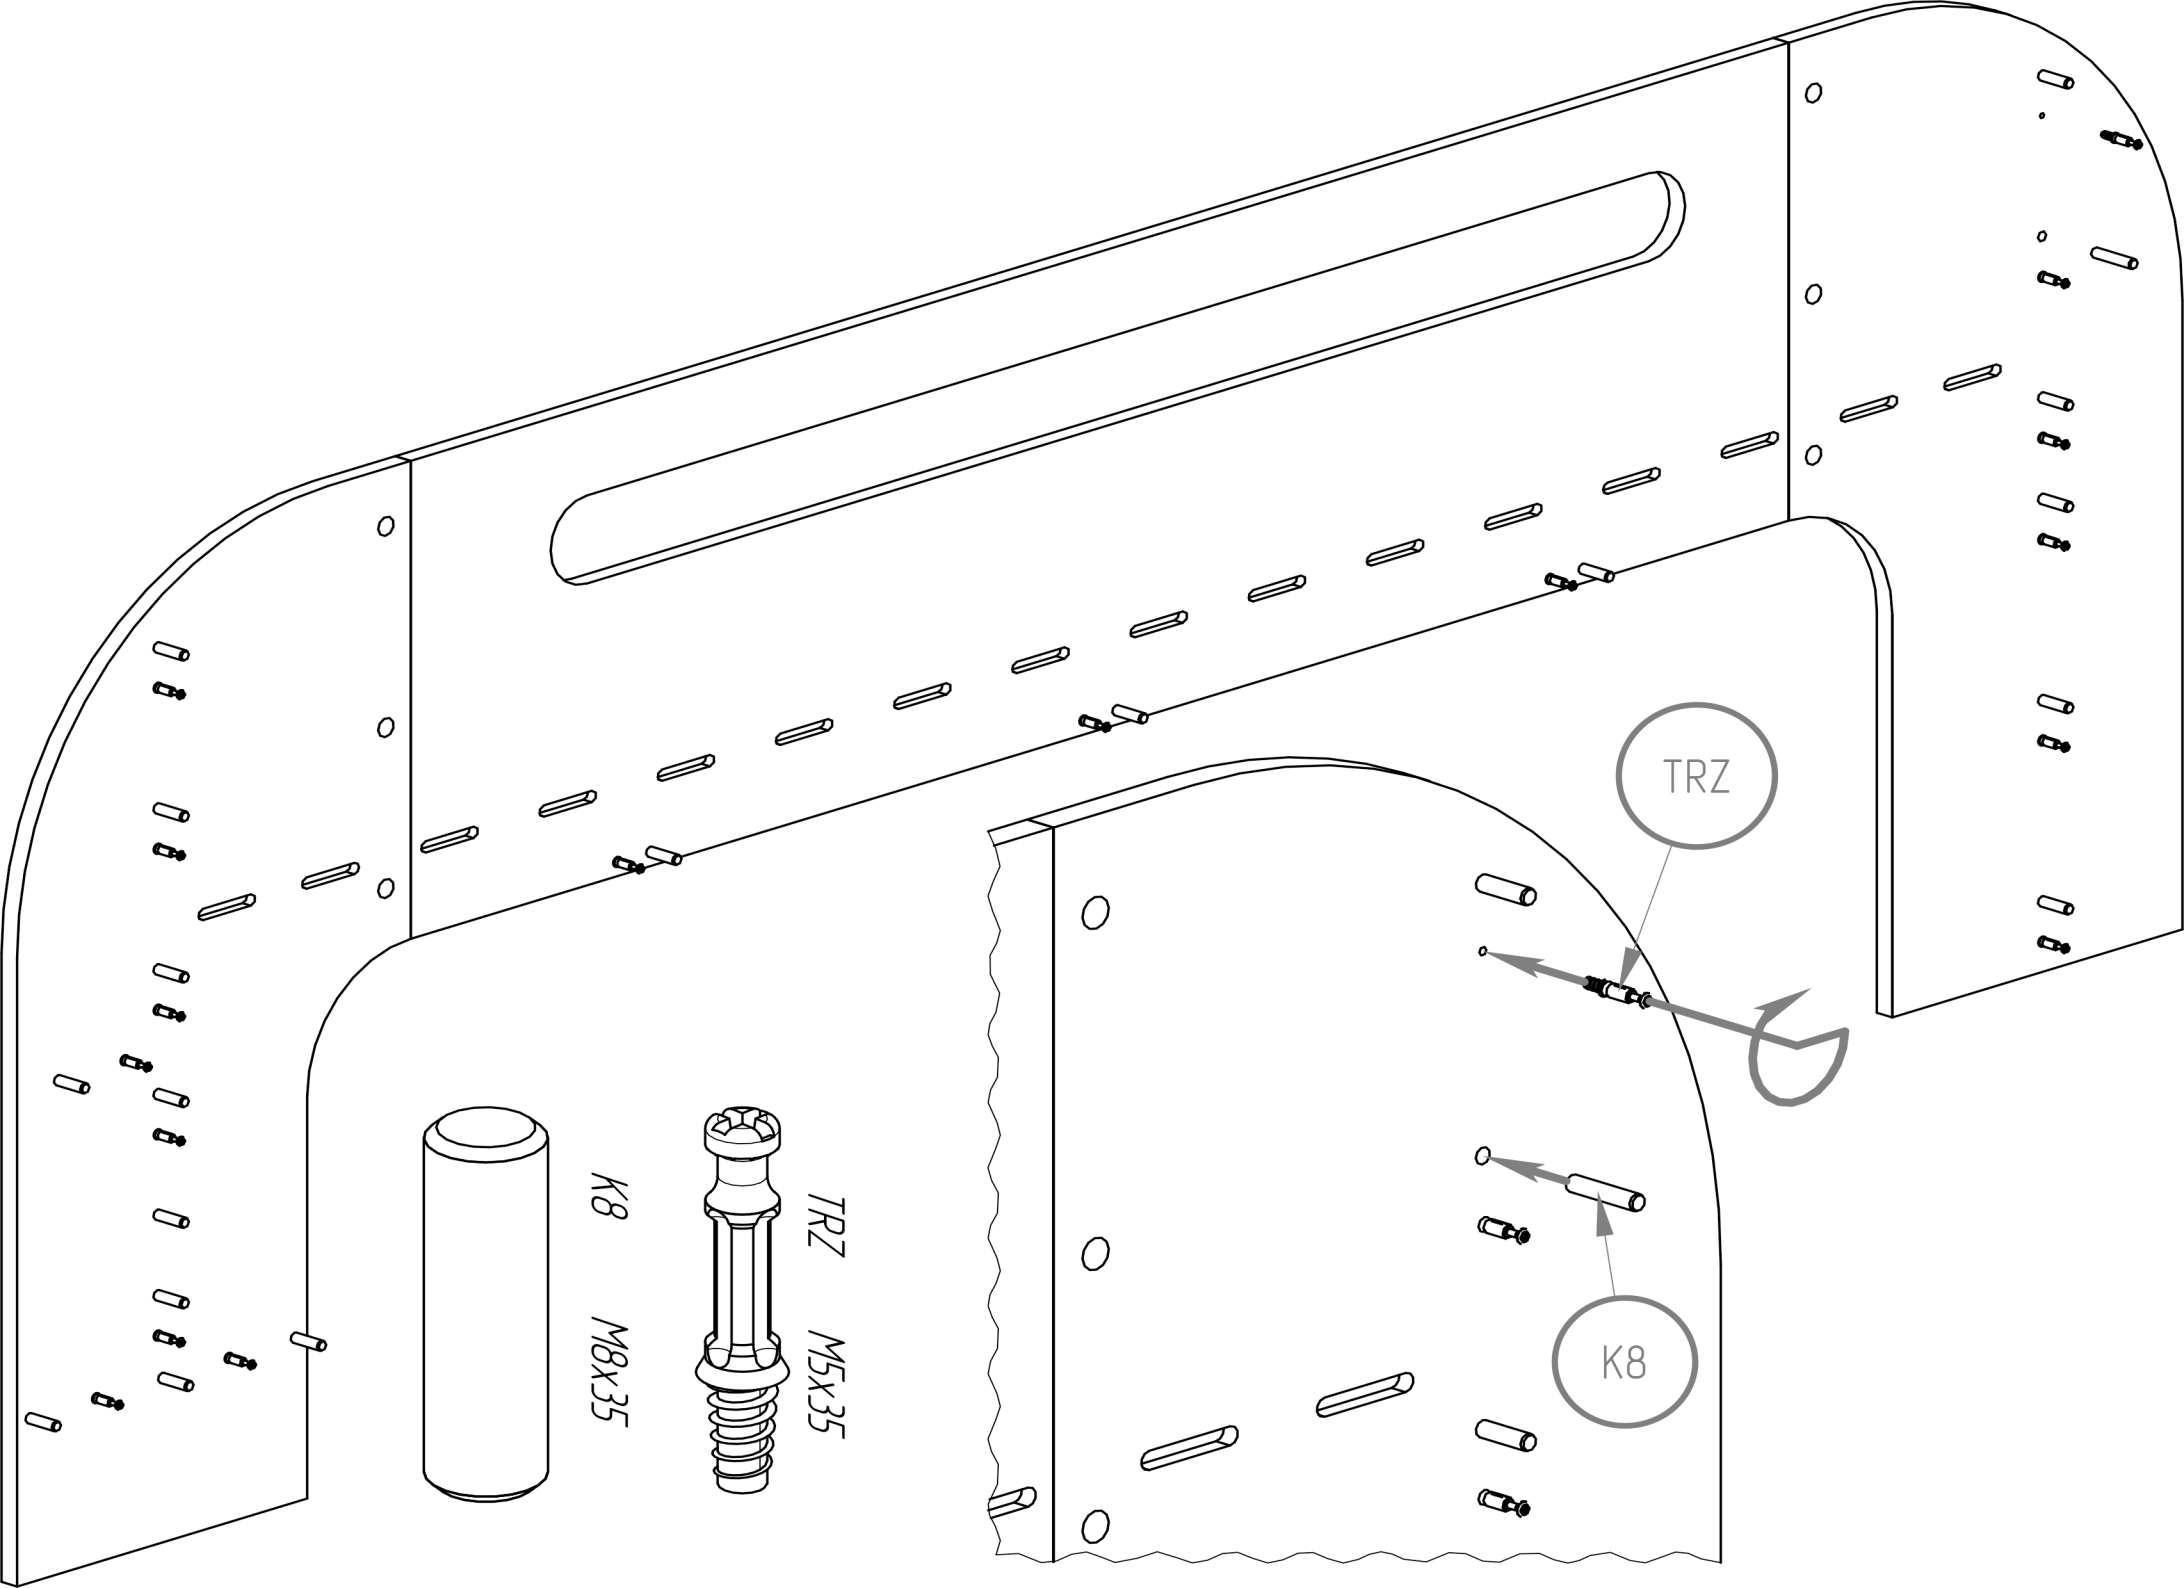

TRZ


K8

K8




M8x35



TRZ


M5x35


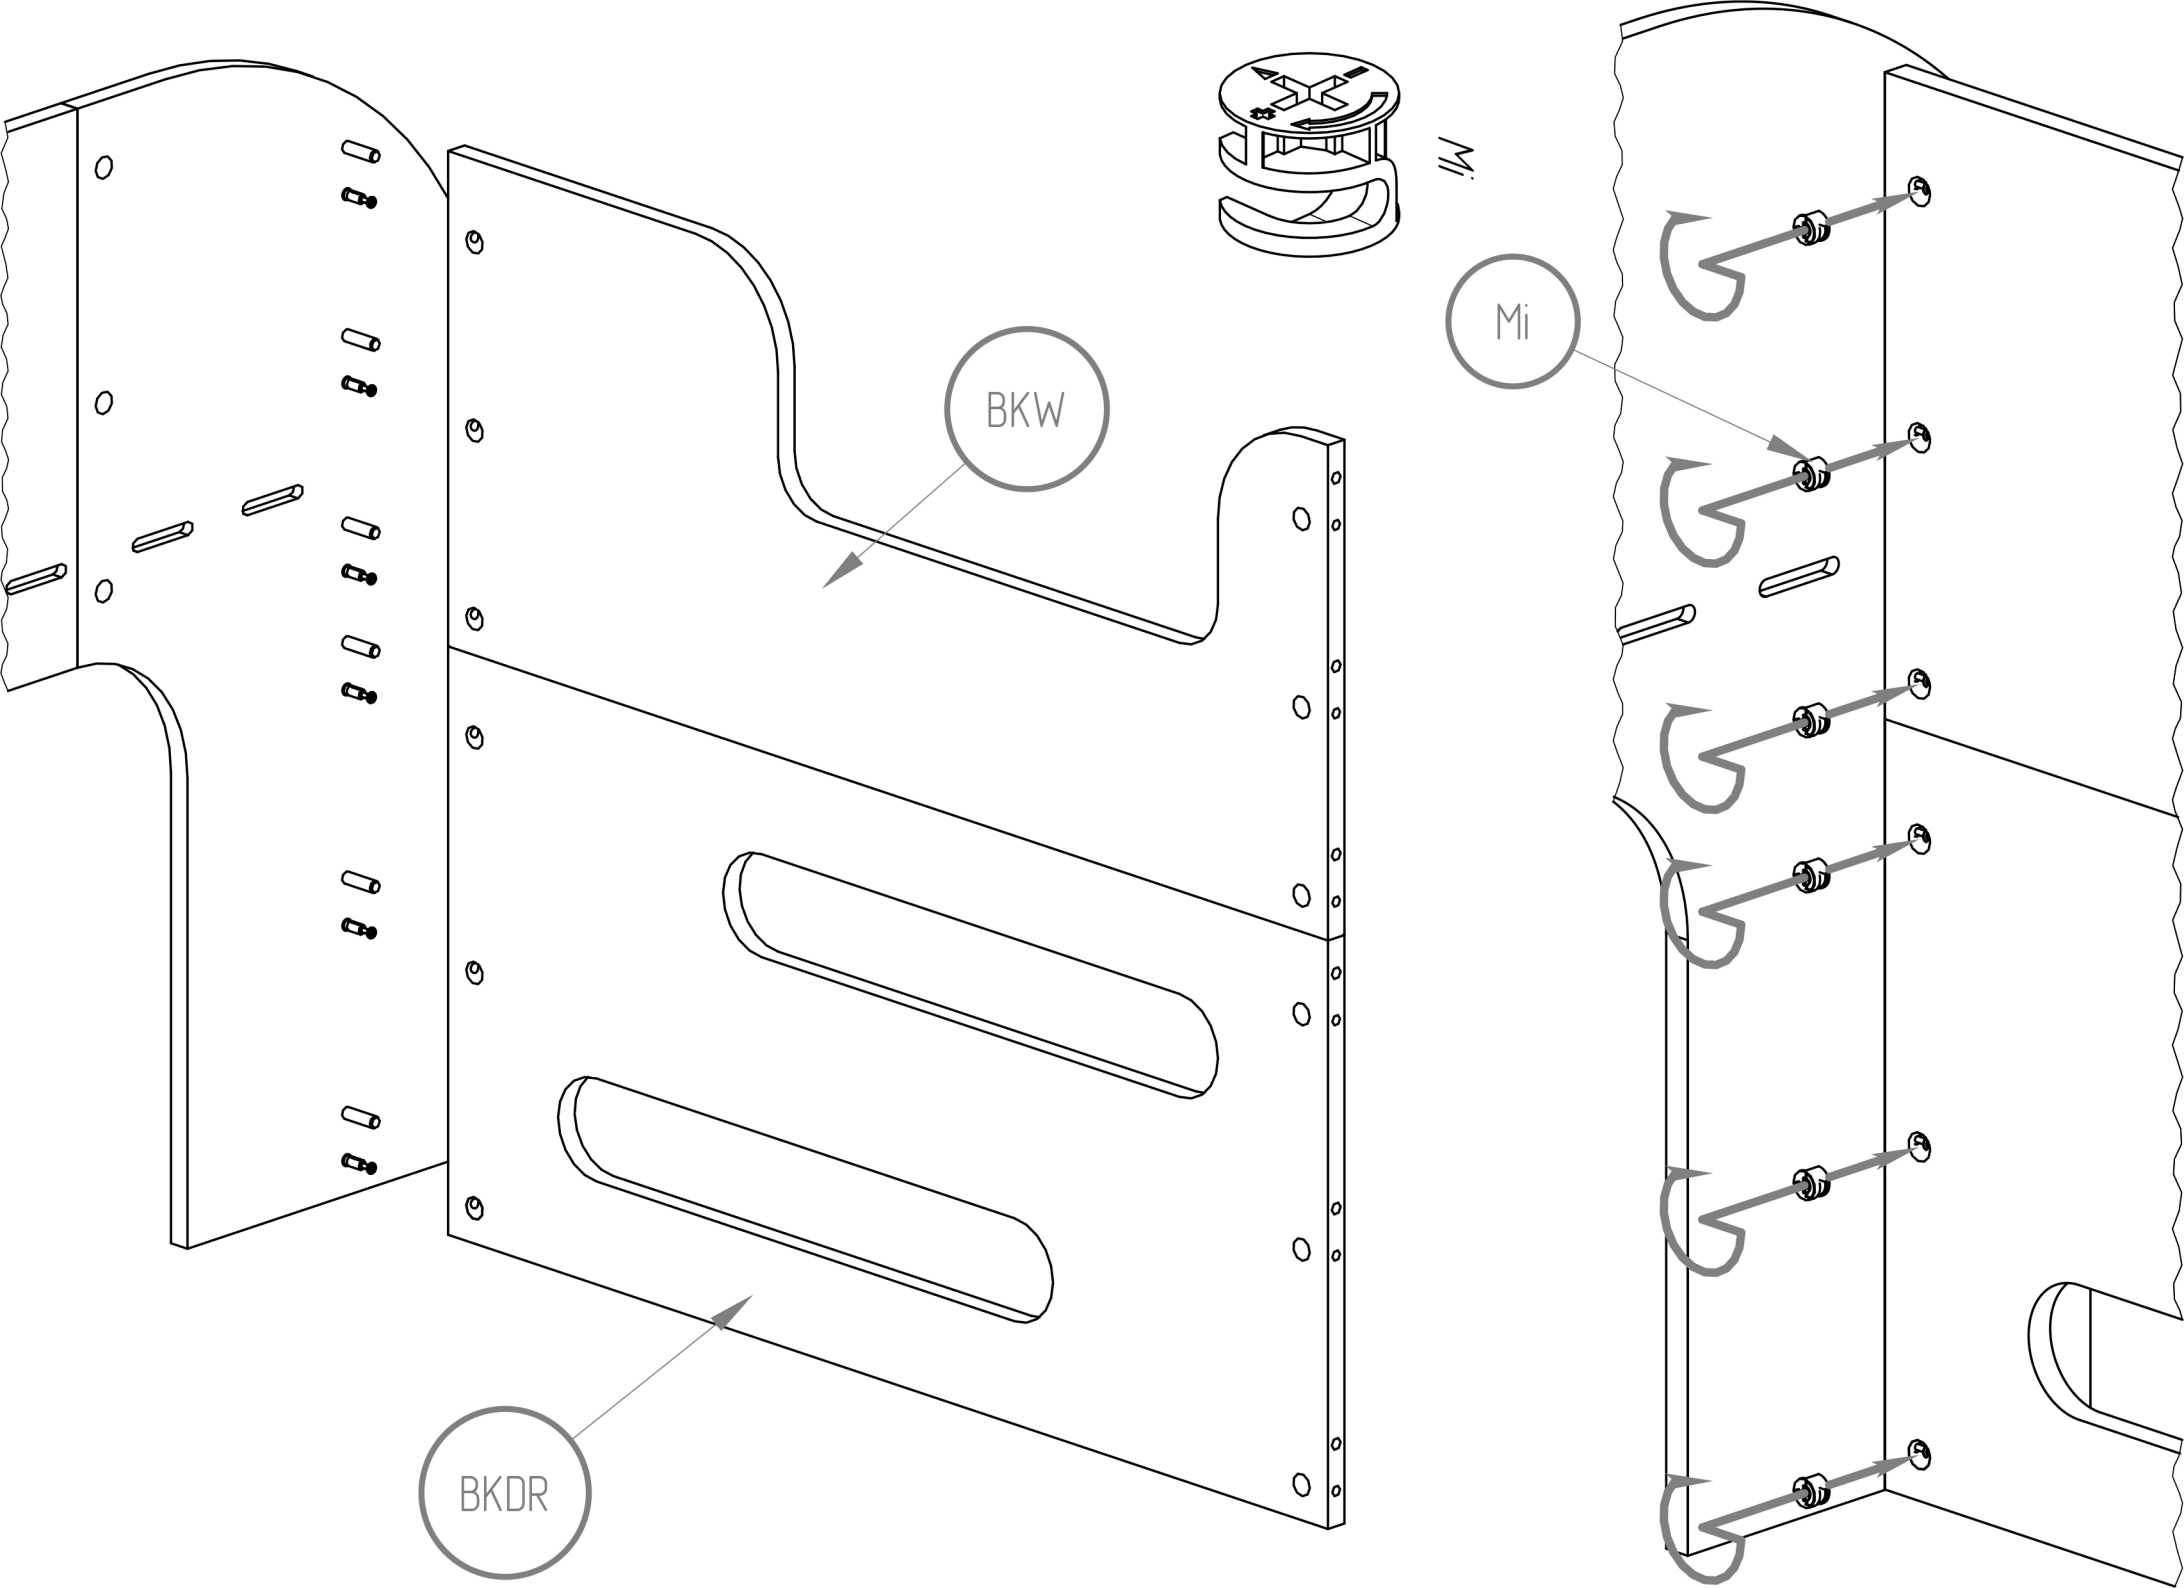





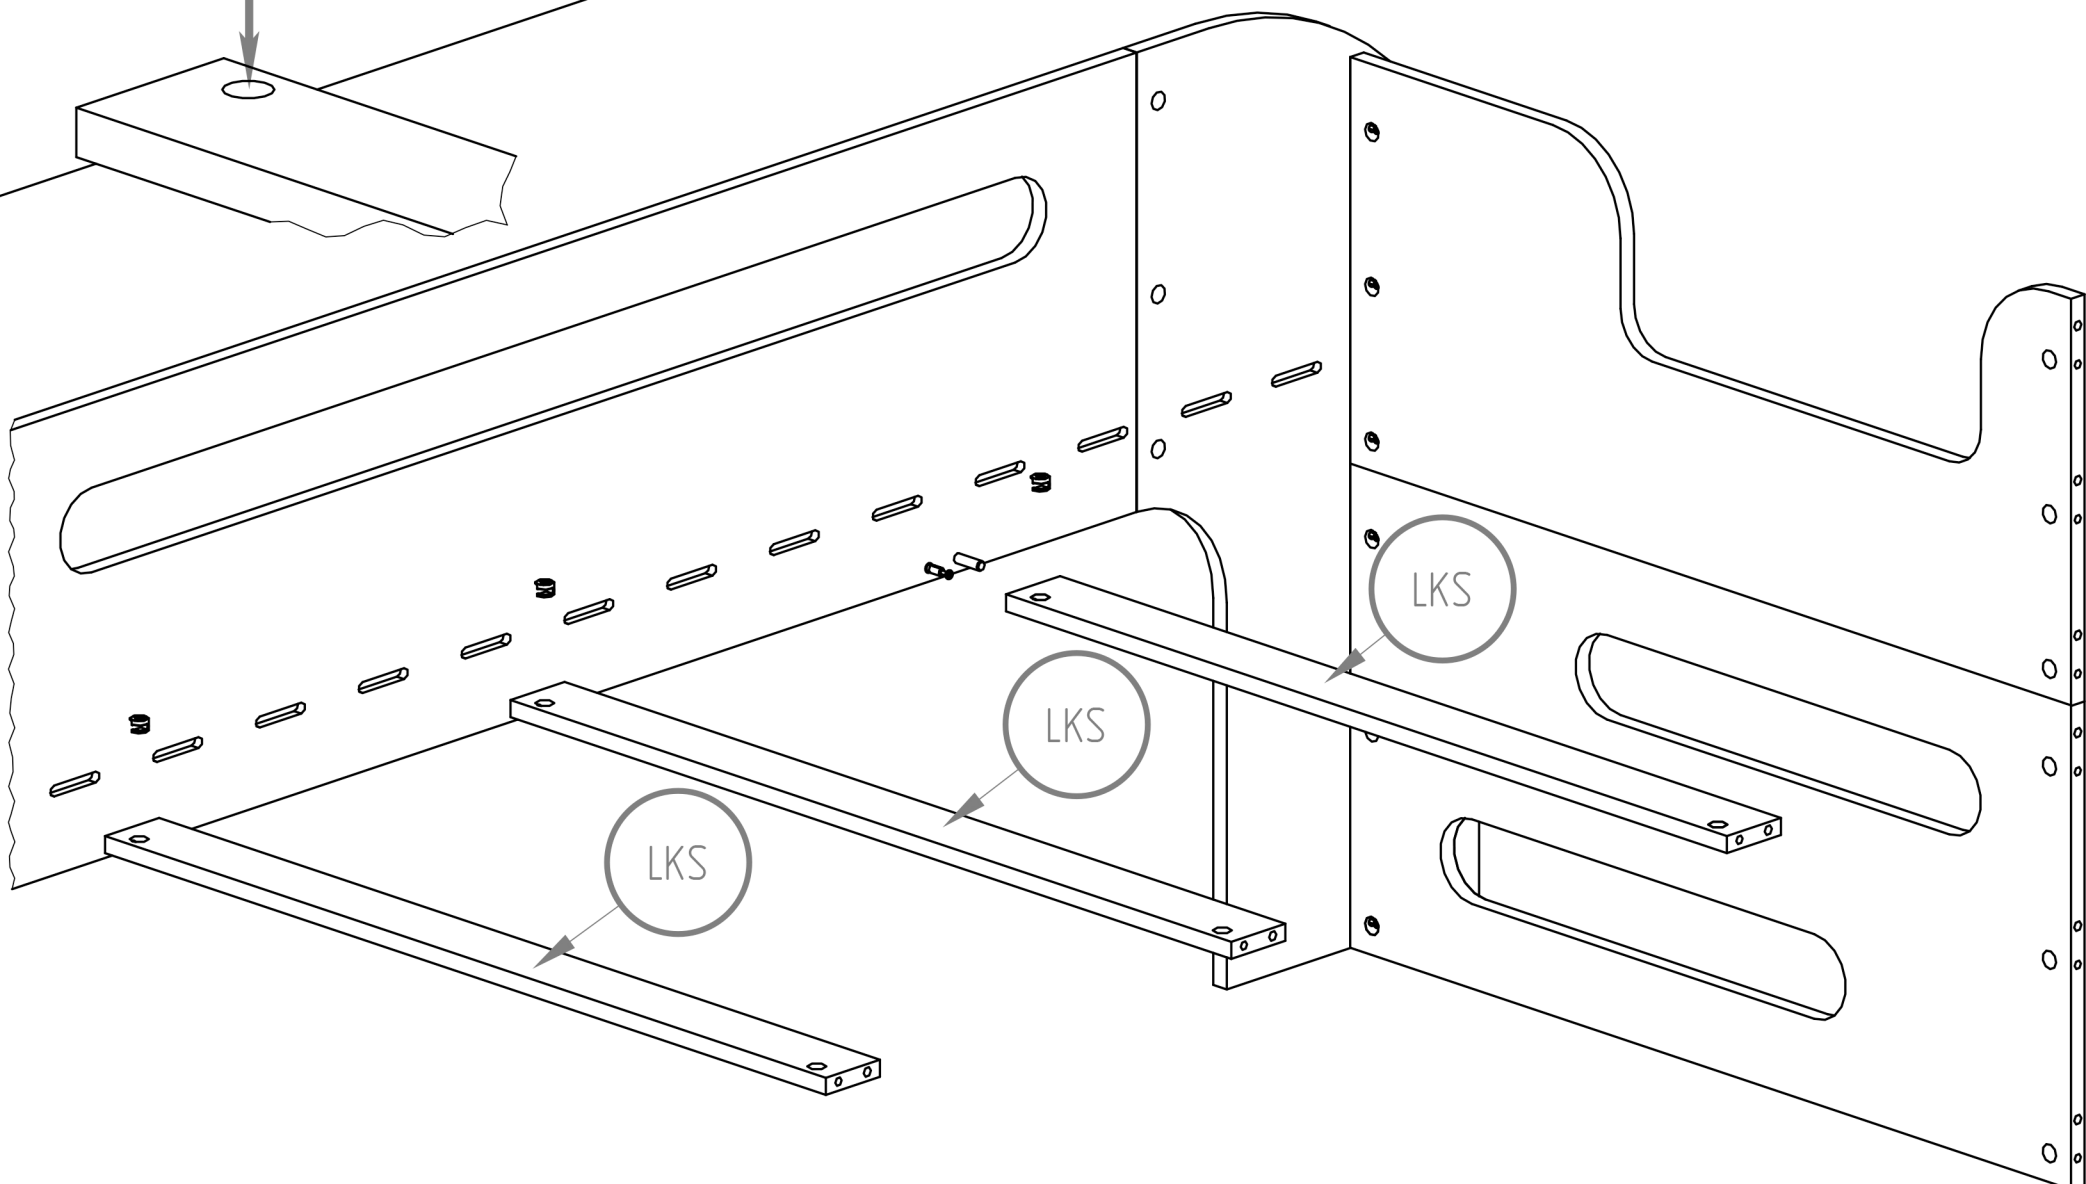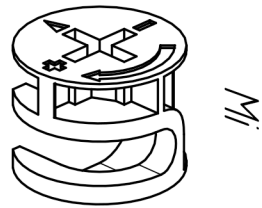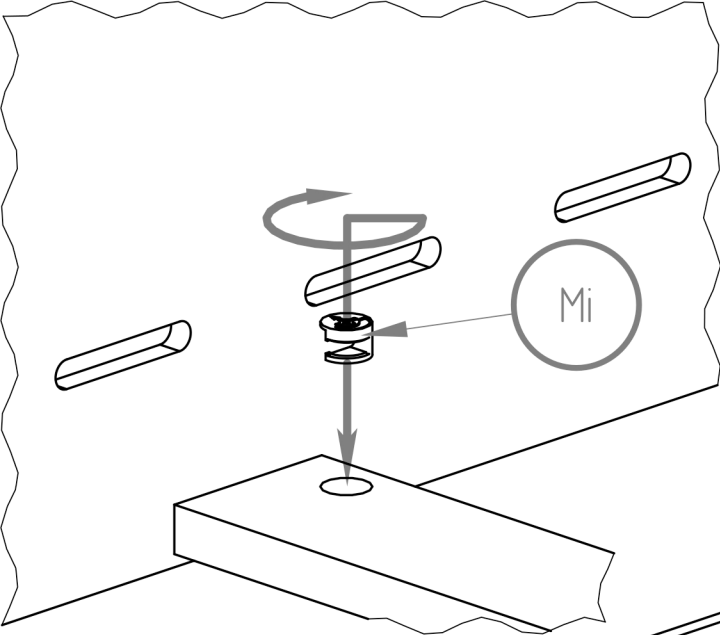


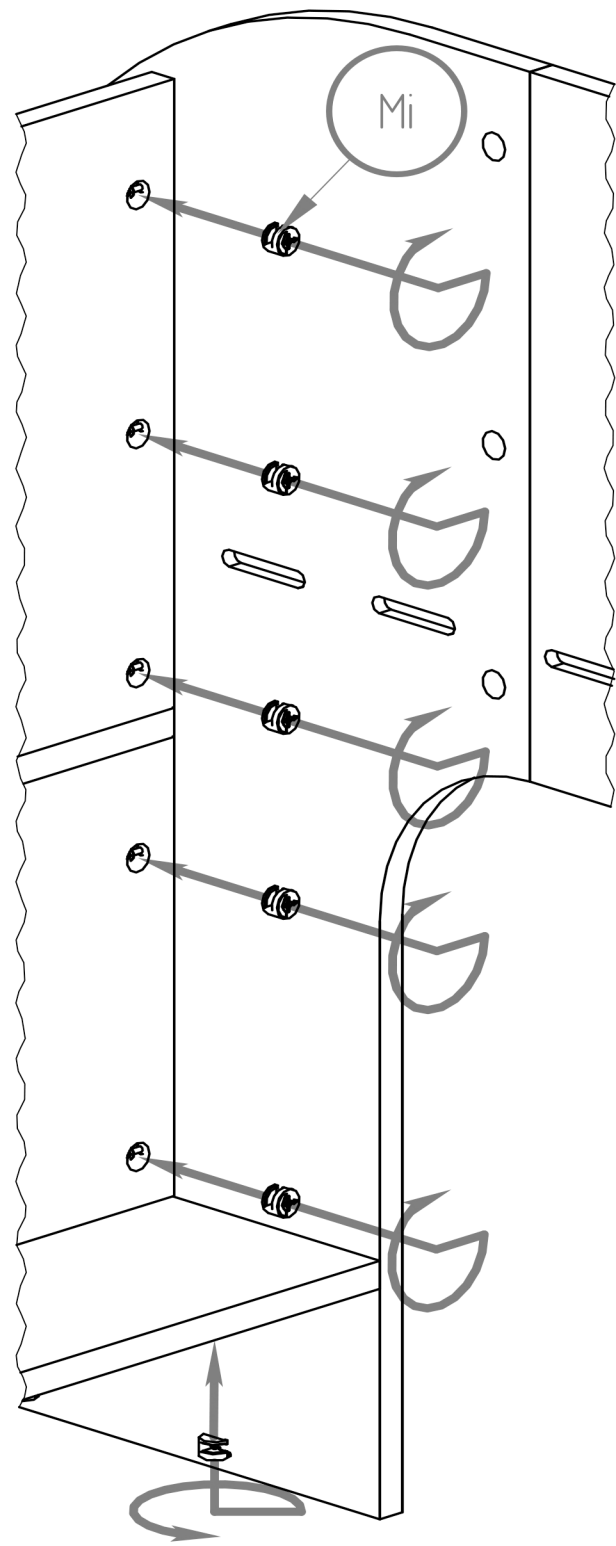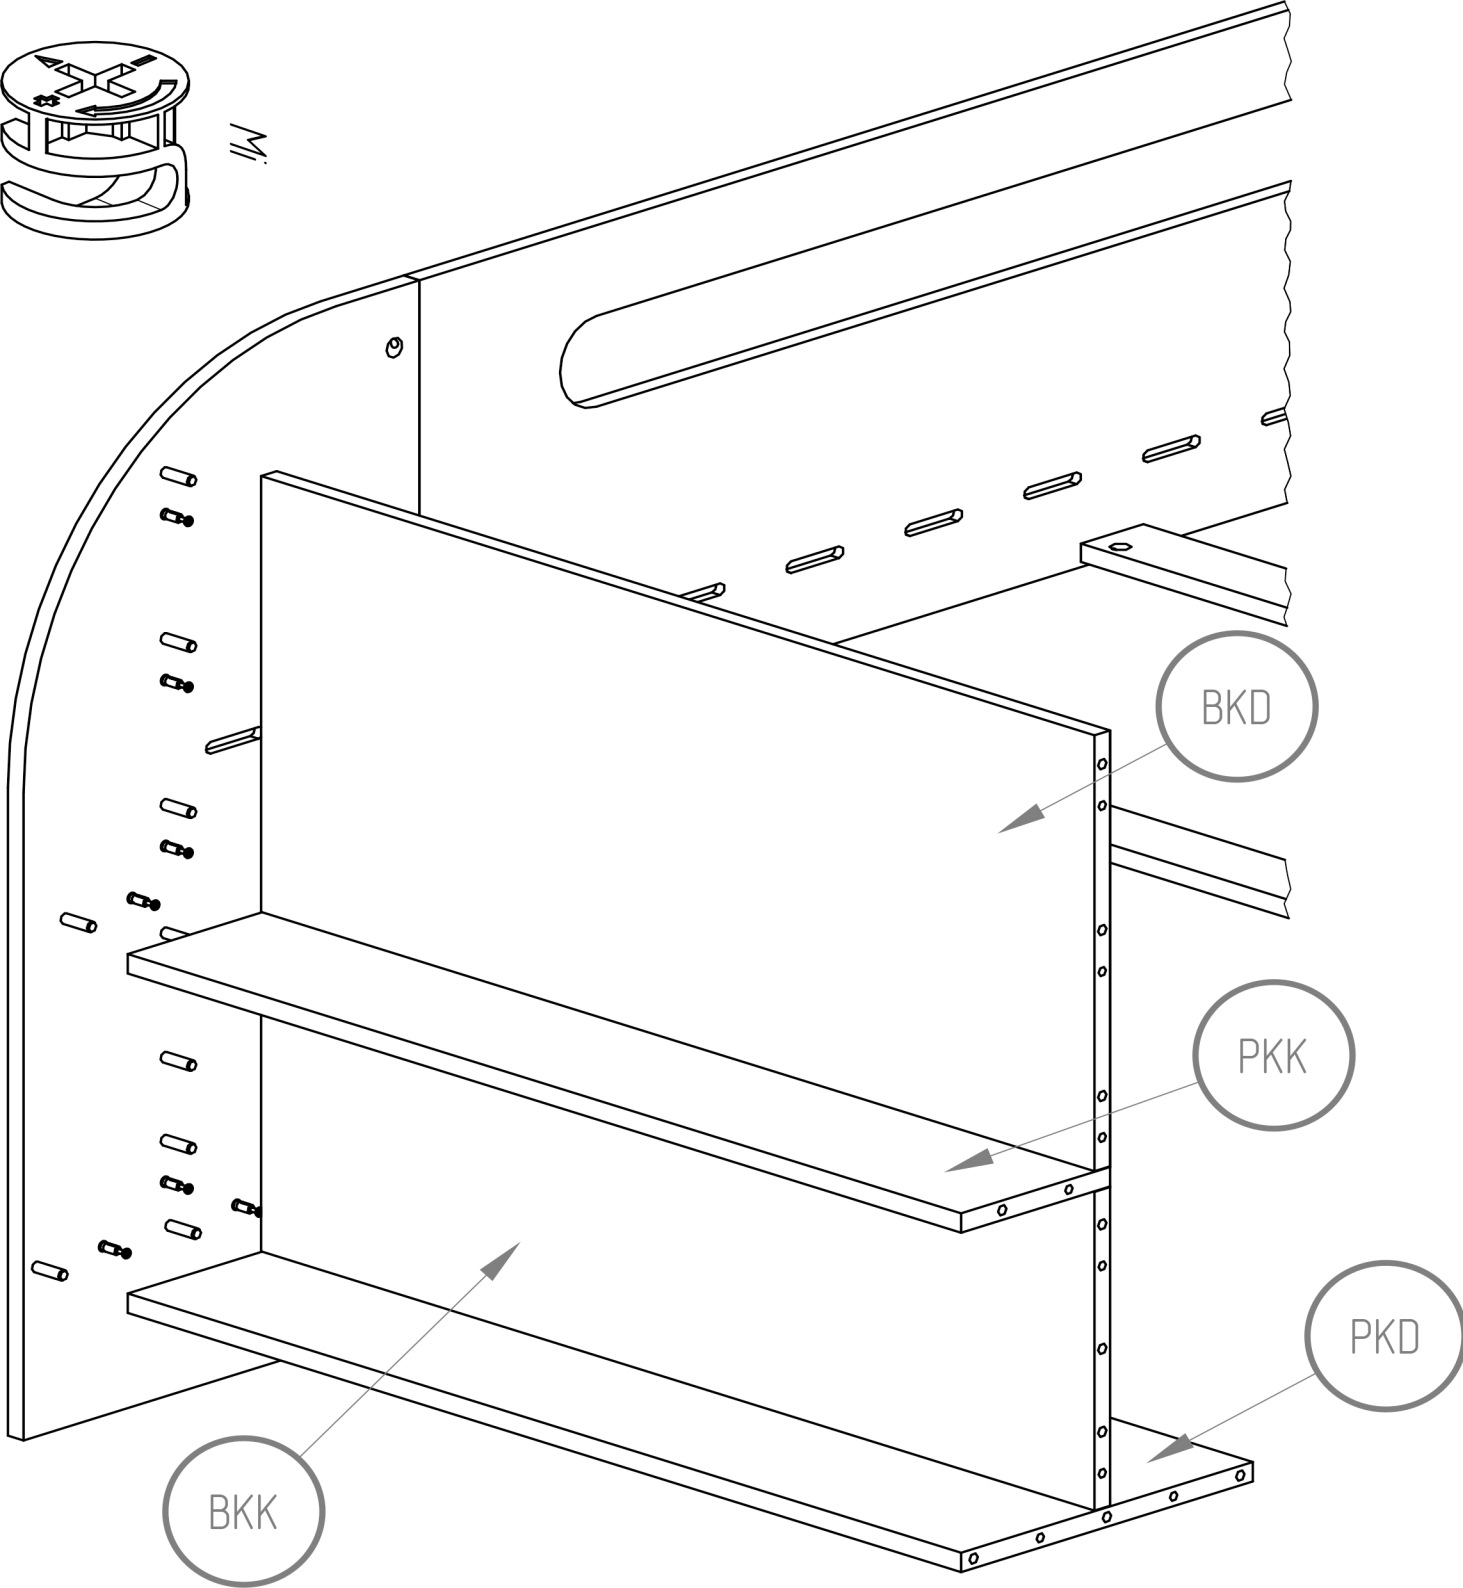



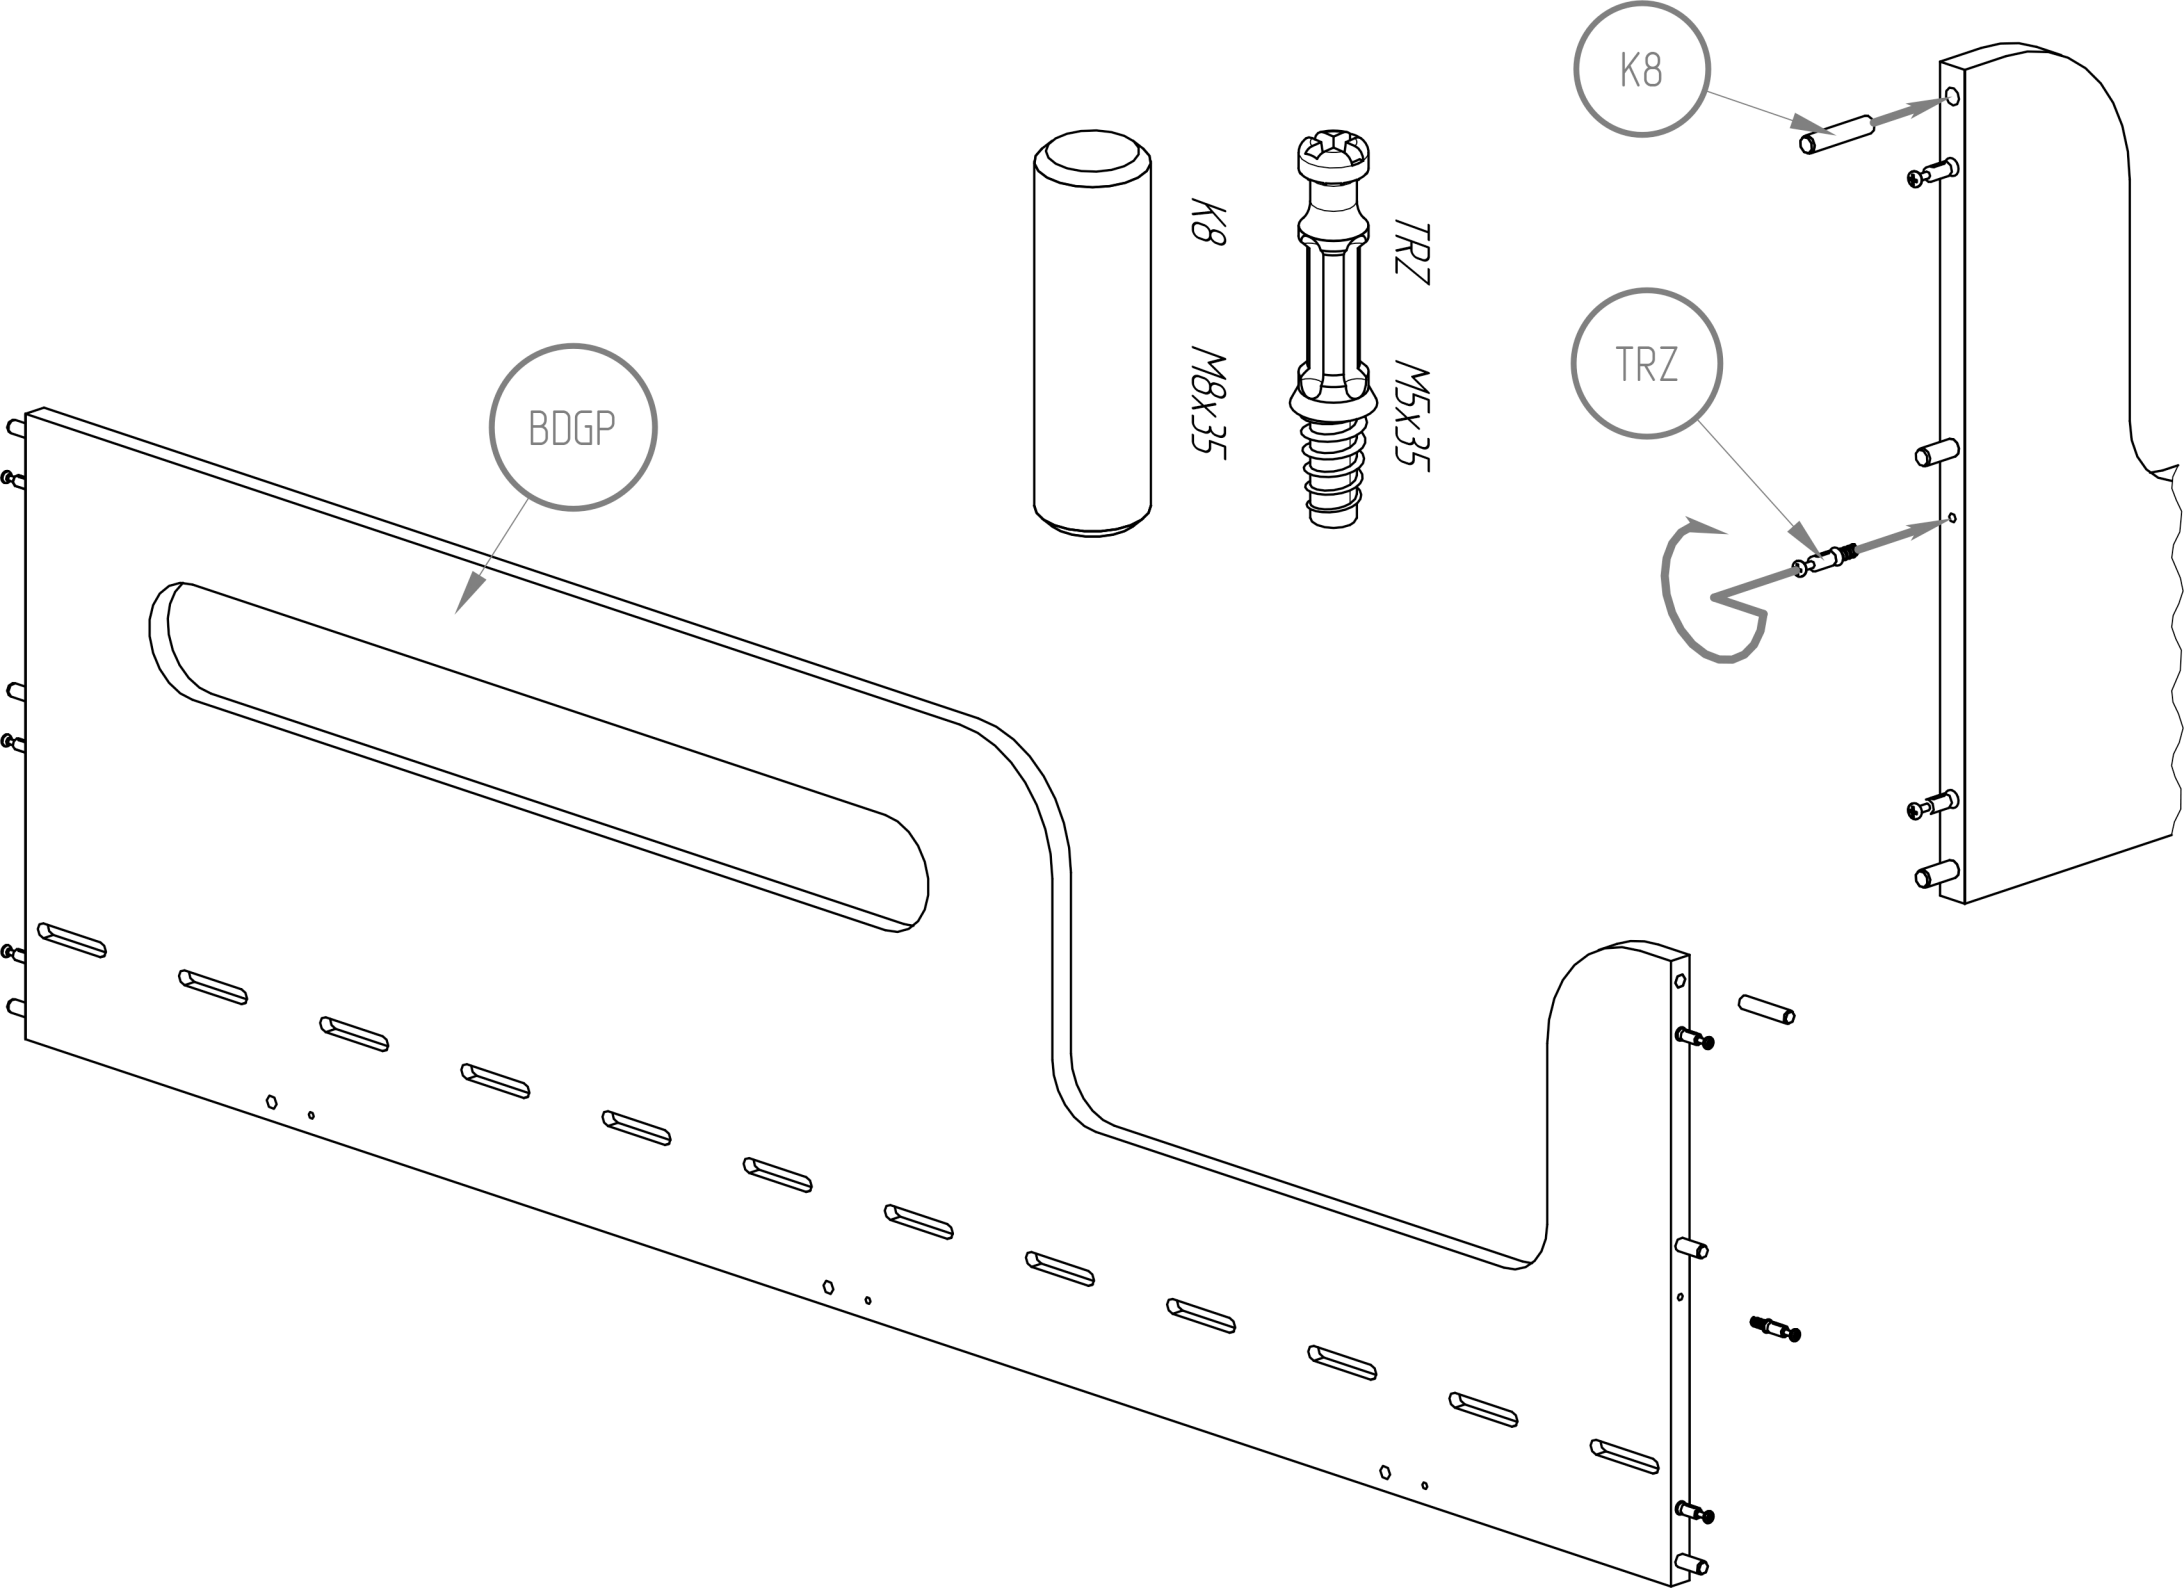


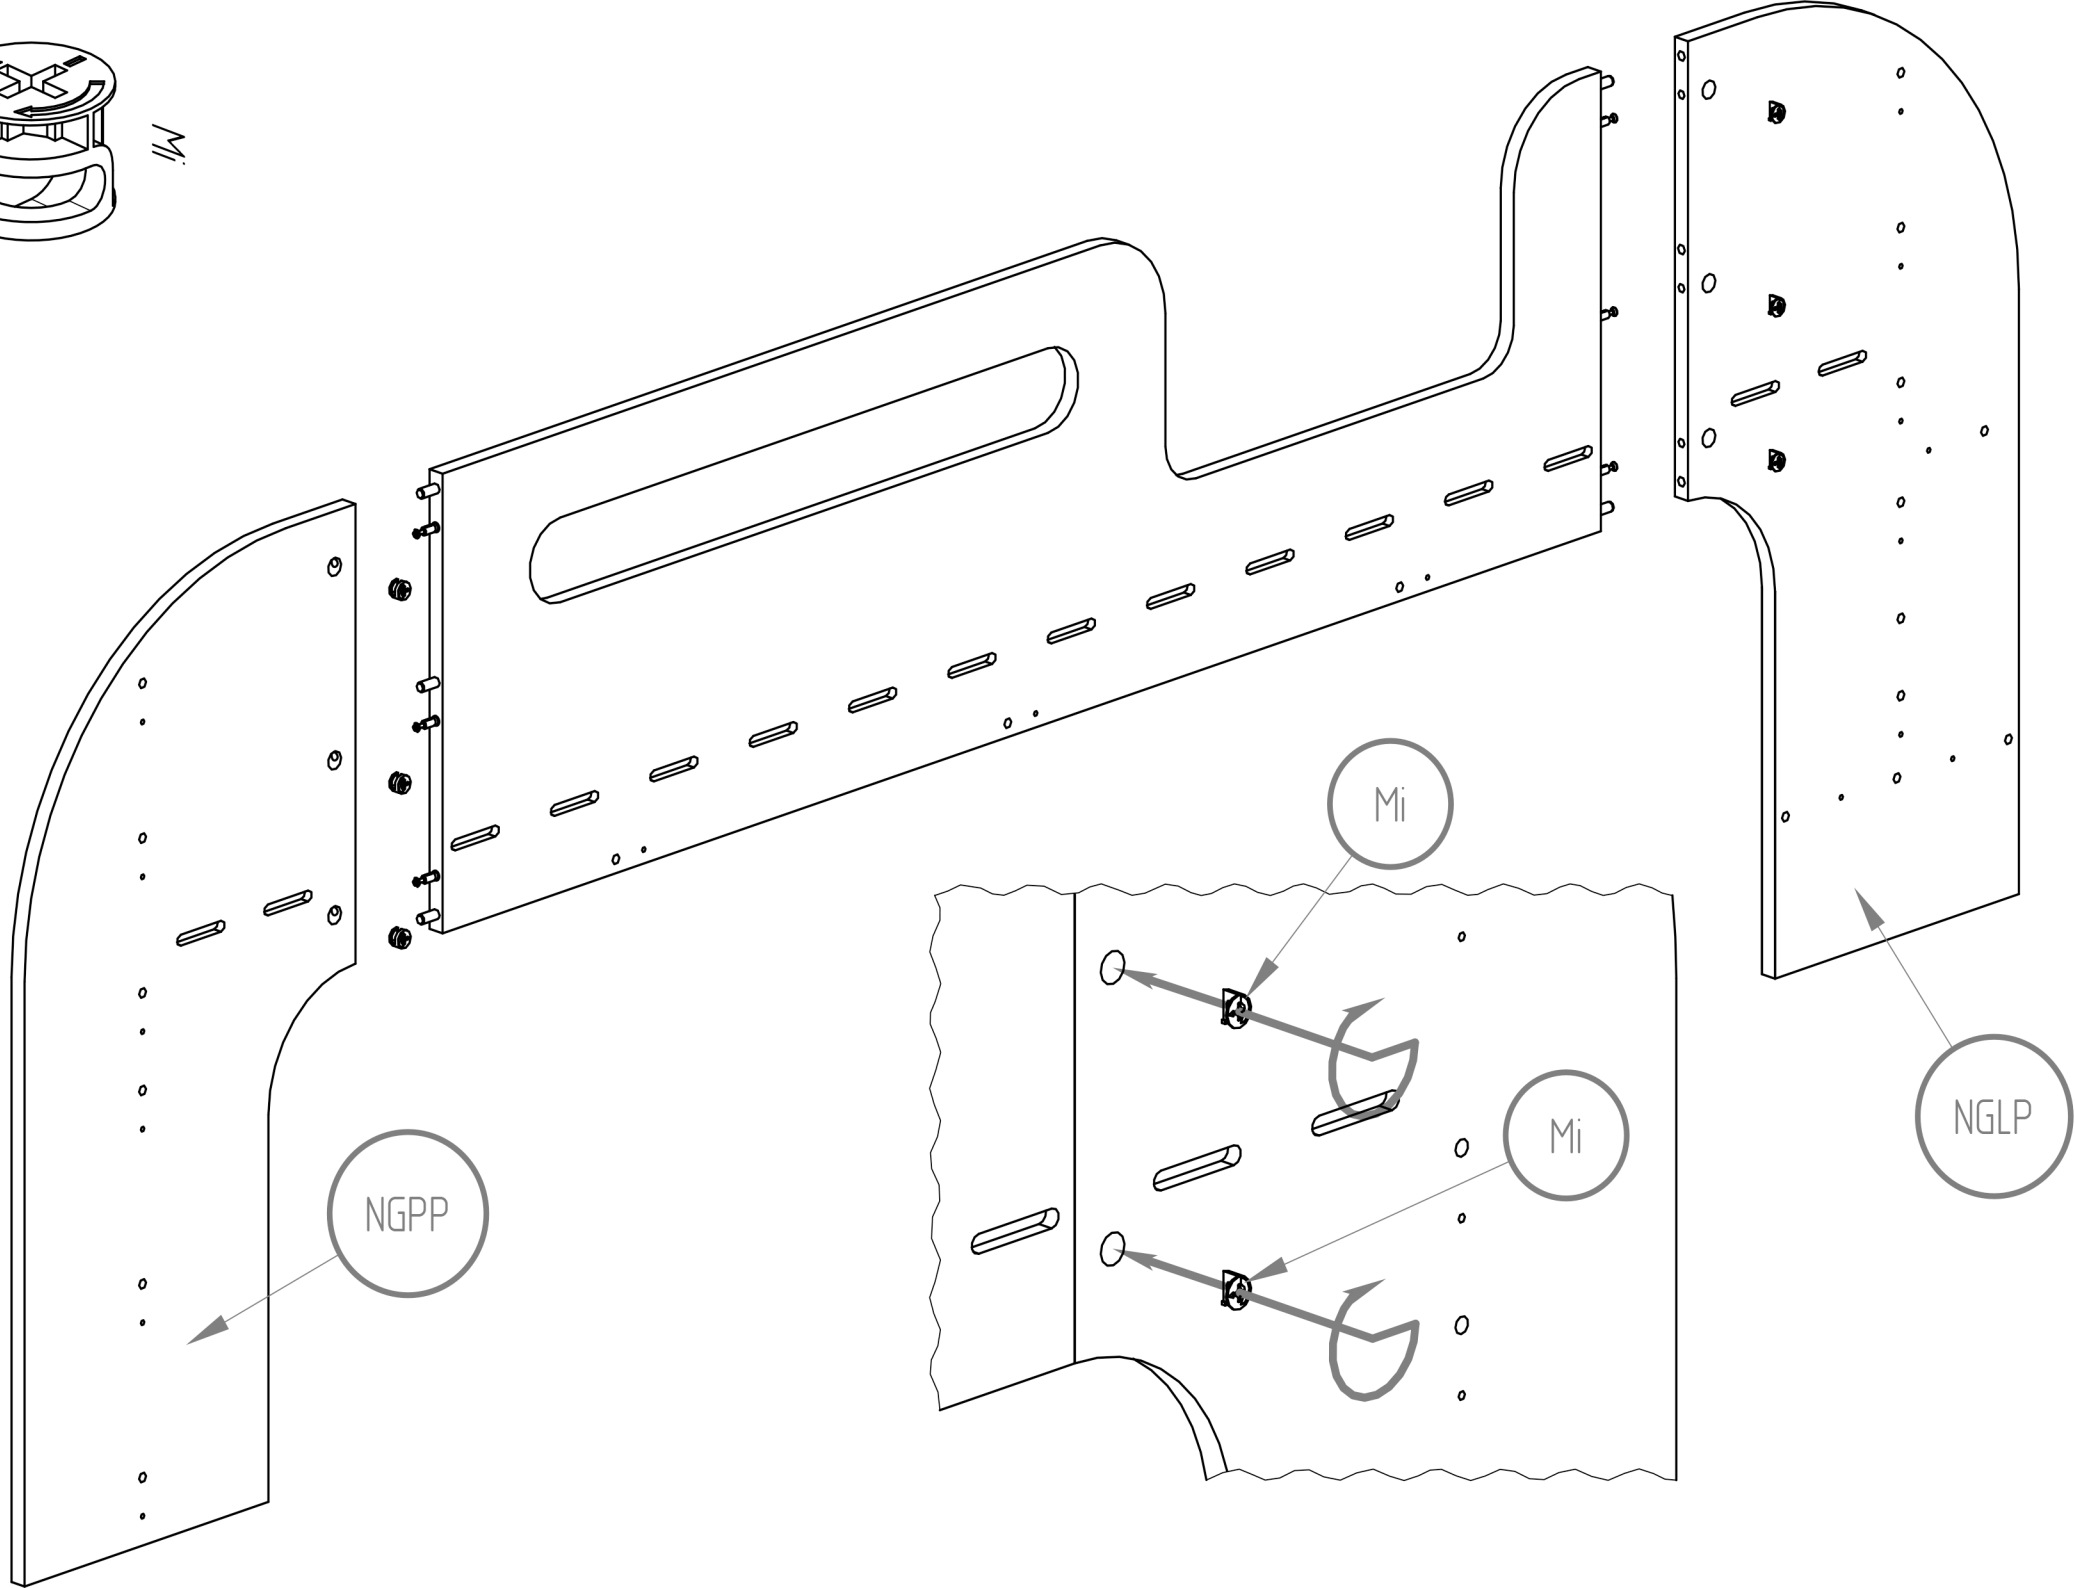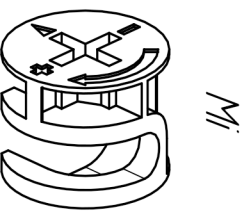

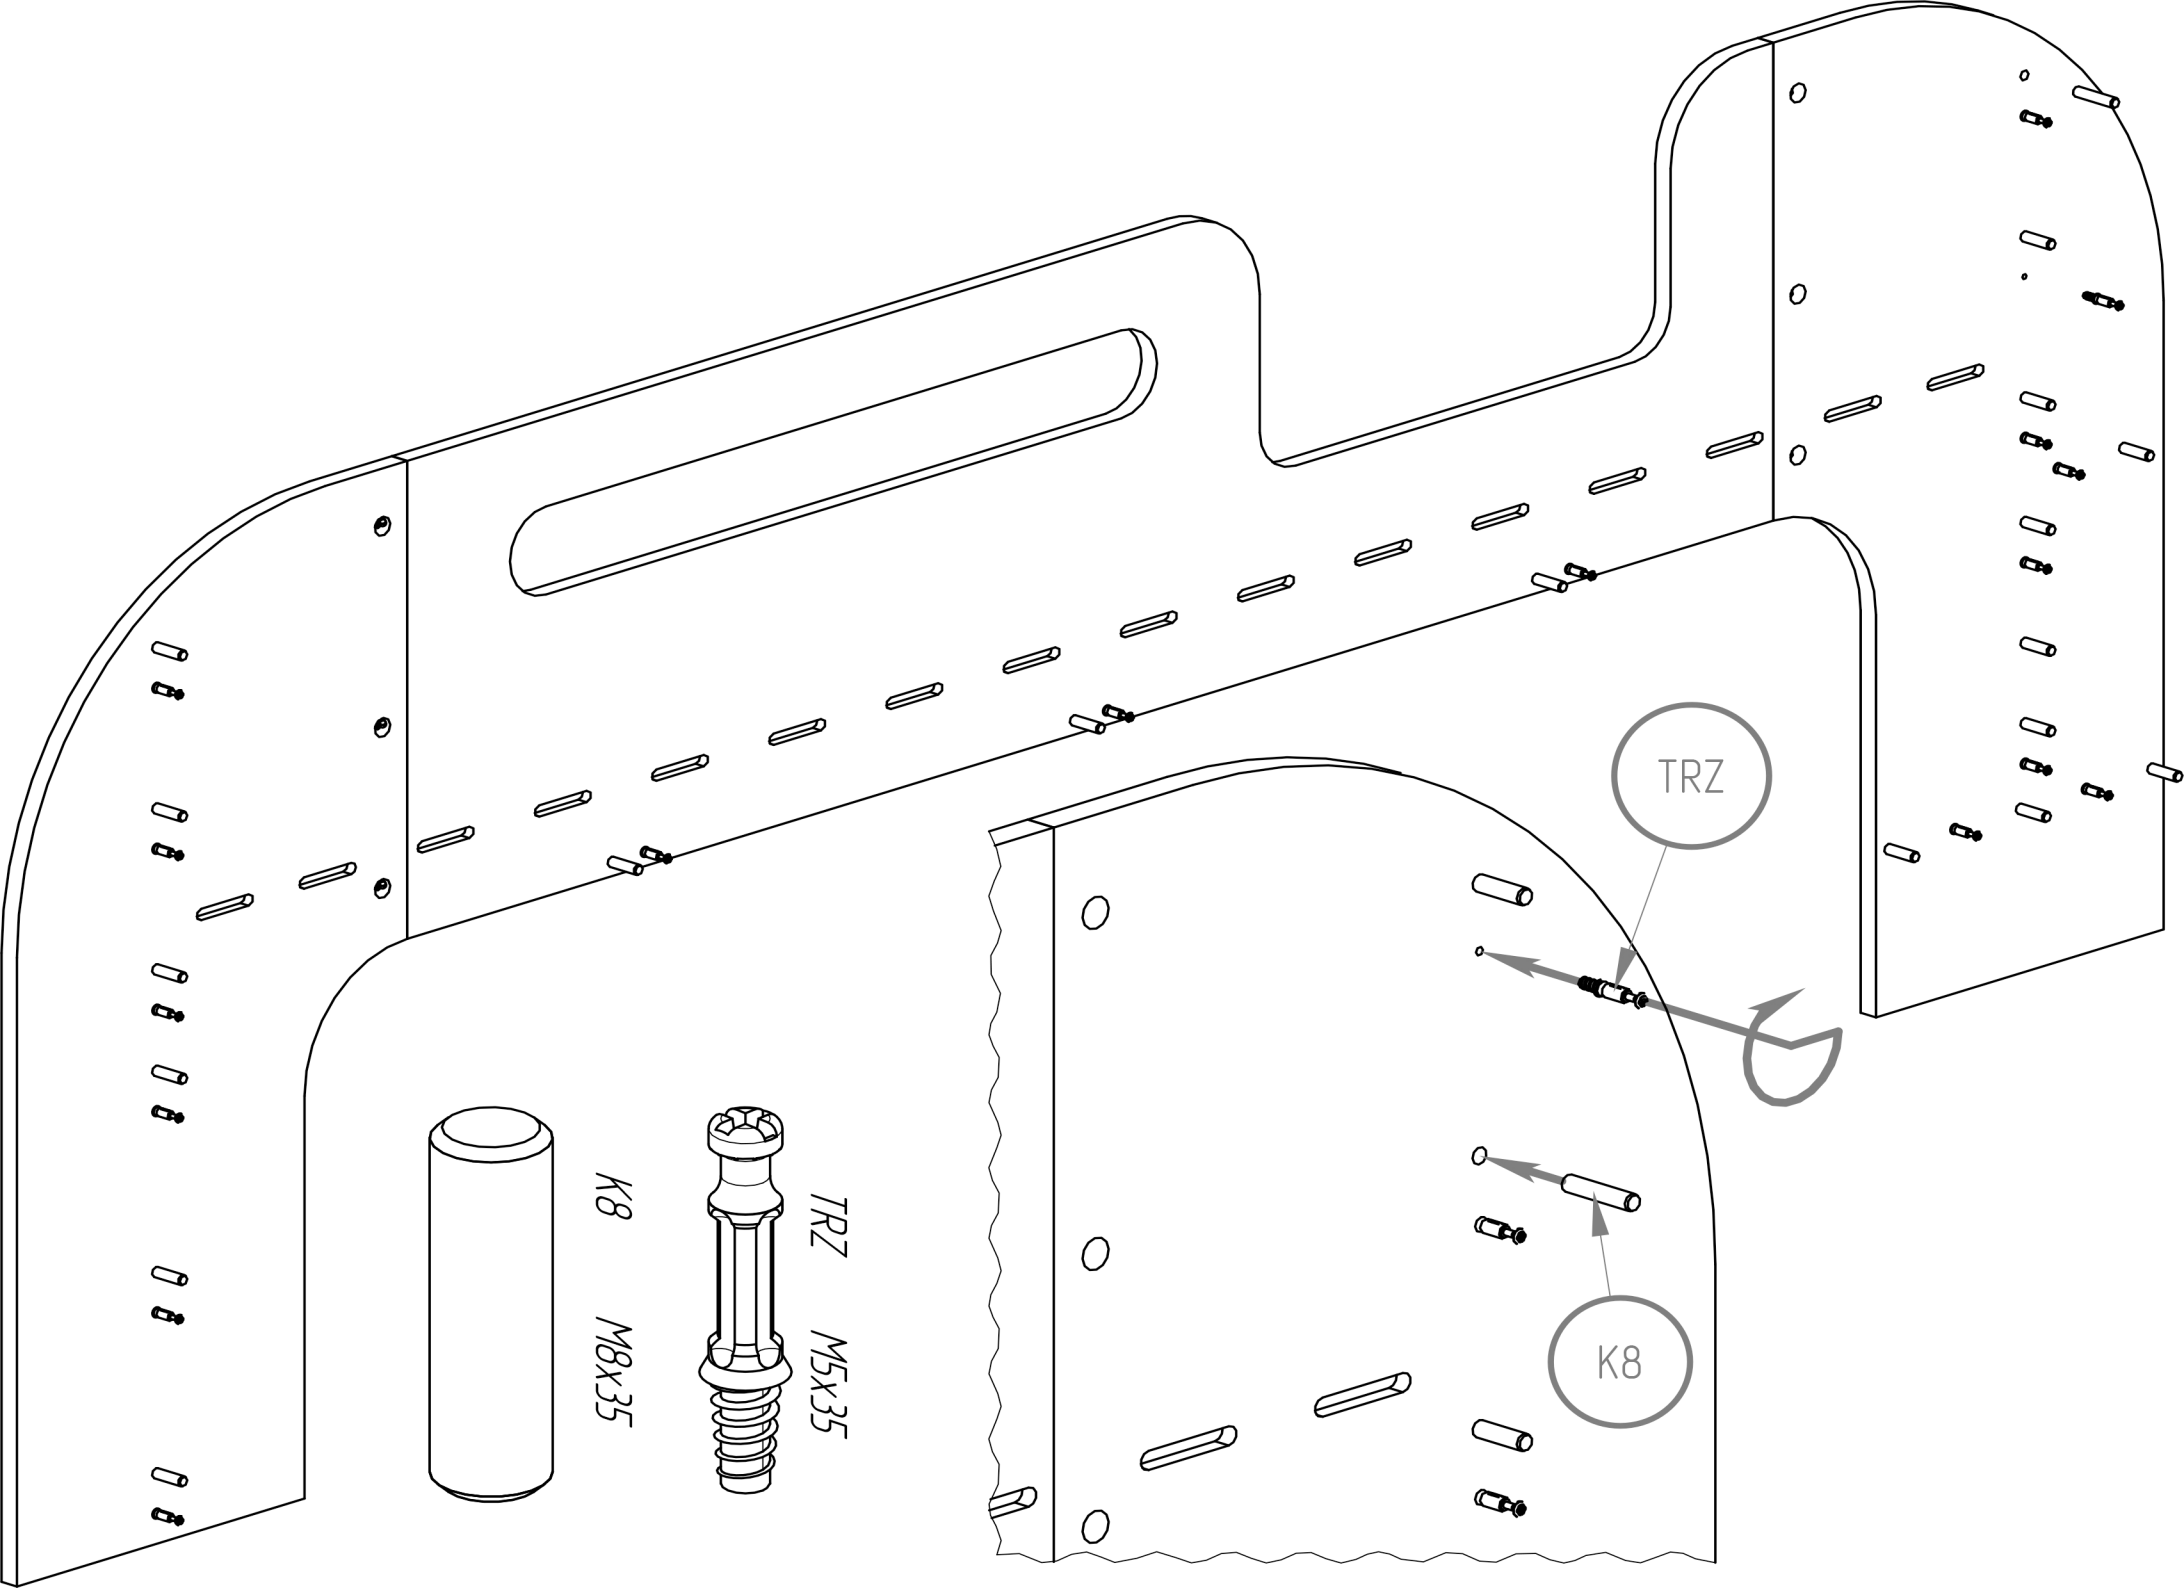

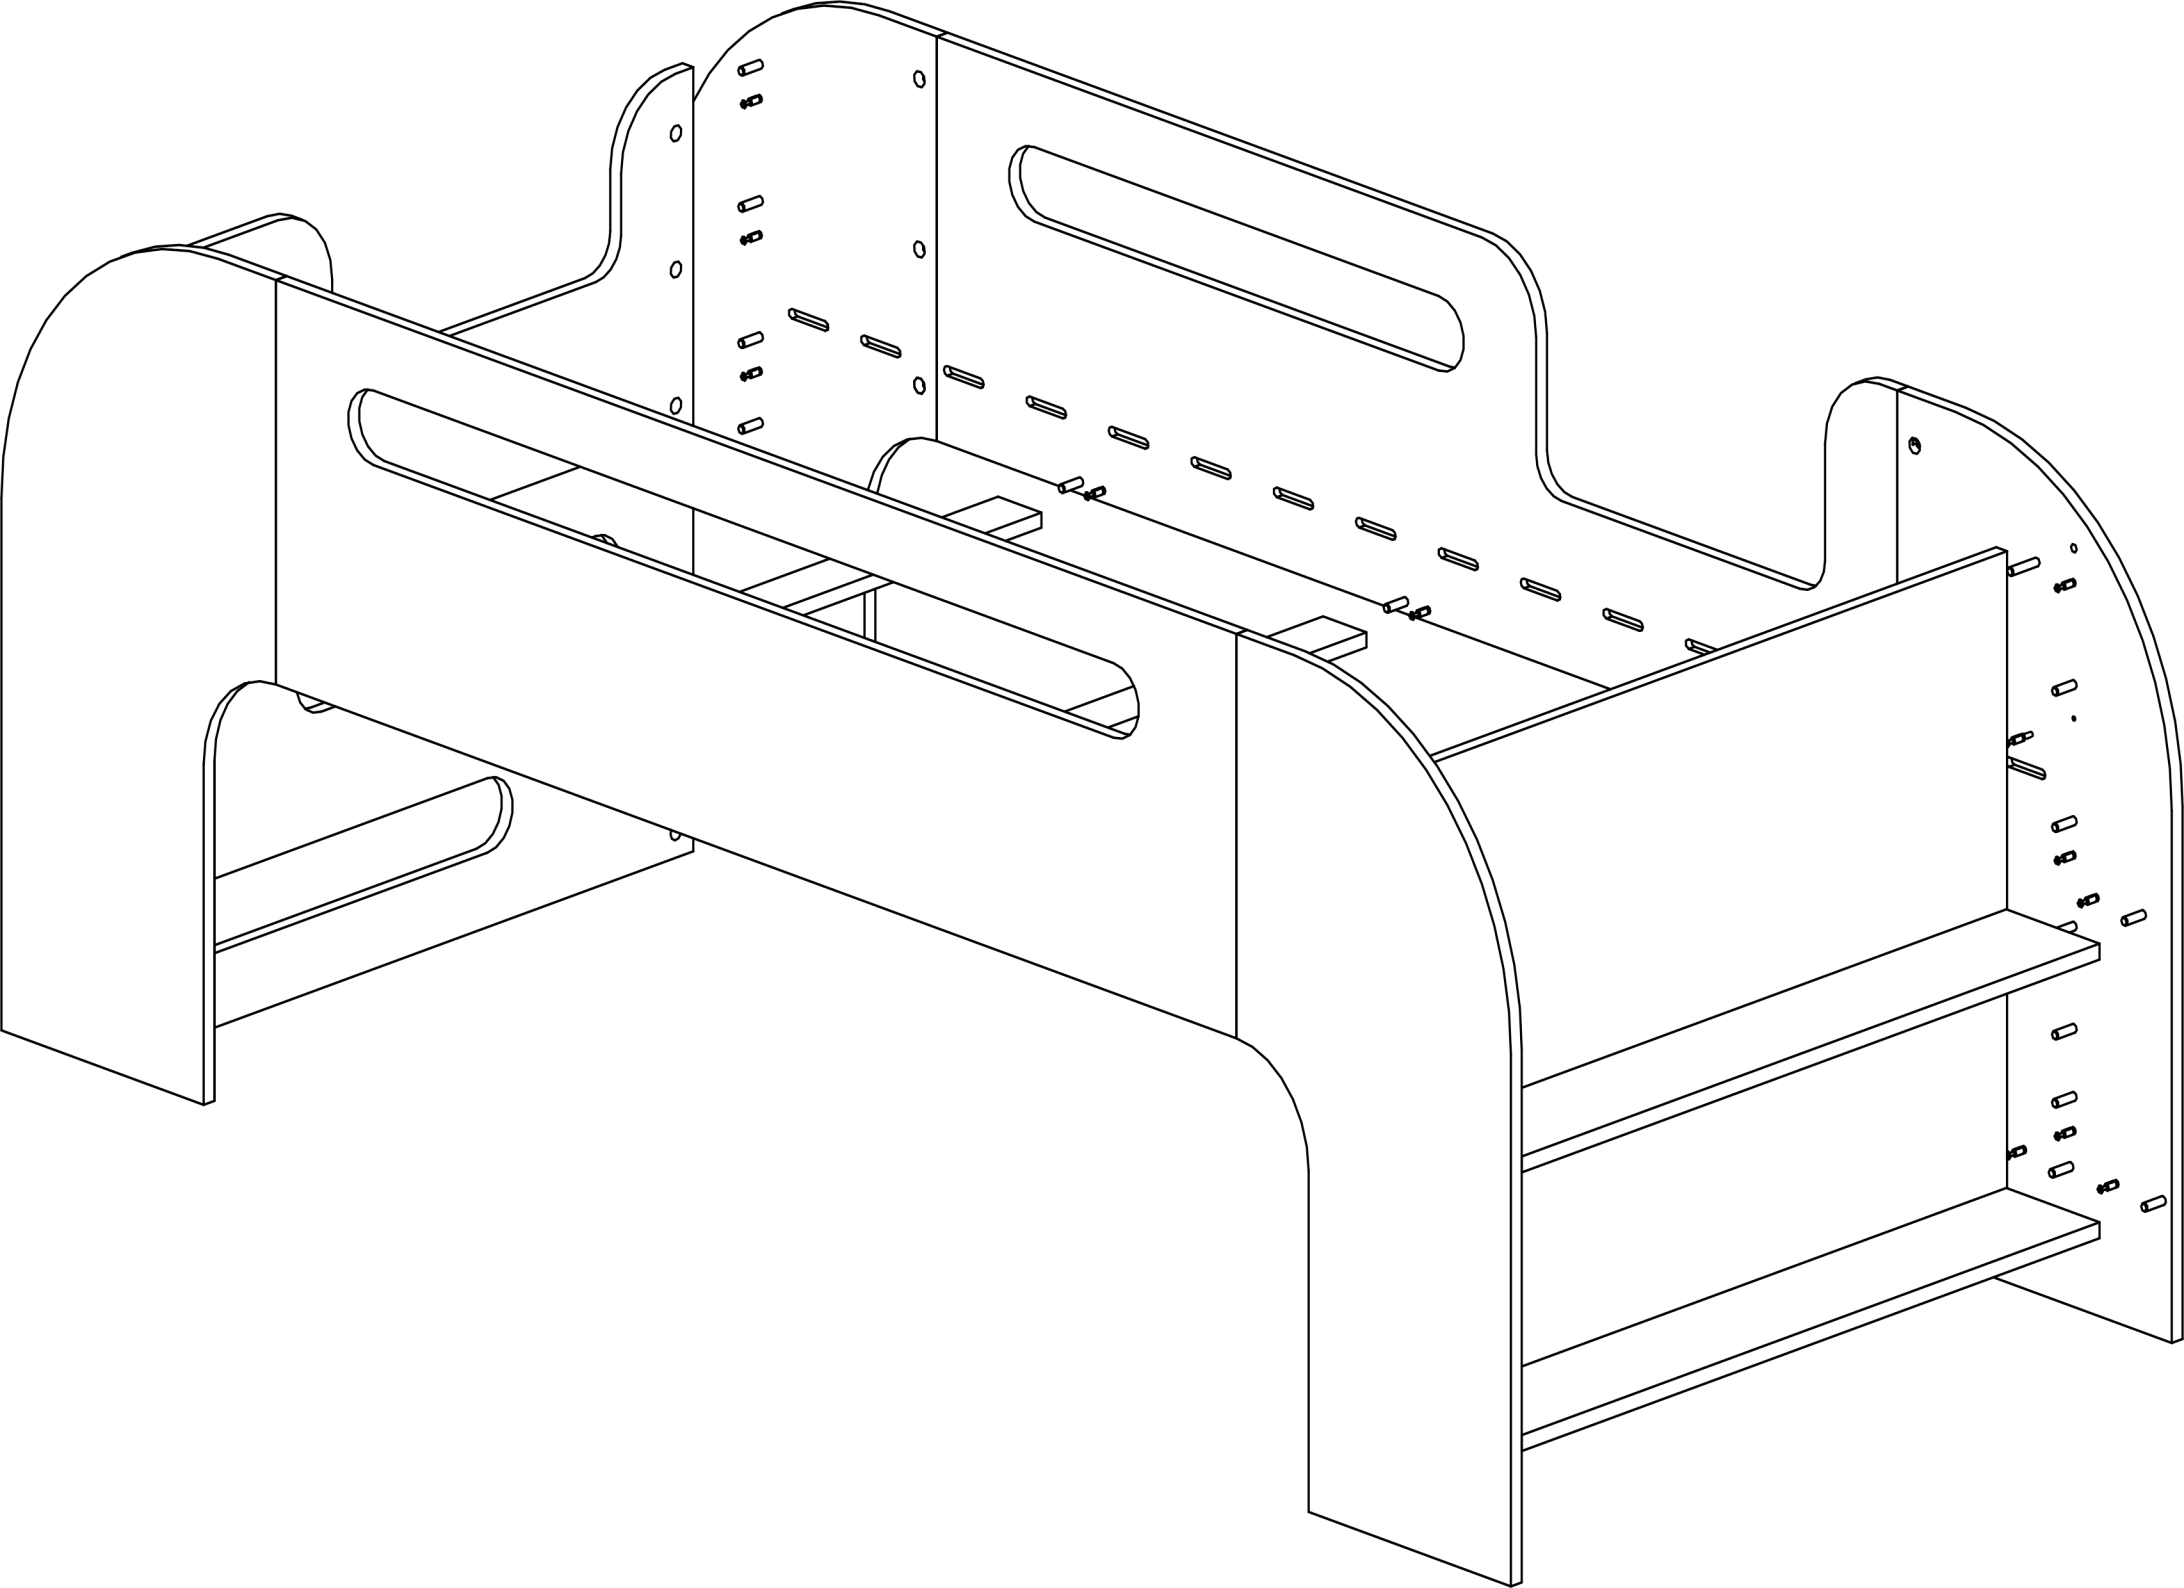

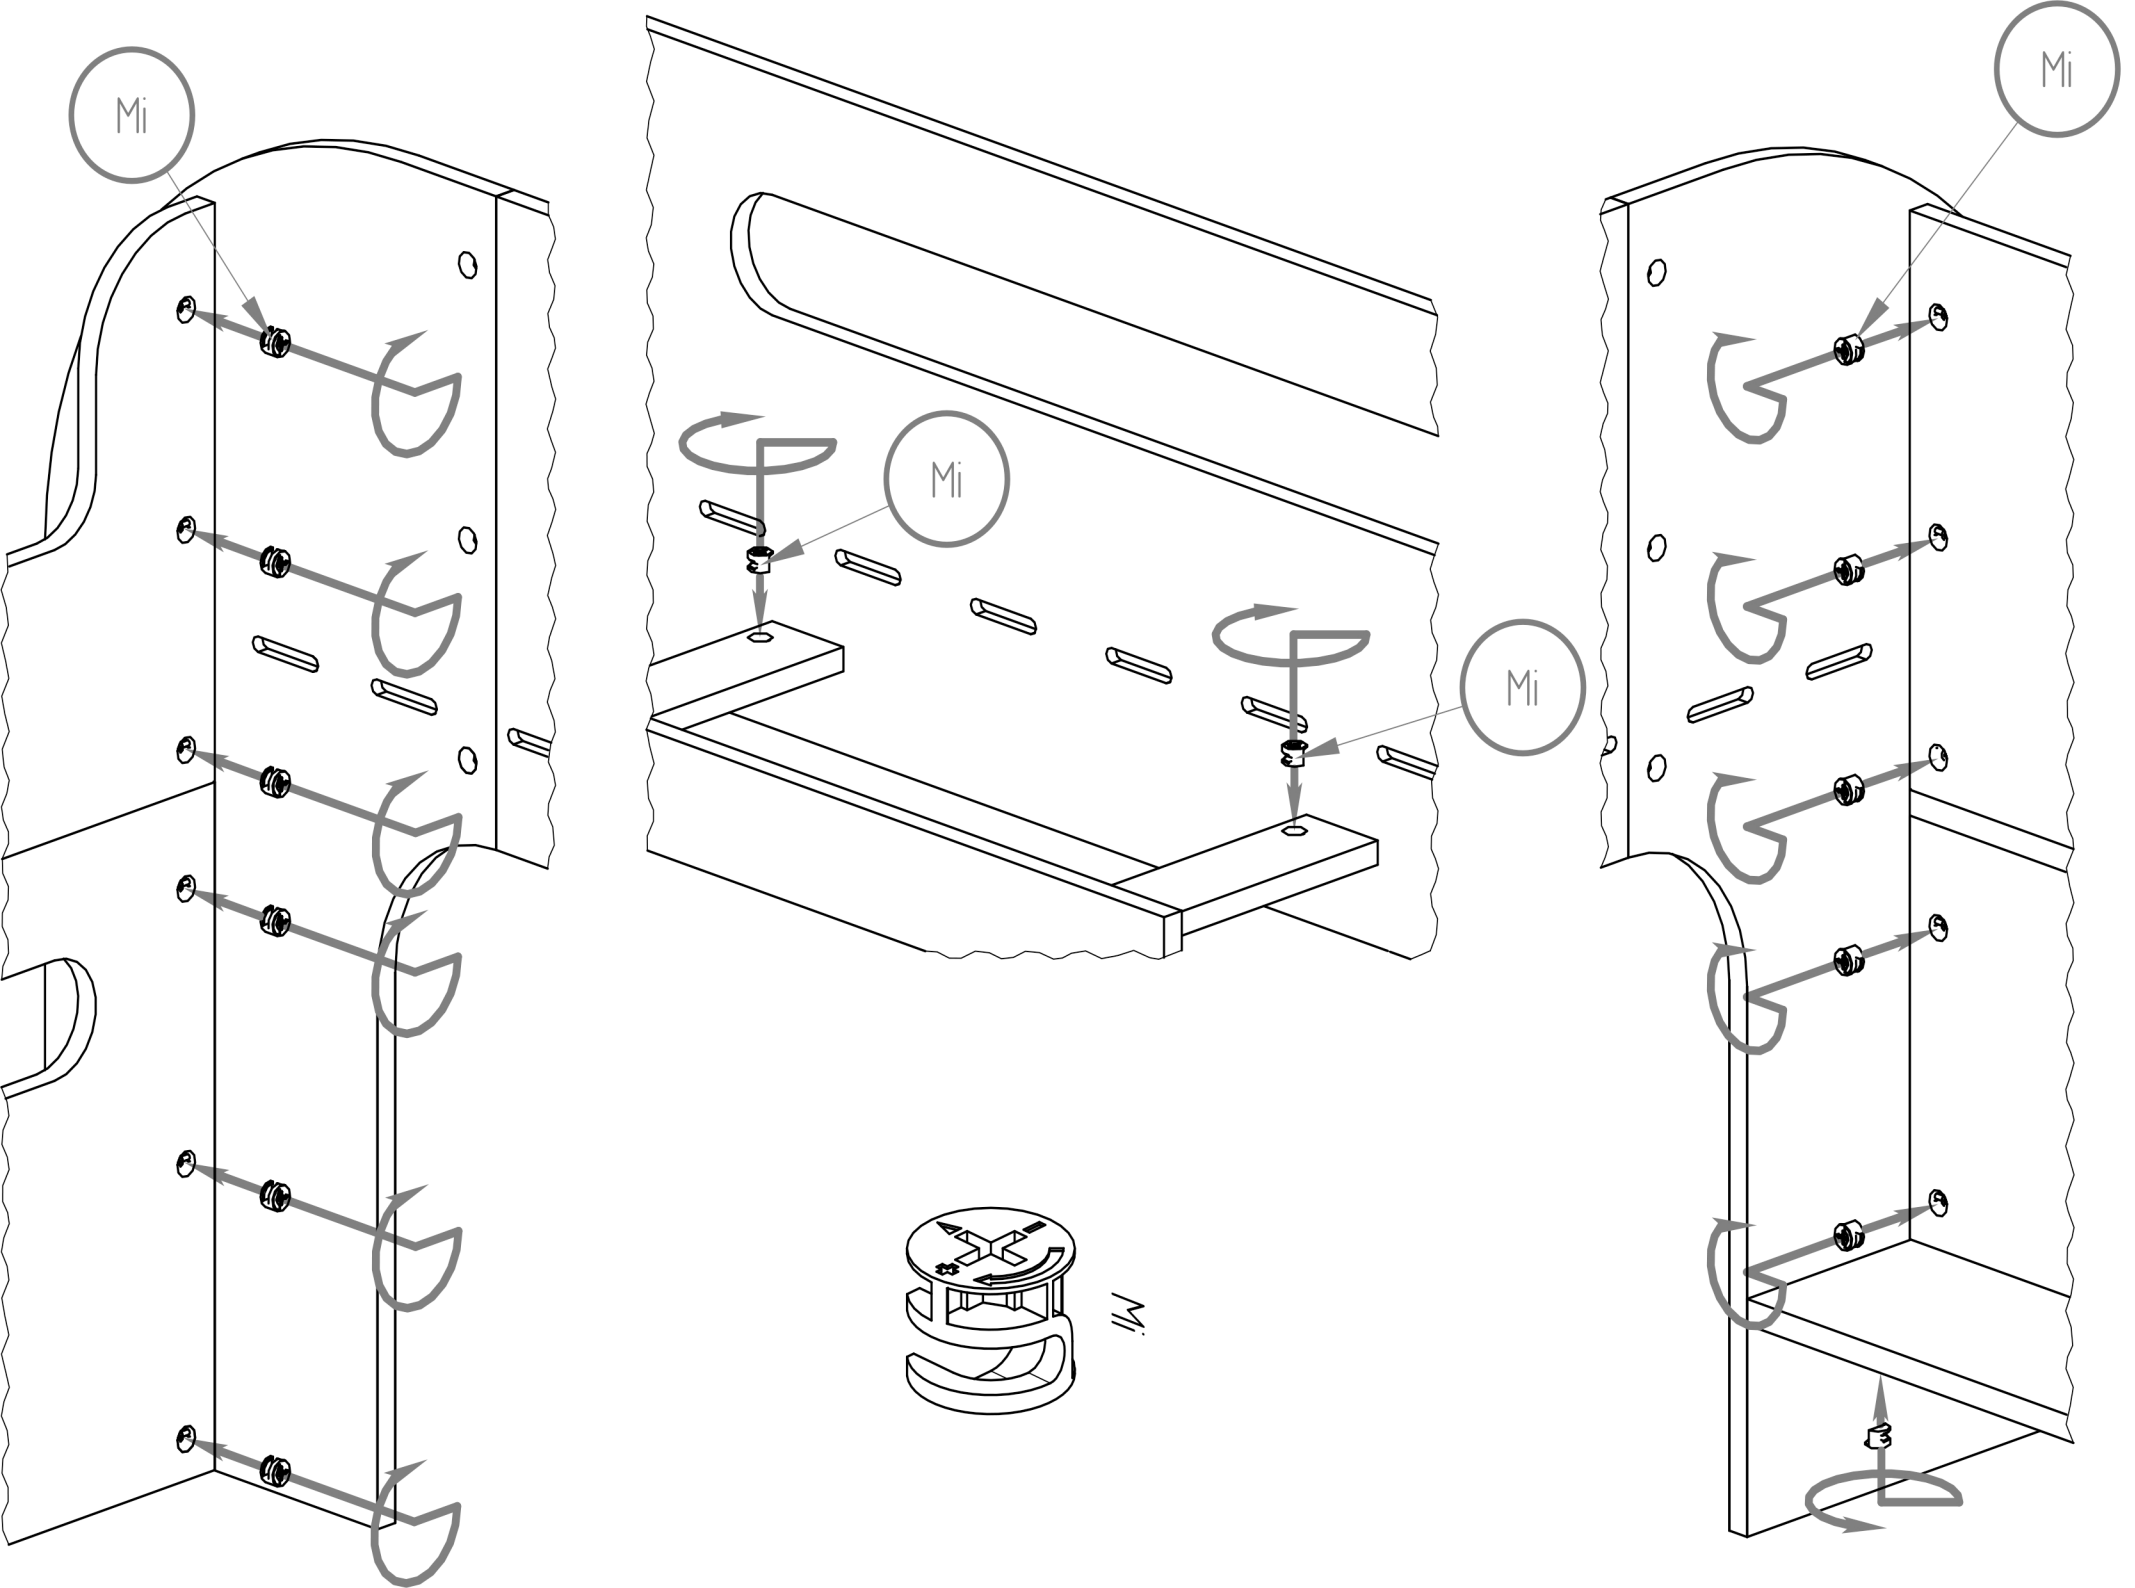

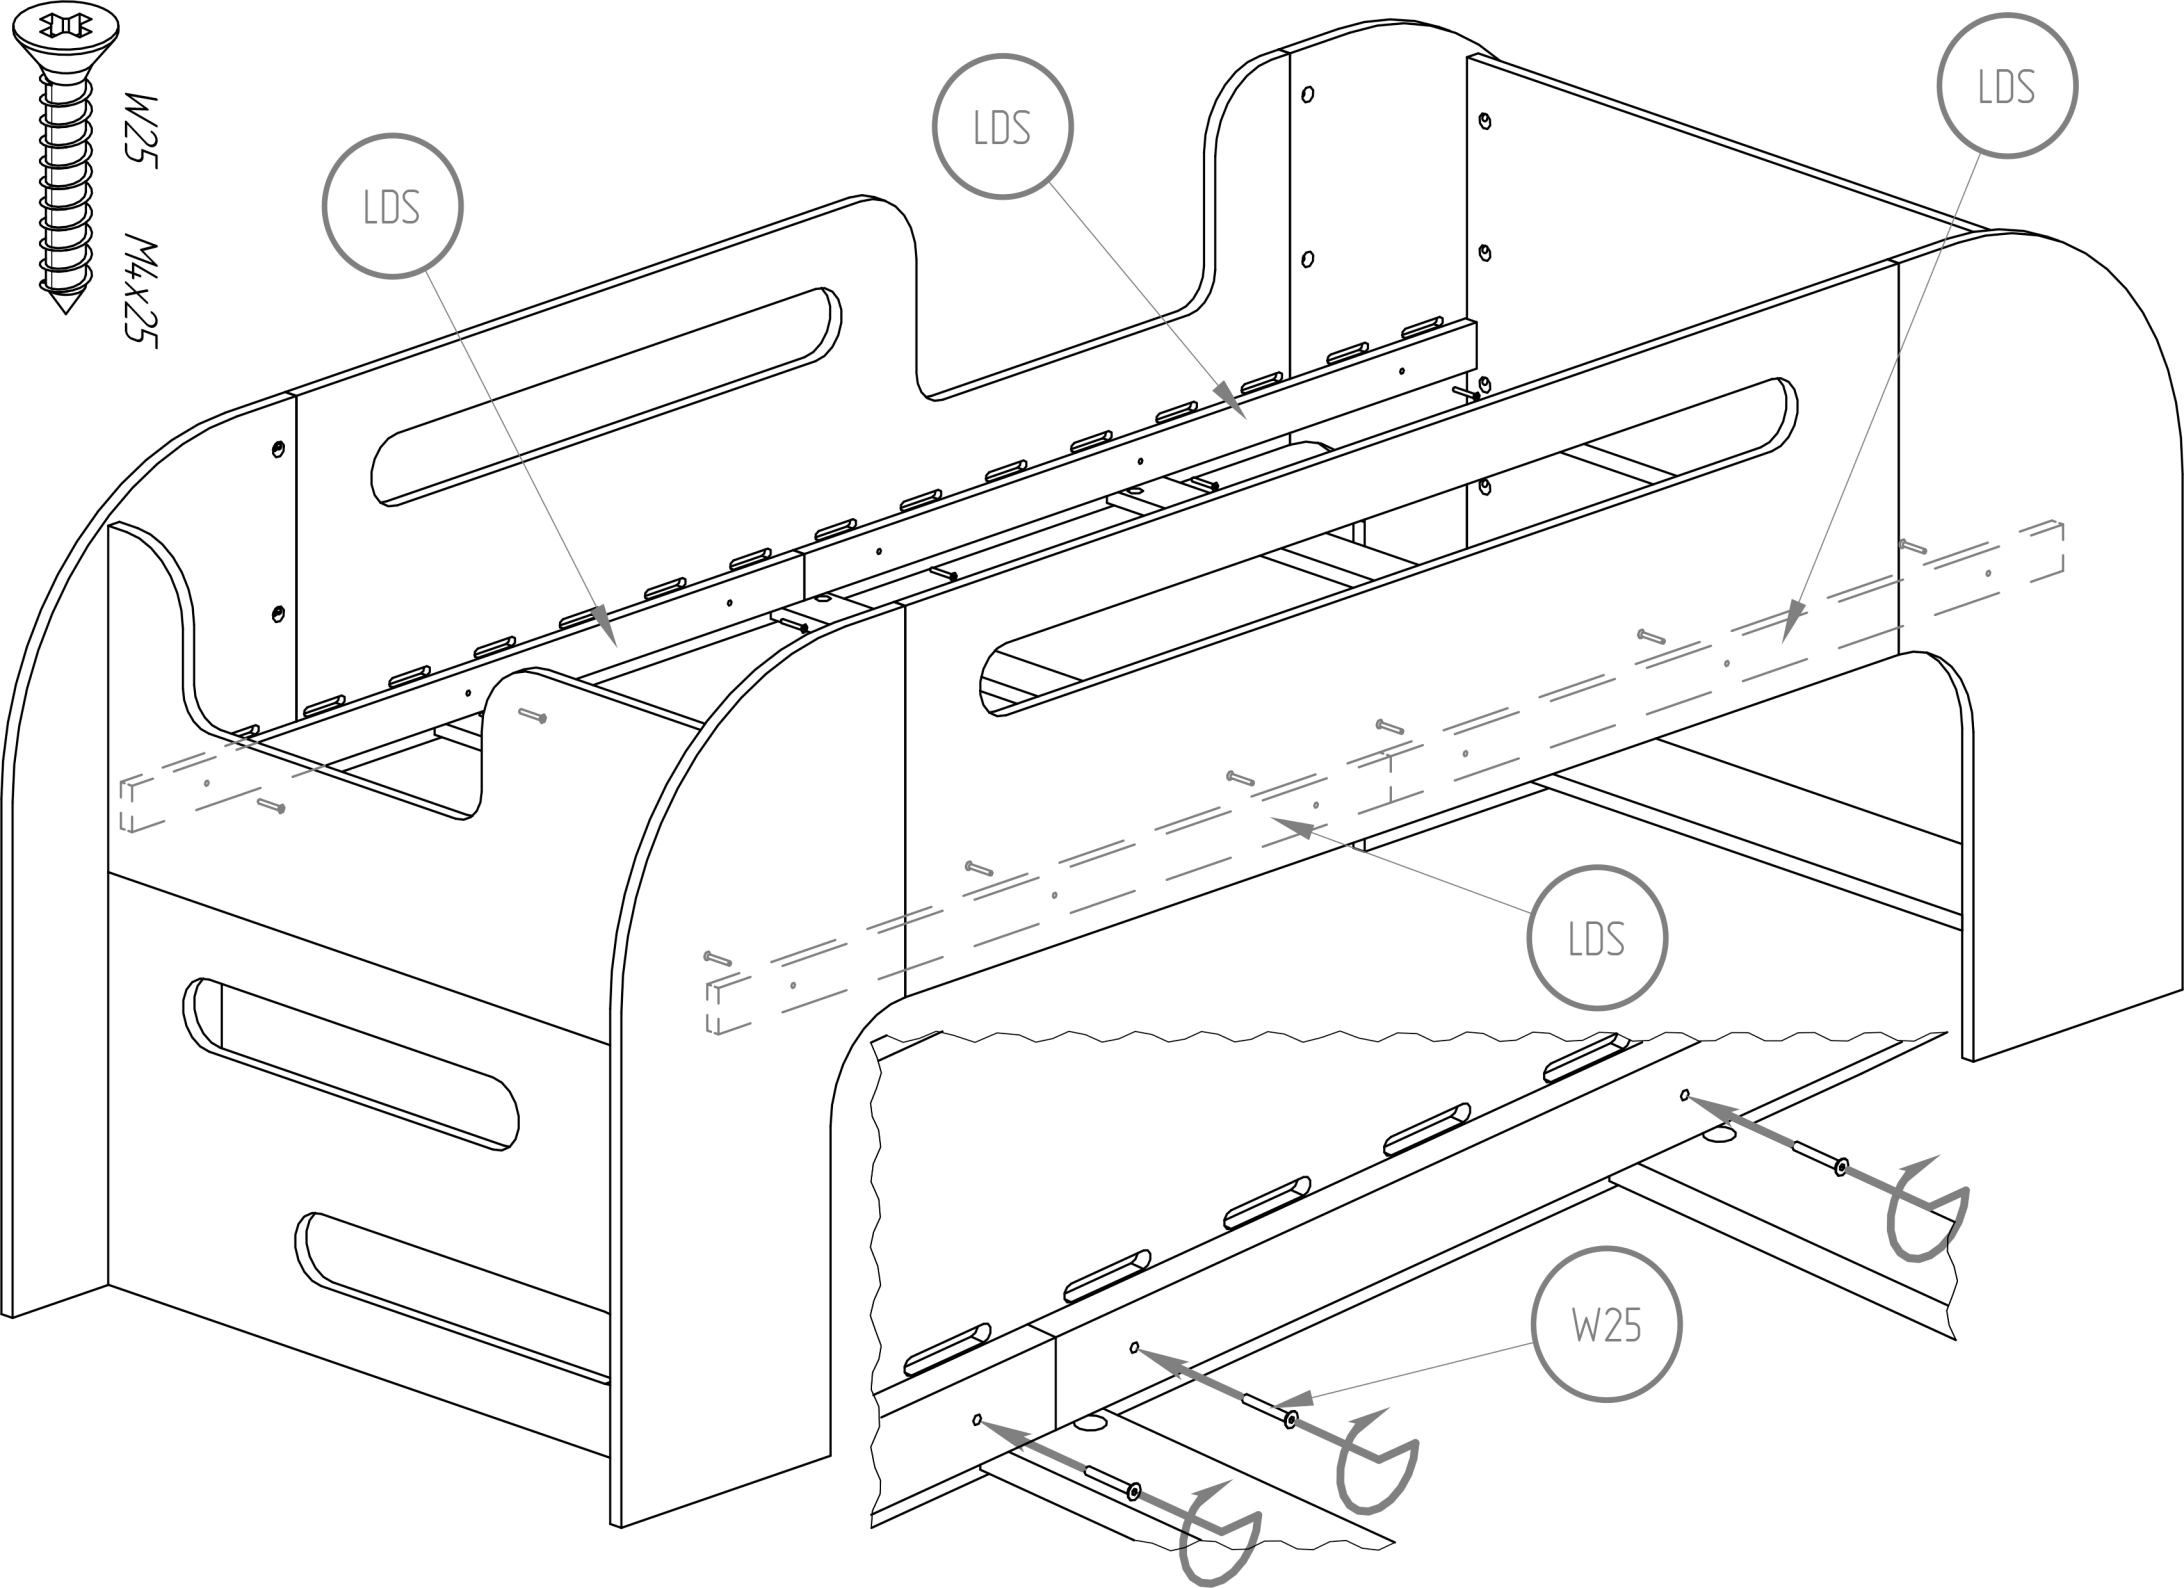

W25  
M4x25

LDS

LDS

LDS


LDS


W25




## Důležité!

Nainstalujte plastové krytky před montáží ST pružinové lamely k rámu postele.

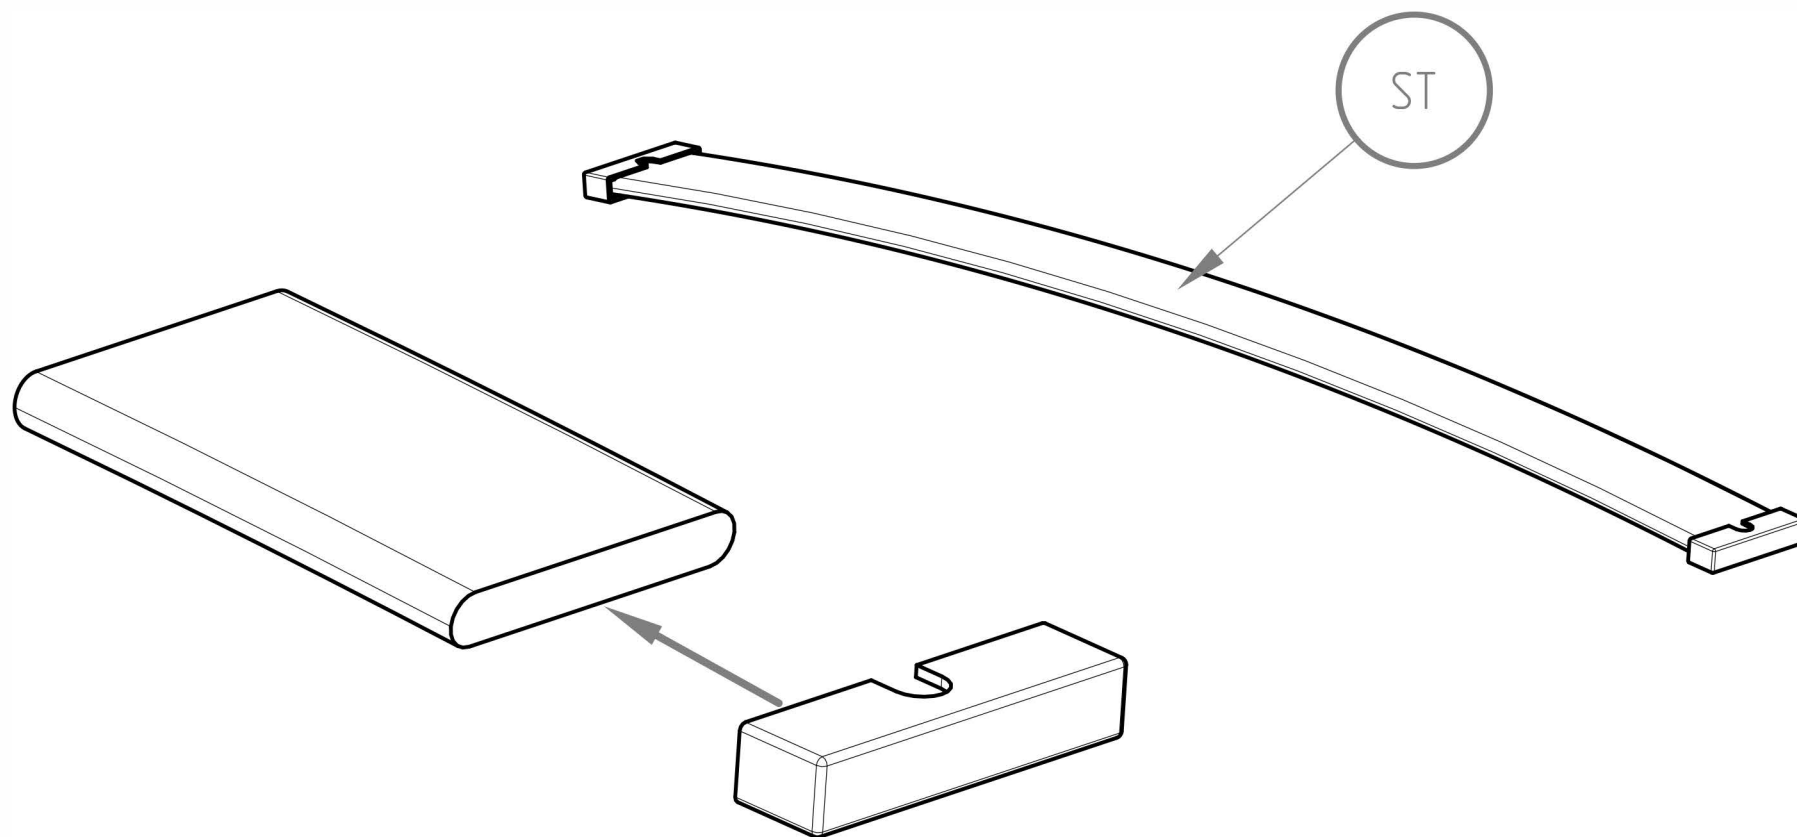

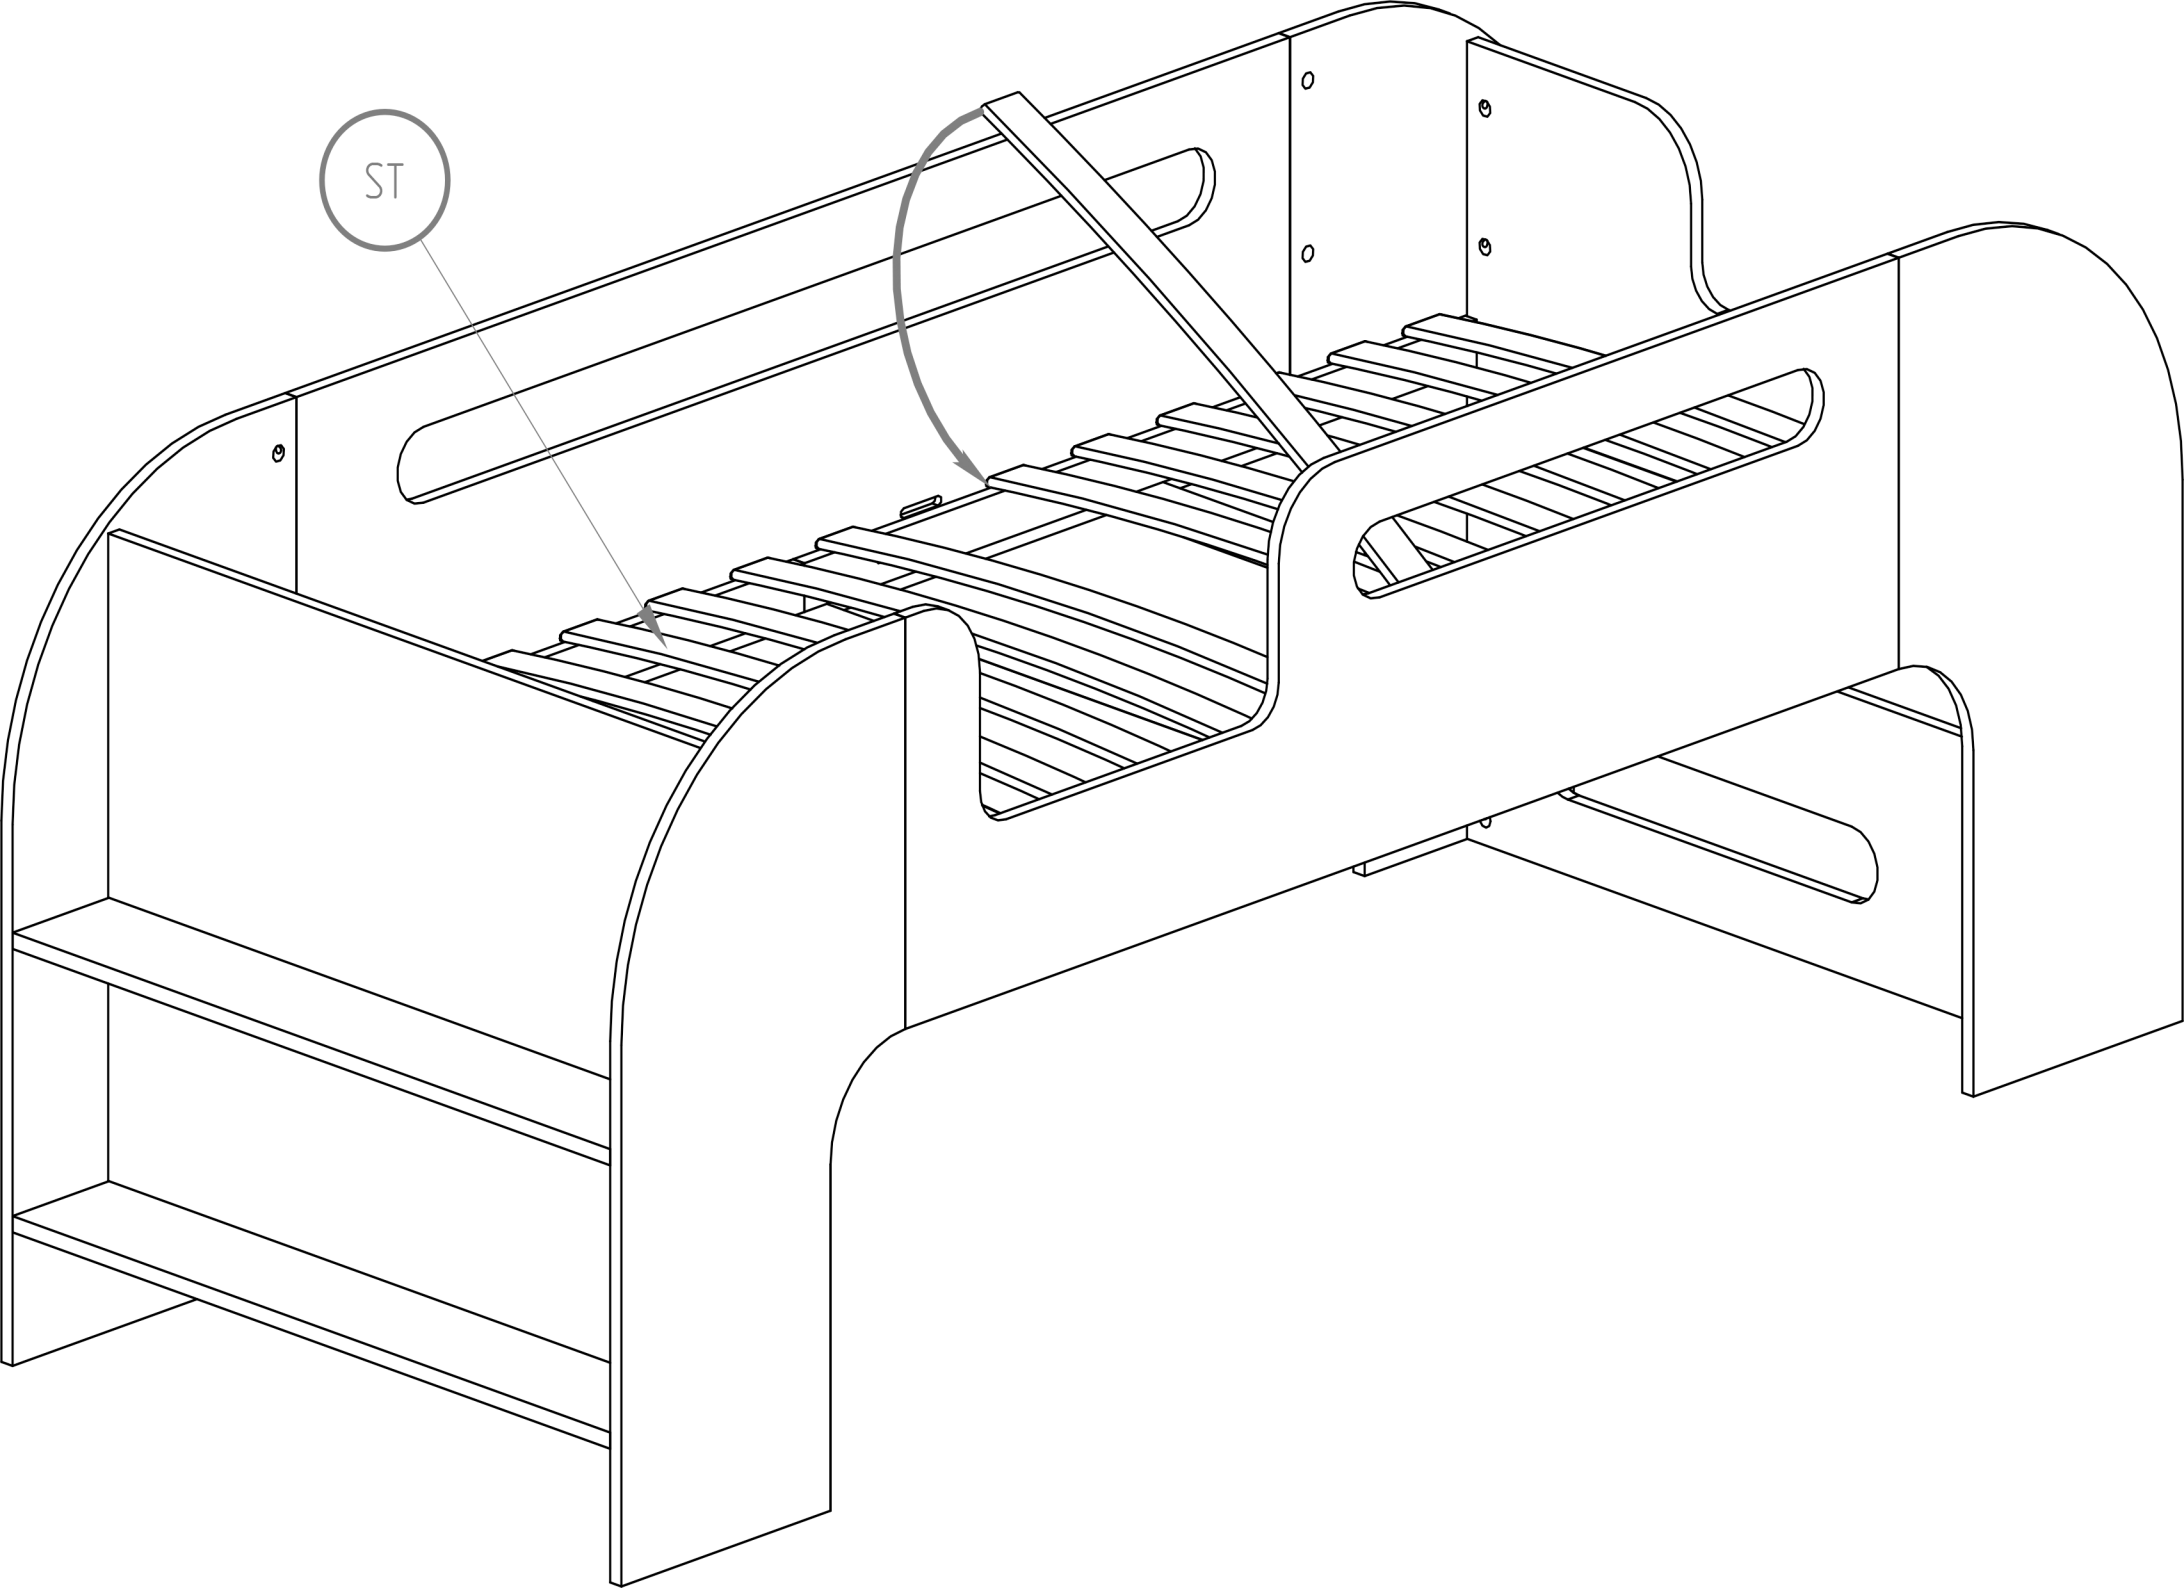


ST

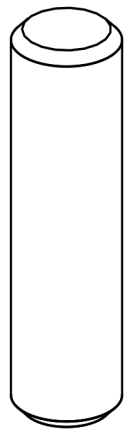



K8


M8x35



TRZ


M5x35

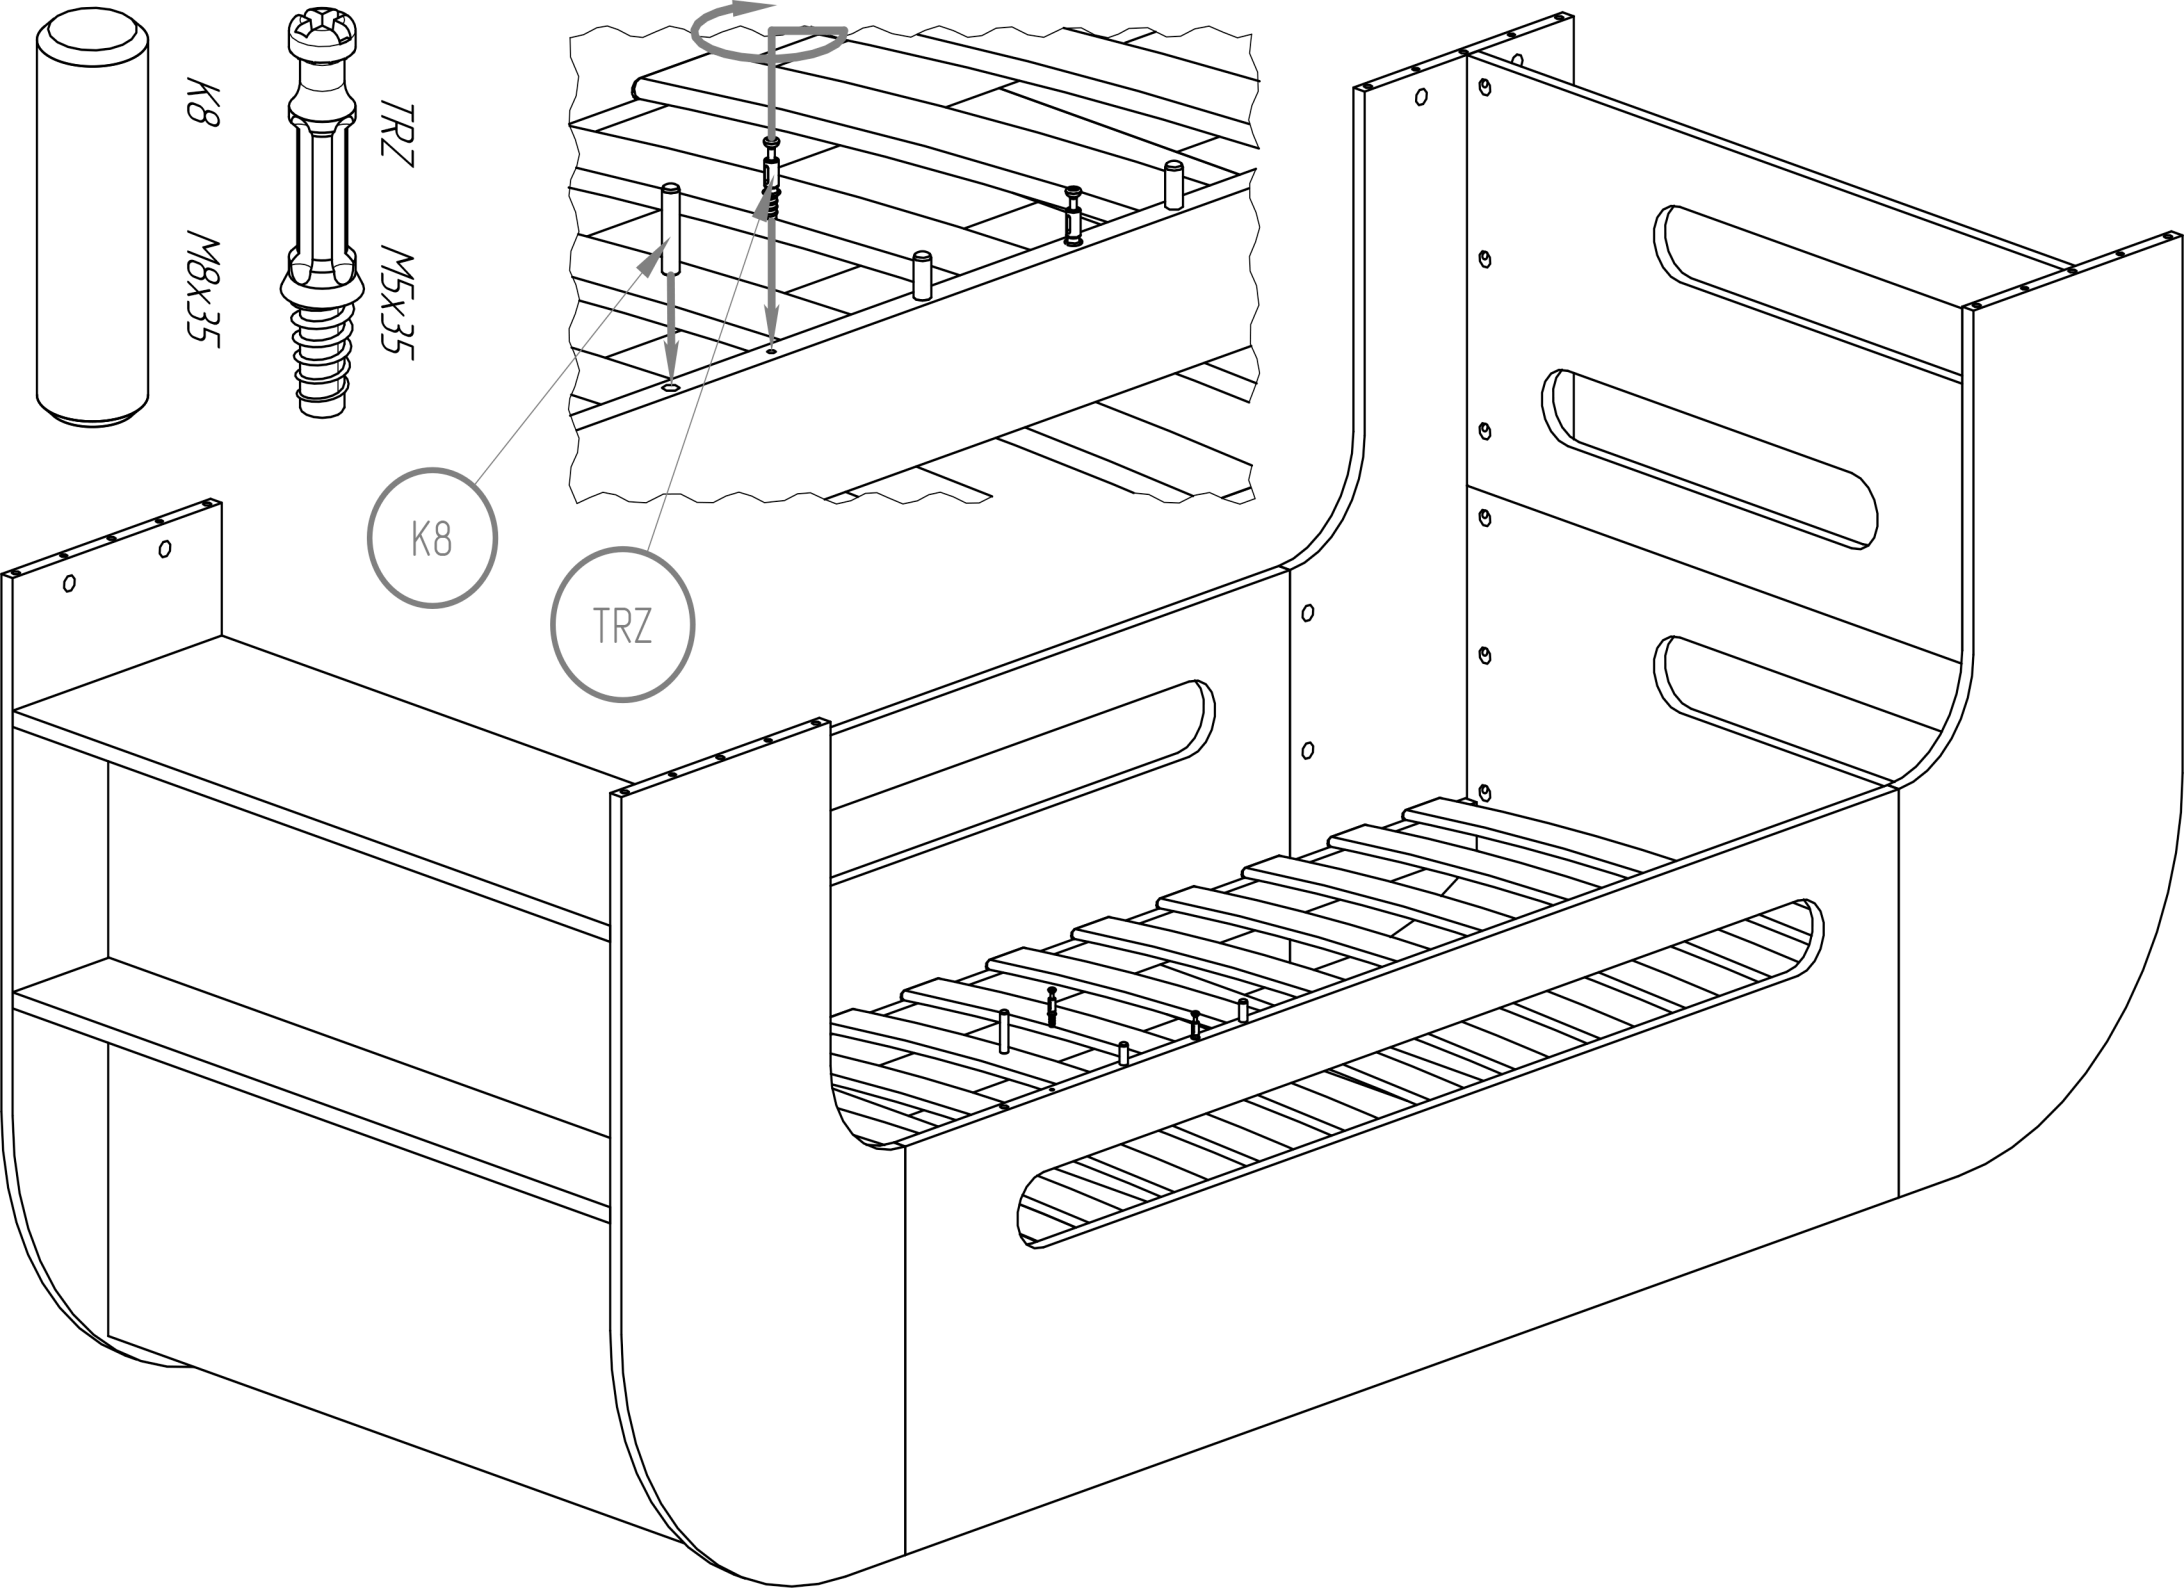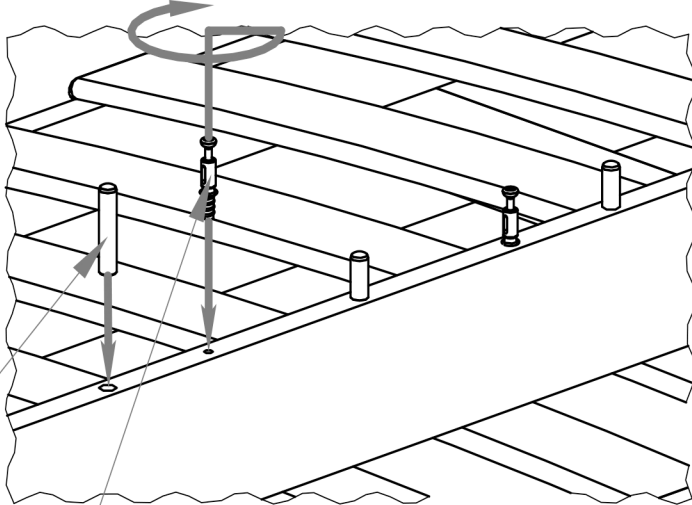

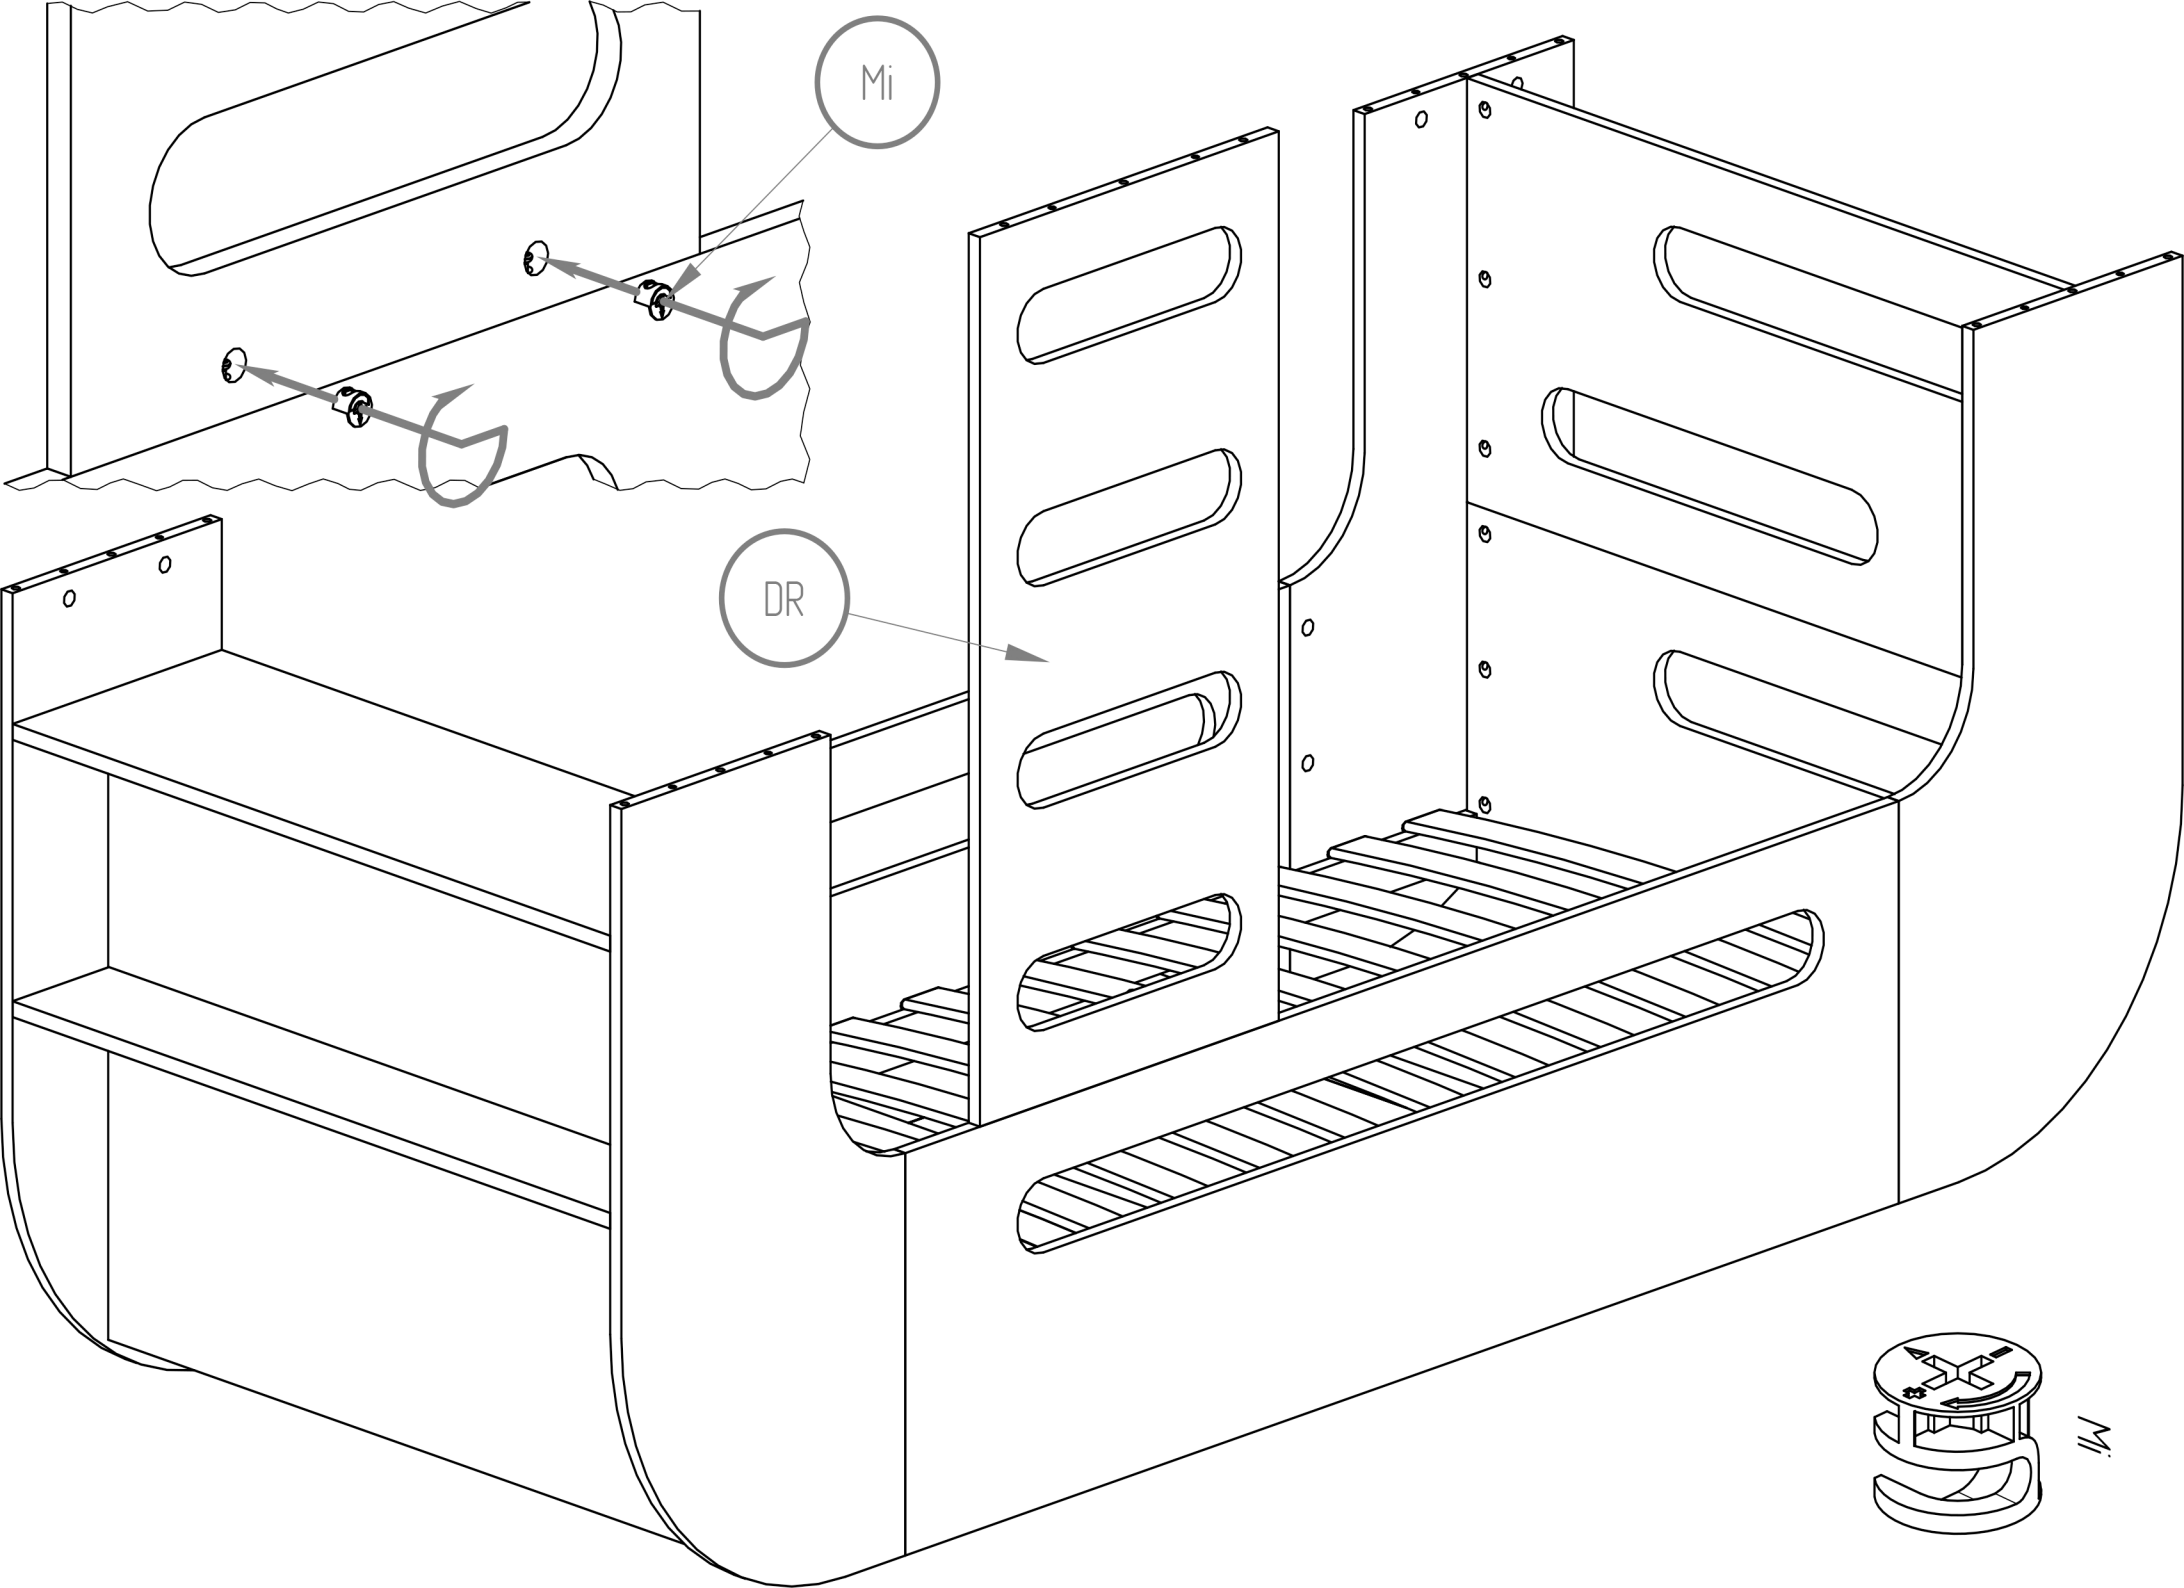


Mi

DR

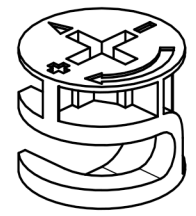

MI

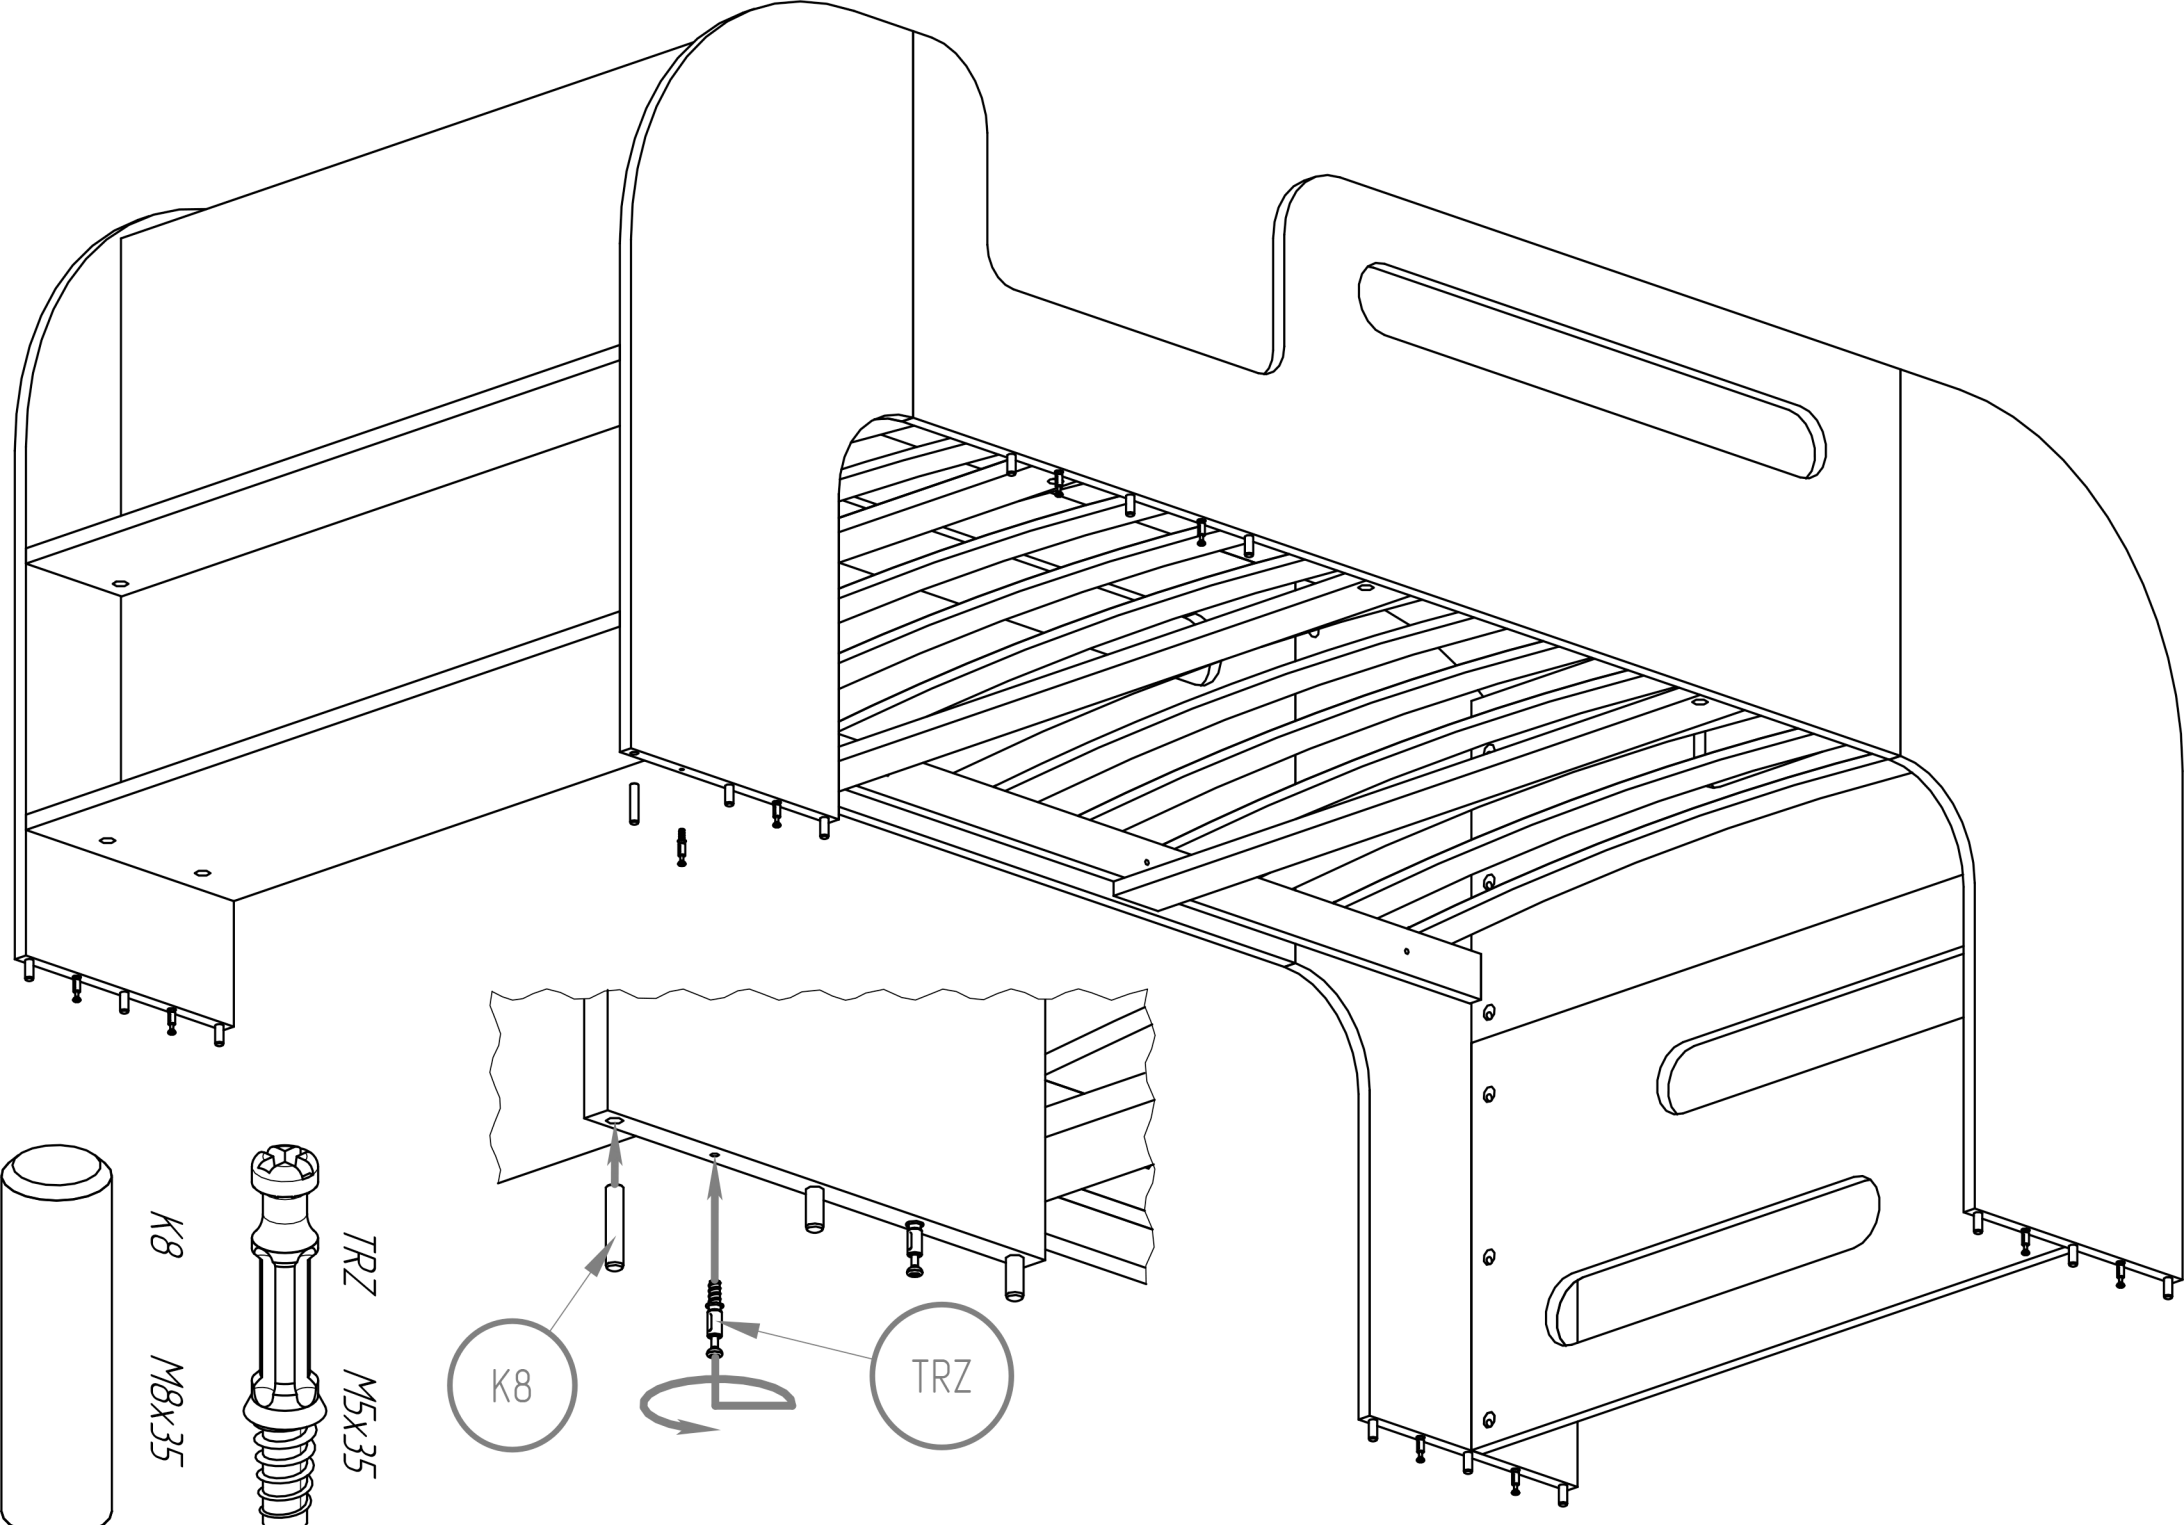

K8

M8x35

TRZ

M5x35

K8

TRZ



Mi



Mi



Mi

